

Fisher-Price® Trike Recall

Mattel, in cooperation with relevant safety regulators are voluntarily recalling a number of Fisher-Price® Trikes and Tough Trikes toddler tricycles. These trikes are intended for children 2 to 5 years of age. They include pretend keys that are located about 3 inches in front of the seat and protrude at least 5/8 inches above the trike’s body.

A child can strike, sit or fall on the protruding plastic ignition key resulting in serious injury

This recall does not include Lights and Sounds Trikes; Rock, Roll ‘n Ride Trike; Grow-With-Me Trikes; Action Sounds Trike; Push ‘n Pedal Trike. These Trikes do not have a key feature in front of the seat. Any Fisher-Price® Trike with a key located on the handle bars is not affected by this recall.

Use this online guide to determine if the product you own is affected by this recall. Please have your product near you as you continue.

MODELS INCLUDED IN THIS RECALL

The model numbers are located under the seat in the storage compartment.

Colors may vary.

72643 Boys Tough Trike		B8775 Kawasaki Tough Trike	
B8776 Barbie™ Tough Trike		K6672 Nick Jr. Dora the Explorer Tough Trike	
K6673 Go Diego Go!™ Tough Trike		M5727 Barbie™ Tough Trike Princess Ride-On	
N6021 Kawasaki Tough Trike		T6209 Thomas & Friends™ Tough Trike	

If you do not own one of the trikes shown in the images above, you are **not affected** by this recall you can continue to enjoy your trike.

If you own one of the trikes shown in the images above or you are not sure if you own one of the trikes shown in the images above, please locate the key on your Fisher-Price® Trike.



If the key on your trike is located anywhere other than about 3 inches in front of the seat and protrude at least 5/8 inches above the trike frame, you are **not affected** by this recall and you can continue to enjoy your trike.

If the key on your trike is located about 3 inches in front of the seat and protrude at least 5/8 inches above the trike frame, please look at the shape of the key.



If your trike's key is a flattened D-shaped key shown in the image you are **not affected** by this recall and you can continue to enjoy your trike.



If your trike's key is a Disc-shaped key shown in the image you **are affected** by this recall. **Please discontinue using the Trike(s) immediately.**



If your trike's key is a D-shaped key shown in the image you **are affected** by this recall. **Please discontinue using the Trike(s) immediately.**

For further direction, please contact Mattel at servicio.clientes@mattel.com.

Our greatest concern has always rested with the safety of the children who play with our toys, which is why we have responded promptly in an effort to maintain the trust of the families that have allowed us to be part of their lives.