

ALKALINE BATTERIES RECOMMENDED:

Toy may not function or operate with other types of batteries.

BATTERY SAFETY INFORMATION:

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the toy before being charged.
3. Rechargeable batteries are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old and new batteries.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Batteries are to be inserted with the correct polarity.
8. Exhausted batteries are to be removed from the toy.
9. The supply terminals are not to be short-circuited.
10. Dispose of batteries safely. Do not dispose of in a fire as the batteries may explode or leak.
11. Products with non-replaceable batteries are not to be disposed of in a fire as the batteries inside may explode or leak.

TWO-YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052 for replacement or refund at our option. This warranty does not cover damage resulting from unauthorized modification, accident, misuse, or abuse. In no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). Valid only in U.S.A. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Send only the product to the address above. Send all correspondence to Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, California 90245-5012, U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday-Friday, 8:00 a.m.-6:00 p.m. Eastern Time. See telephone directory for Mattel listing.



CONSUMER INFORMATION

YOU CAN TELL IT'S MATTEL! Call us toll-free or write with any comments or questions about our products or service. Monday-Friday, 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing. Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A.

1 (800) 524-TOYS

 CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.


We are dedicated to quality products.

FIREBALL™ RACEWAY INSTRUCTIONS

⚠ CAUTION:

Track set includes high-speed cars that collide. Cars may eject from track unexpectedly. Users must be alert to cars that exit the track set.

CONTENTS:

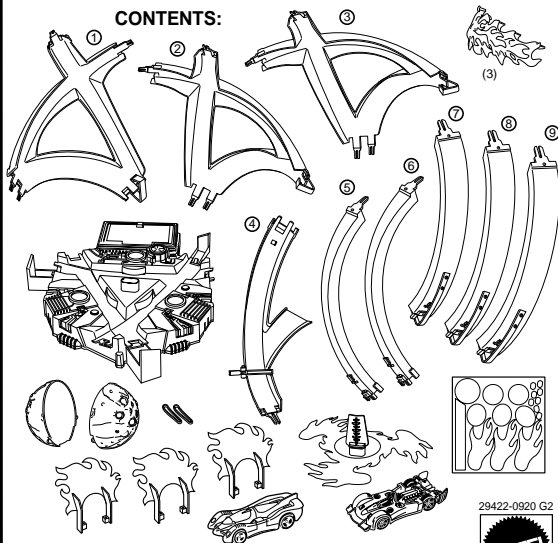

Adult Assembly Required.

8+


Requires Phillips screwdriver for assembly (not included).
Requires 4 "D" size alkaline batteries (not included).

Keep these instructions for future reference as they contain important information.

ASSEMBLY

Numbers shown are for part reference.
Refer to contents page.


NOTE: For proper toy function, please assemble track "tabs" in the correct position as shown below:

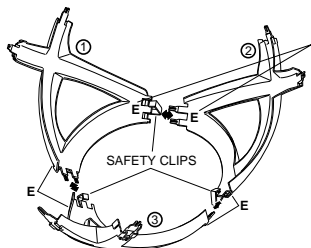







Match up letters on track pieces. Letters are located on back side, near connections.


1. Assemble three criss-cross tracks first.
Push safety clips out of the way when connecting tracks.

NOTE: Be sure track pieces are fully connected so there are no gaps showing.

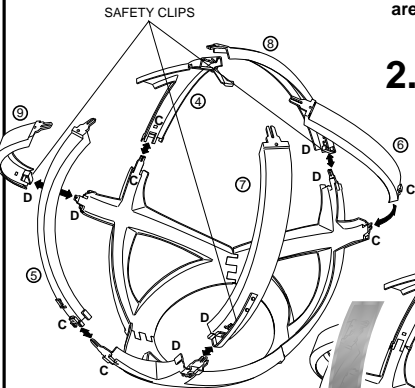


3. After assembling spherical portion of track, turn over right side up.

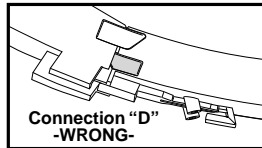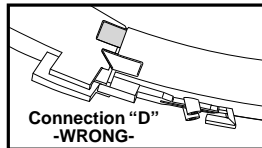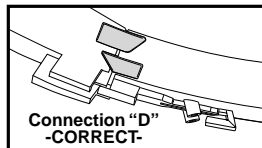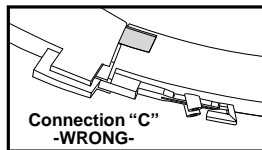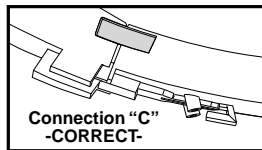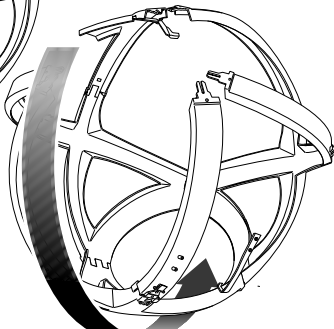


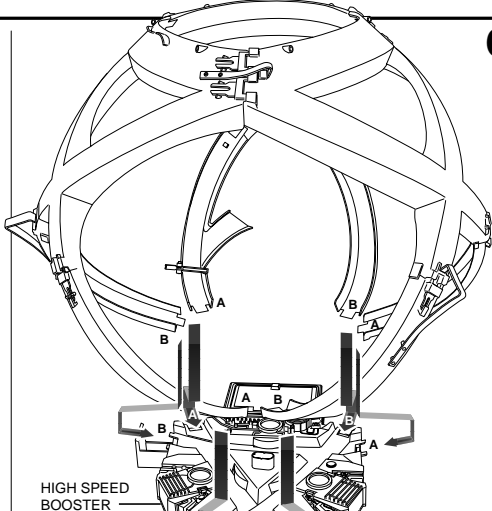

HIGH SPEED
BOOSTER

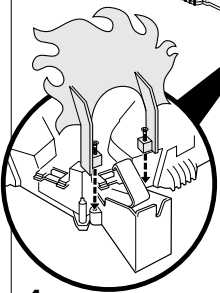


4a. Use phillips screwdriver (not included) to screw three deflectors onto base at all "B" locations.

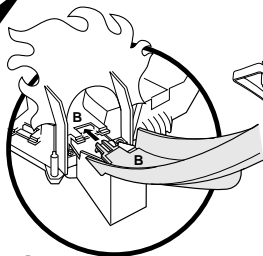


4b. Assemble track onto base as shown, matching letters located near connections to letters on base.


5. Snap on flames in three places as shown.

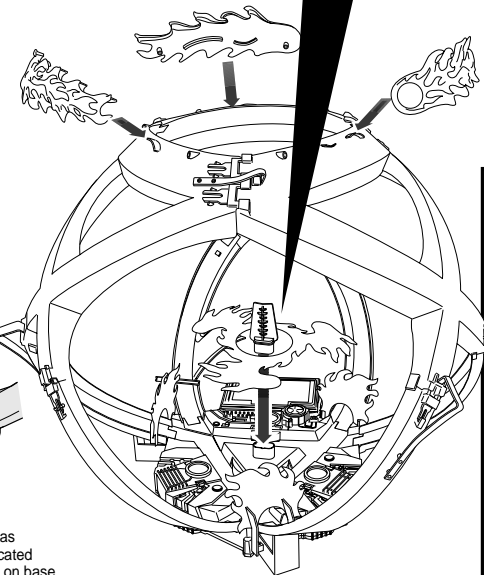

6. Snap center flame to center of booster. Push down **FIRMLY** until it snaps, so that center stays locked in place.

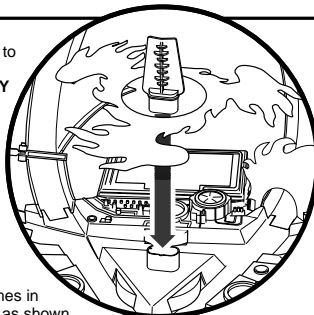


TO LOAD METEOR:

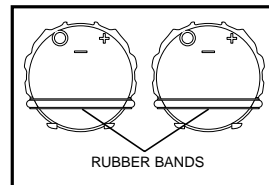

Attach rubber bands onto both halves of meteor as shown.

Assemble both halves together and push all the way down onto center stand as shown.


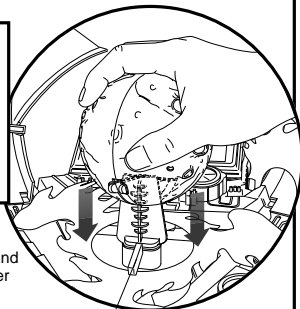


Be sure meteor locks around flame connector.

INSTALL BATTERIES

To open, pry up on tab at edge of battery door and pull upward. Insert four fresh "D" size batteries (not included). Close cover.




For best performance use only alkaline batteries. Do not use rechargeable batteries.

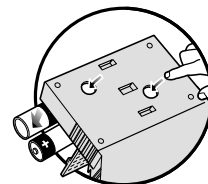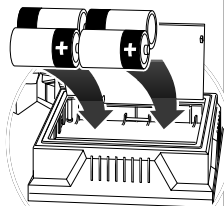

Push fingers through holes on bottom to remove batteries.

Replace batteries when booster can no longer propel the Hot Wheels® car through the track set.

APPLY LABELS

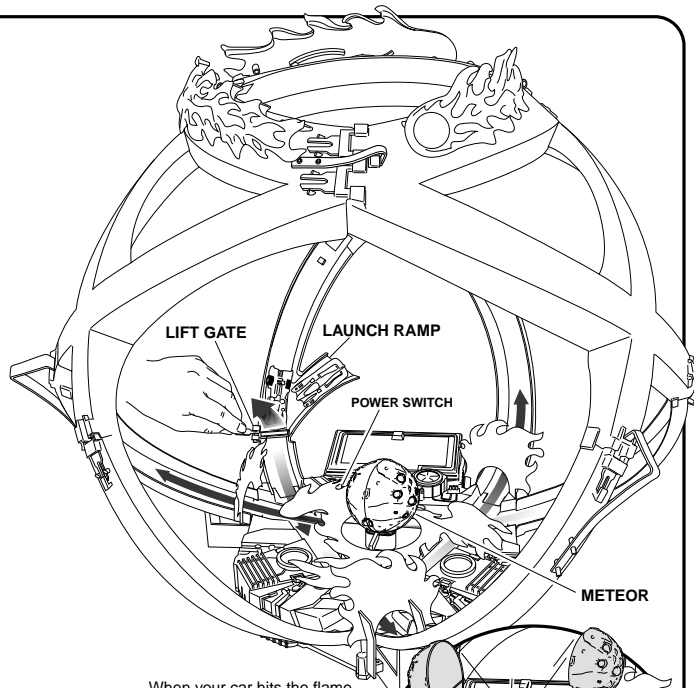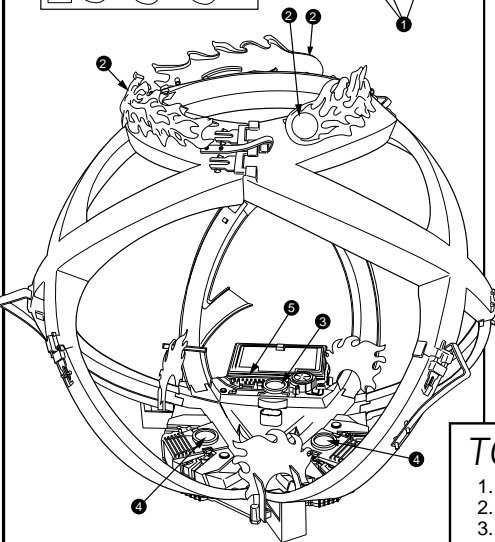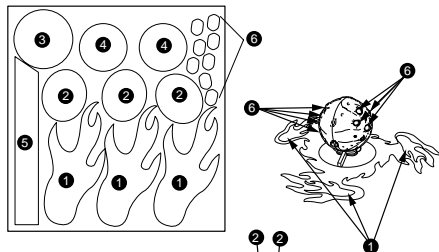

When your car hits the flame,
the meteor will "explode"!

TO PLAY:

1. Turn on power switch.
2. Load meteor.
3. Load car onto launch ramp.
4. Push down on lift gate to release car.
5. Add more cars to cause crashes and watch the meteor "explode"!
6. Reset meteor to play again.

