

Fisher-Price®

Model Number: 74067



Please keep this instruction sheet for future reference,
as it contains important information.

Requires four "AA" (LR6) **alkaline** batteries for operation (not included).

Adult assembly is required.


Tool required for battery installation:
Phillips screwdriver (not included).

www.fisher-price.com

● L E A R N I N G ▲ P A T T E R N S ™

Motion & Music Jungle Gym


Parts

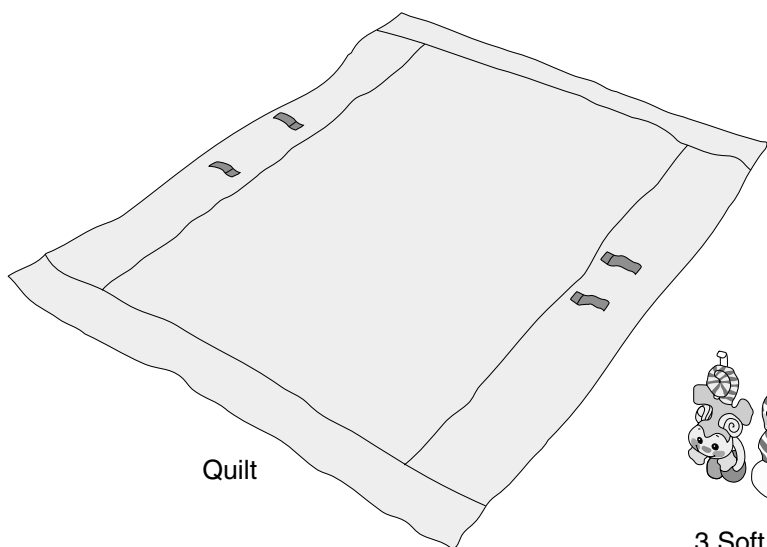


Quilt



3 Soft Animals

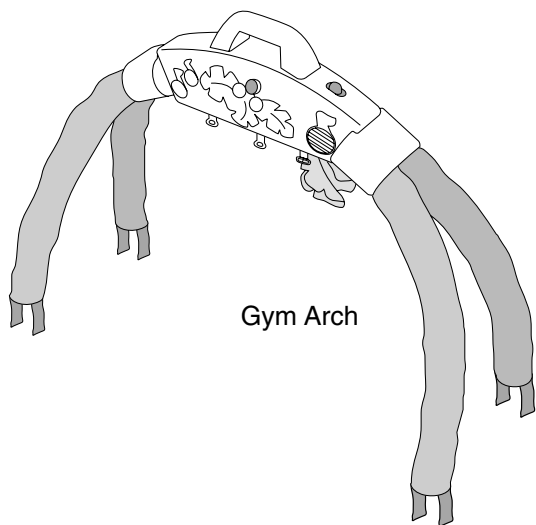


Gym Arch

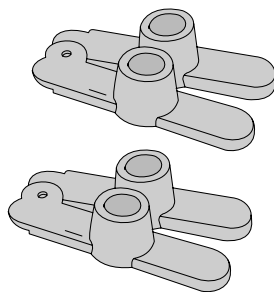


2 Supports

Battery Installation

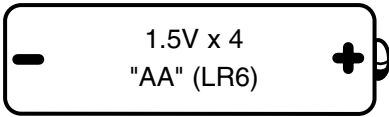

Shown Actual Size

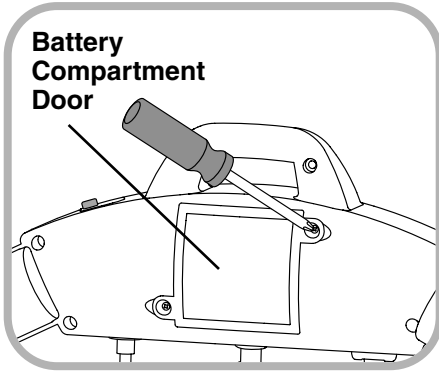

- Locate the battery compartment door on the gym arch.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert four "AA" (LR6) **alkaline** batteries, as indicated inside the battery compartment.

Hint: We recommend using **alkaline** batteries for longer life.

- Close the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.
- When sounds or motions from this toy become faint or stop, it's time for an adult to change the batteries!


Battery Safety Information

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy (product) before charging.
- If removeable, rechargeable batteries are used, they are only to be charged under adult supervision.


Assembly

1

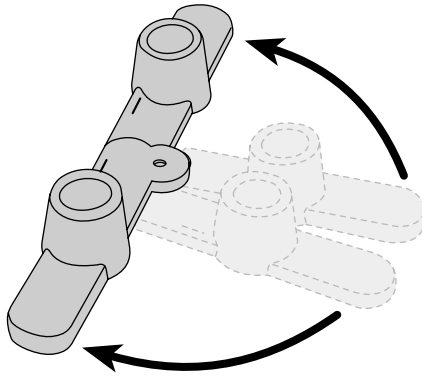

- Grasp each end of a support. Pull the ends apart to open the support.
- Repeat this procedure to open the other support.


2

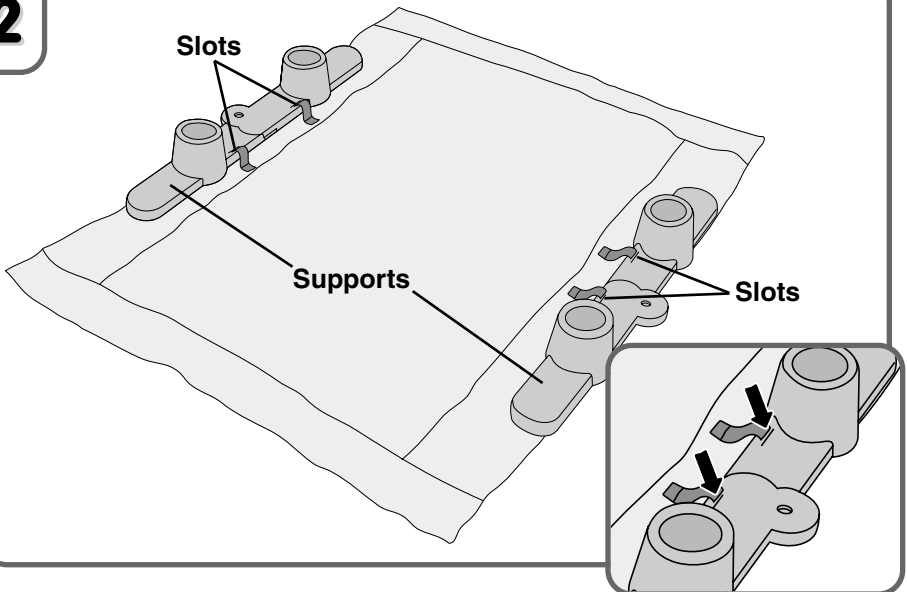

- Place the quilt with the print side up on a flat surface.
- Position the supports on either side of the quilt with slots toward the center of the quilt.
- Fit the two straps on each side of the quilt through the slots in each support. Make sure the tab at the end of each strap forms a “T” under the support.
- Pull up on the quilt to be sure it is secure to the supports.


Assembly

3

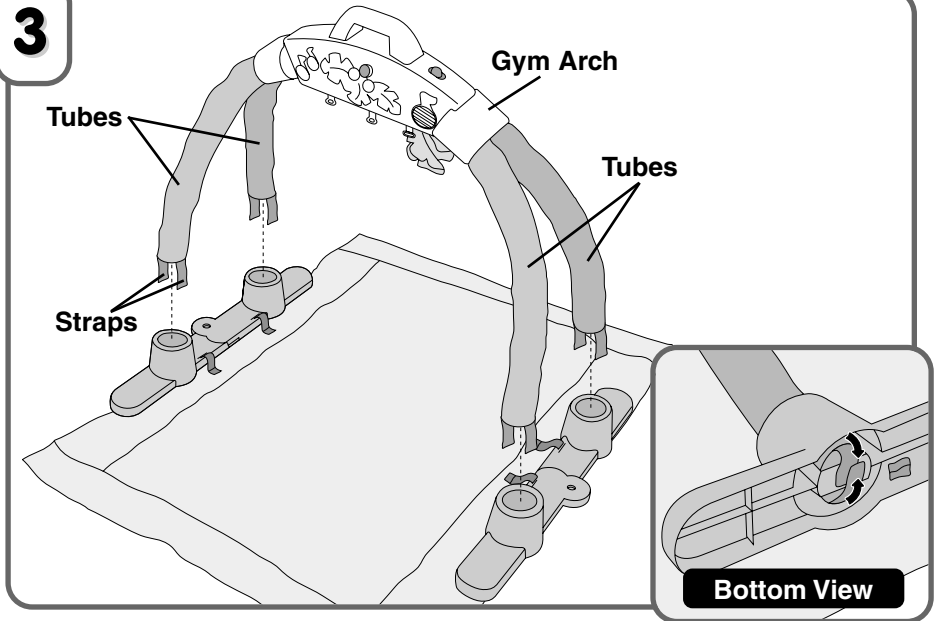


- Position the gym arch over the quilt as shown.
- Fit the two small fasteners straps on the end of each tube through the slots inside the circular openings in the supports.
- Fasten the two ends of the straps together to secure the tubes to the supports.

4

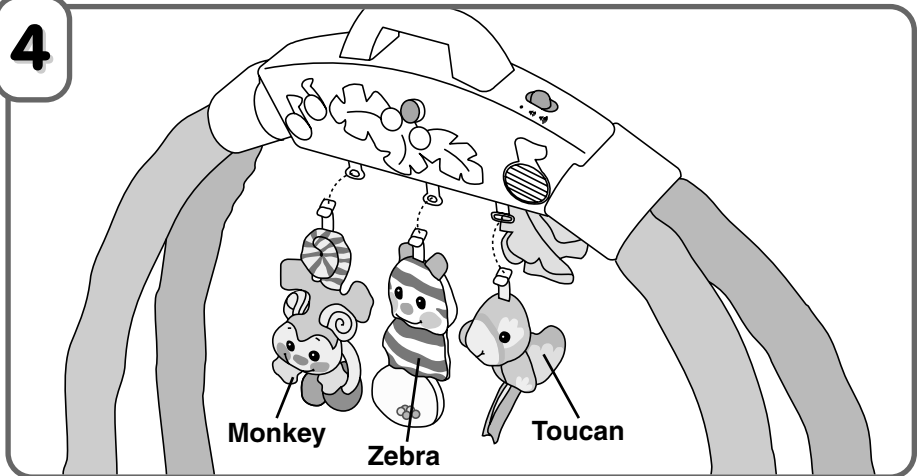




- Attach the three soft animals to the hangers on the gym arch as shown by fitting the strap through the slot in each hanger. Make sure the tab at the end of each strap forms a “T” on the back of the hanger.

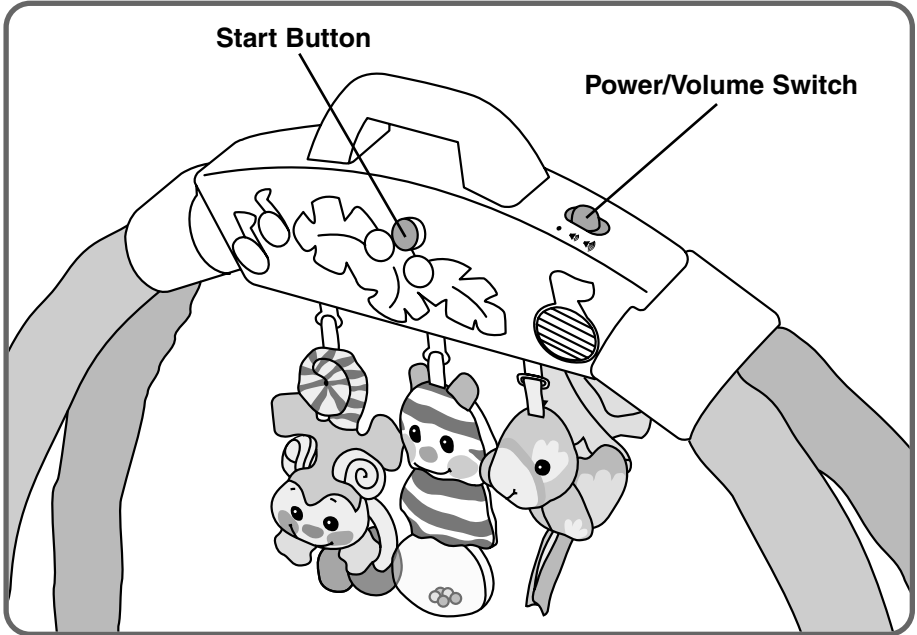Fun Music and Motion



Power/Volume Switch


- Locate the power/volume switch on the gym arch. The switch has three positions: off ; on with low volume  and on with high volume .

Start Button

- Locate the start button on the gym arch. Press the start button for extended music, motion and sound effects.
- Music will play continuously for about two minutes while motions will go on and off.
- To restart, press the start button again.
- Baby can bat the soft animal toys for short playing music, motion and sound effects.

Note: If baby holds the moving toys, you may hear a clicking sound. This is normal and will not damage the toy.


Hint: If your child is not actively playing with this toy, it turns off automatically (sleep mode).

- Slide the power/volume switch to the off position  when not in use.

As Baby Grows

When your child is older, remove the gym arch and attach the animals to the buttonholes on the quilt for floor play.

Pack it Up

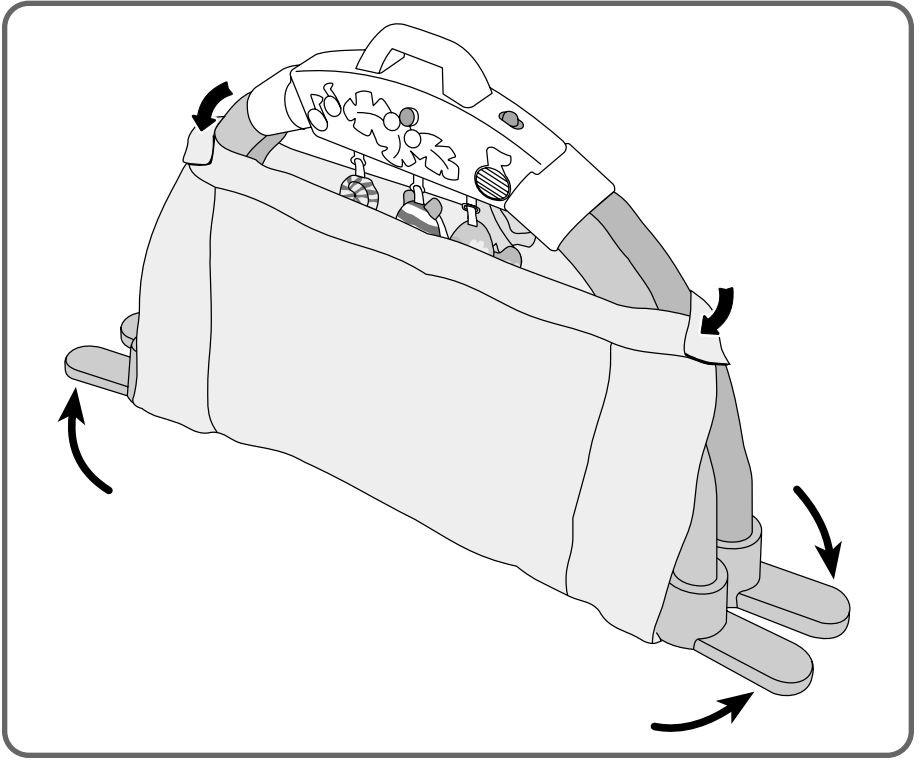

- Grasp each end of a support and fold them in and together as shown.
- Bring the corners of the quilt together and attach the fasteners as shown.

Care

Soft Animals

- Push the tabs on the animals back through the slots in the hangers to remove.
- Place the toys in a pillowcase and wash them in cold water on a gentle cycle. Do not use bleach. Tumble dry the toys on low heat.

Quilt

- Remove the gym arch and supports.
- Wash the quilt in cold water on a gentle cycle. Do not use bleach. Tumble dry the quilt on low heat.

Gym Arch and Tubes

- Wipe the surface with a clean cloth dampened with a mild soap and water solution.
- Do not immerse the gym arch or tubes.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at
1-800-432-5437, 8 AM - 6 PM EST Monday through Friday.
Hearing-impaired consumers using TTY/TDD equipment, please
call 1-800-382-7470. Or, write to: Fisher-Price® Consumer
Relations, 636 Girard Avenue, East Aurora, New York 14052.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

For countries outside the United States:

CANADA

Questions? 1-800-567-7724, Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
Consumer Advisory Service 1300 135 312.

NEW ZEALAND

16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.
© 2003 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.