



# SWING 'N MEALS™

Model Number: 79739

## INSTRUCTIONS

It's a swing. It's a two-position high chair.  
Use it as a traditional swing to soothe and entertain baby with head-to-toe swinging motion and then convert it to a high chair!



Swing



High Chair

Read all instructions BEFORE assembly and USE of product. **KEEP INSTRUCTIONS FOR FUTURE USE.**

Adult assembly is required.

Tool needed for assembly: Phillips Screwdriver (not included).

Requires three "D" (LR20) alkaline batteries for operation (not included).


[www.fisher-price.com](http://www.fisher-price.com)

## WARNINGS

### WARNING

- Never leave child unattended.
- To prevent falls when using the swing, never use with an active child who may be able to climb out of the seat.
- Always keep child in view while in product.
- Prevent serious injury or death from falls or sliding out. Always use the restraint system. Never rely on the tray to restrain child.
- The child should be secured in the product at all times by the restraining system. The tray is not designed to hold the child in the chair. It is recommended that the product be used as a high chair only by children capable of sitting upright unassisted.

## PARTS

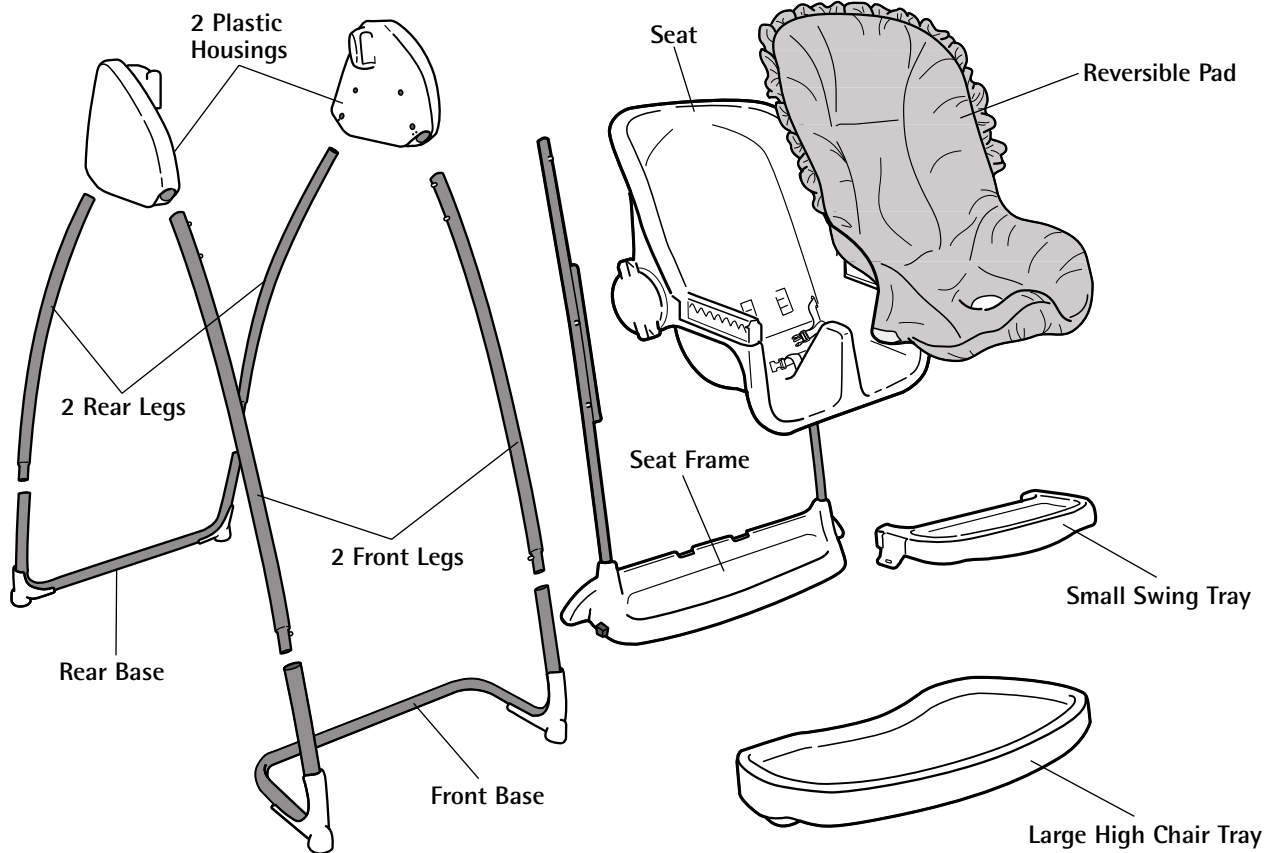

### CAUTION

This package contains small parts.  
Adult assembly is required.




#8 x 1/4" Screw – 2


SHOWN ACTUAL SIZE

# ASSEMBLY

**IMPORTANT!** Before each use or assembly, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. **DO NOT** use if any parts are missing or broken. Contact Fisher-Price® for replacement parts and instructions if needed. Never substitute parts.

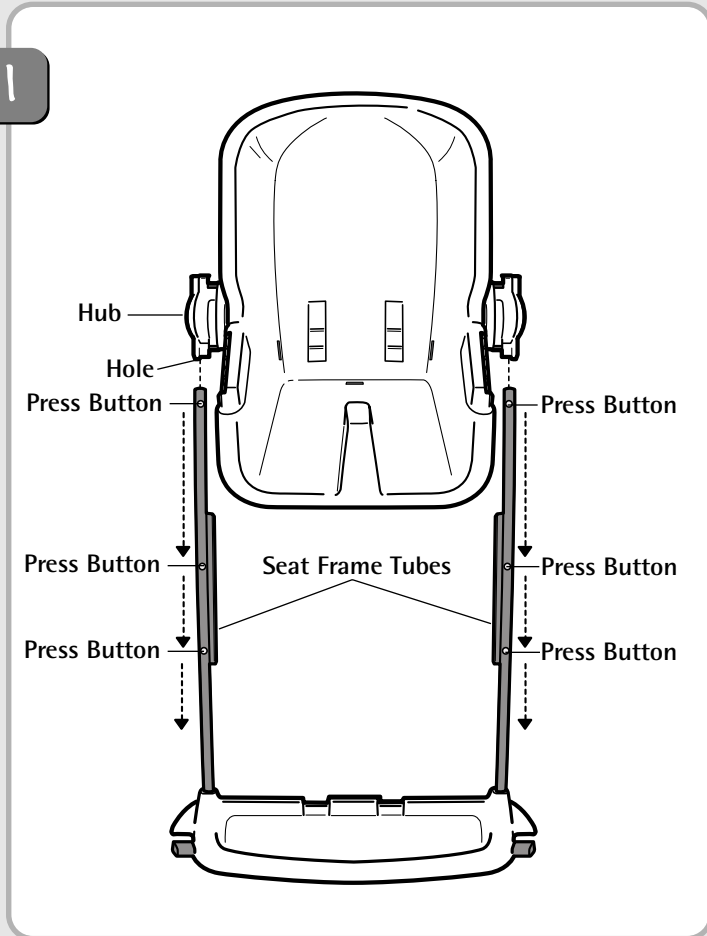


- Position the seat frame on a flat surface.
- Fit the hole in the seat hubs onto the seat frame tubes.
- Press the upper buttons on the seat frame tubes and slide the seat down.
- Press the middle buttons on the seat frame tubes and slide the seat down.
- Press the lower buttons on the seat frame tubes and slide the seat down.

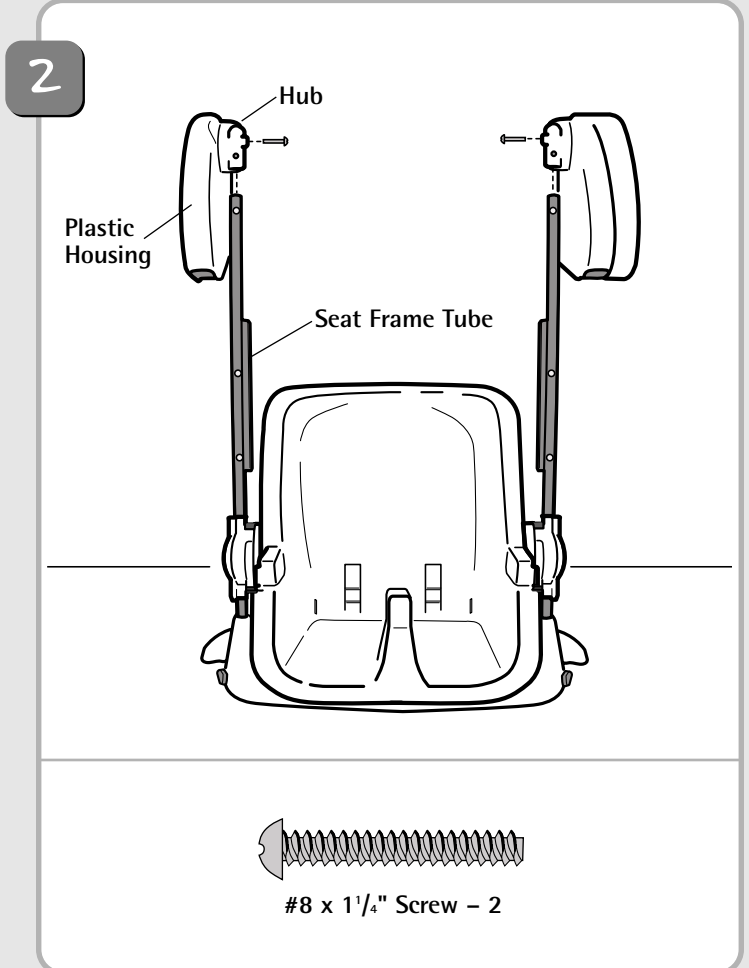

- Position a plastic housing so that the hub is toward the seat.
- Fit the seat frame tube into the hub on the plastic housing.
- Insert a screw into the hub and through the seat frame tube.
- Tighten the screw with a Phillips screwdriver. Do not over-tighten.
- Repeat this procedure to assemble the other plastic housing to the other seat frame tube.
- Remove the temporary instructional labels (one on each hub) that reminded you to fasten the screws. Dispose of the labels properly.


# ASSEMBLY

3

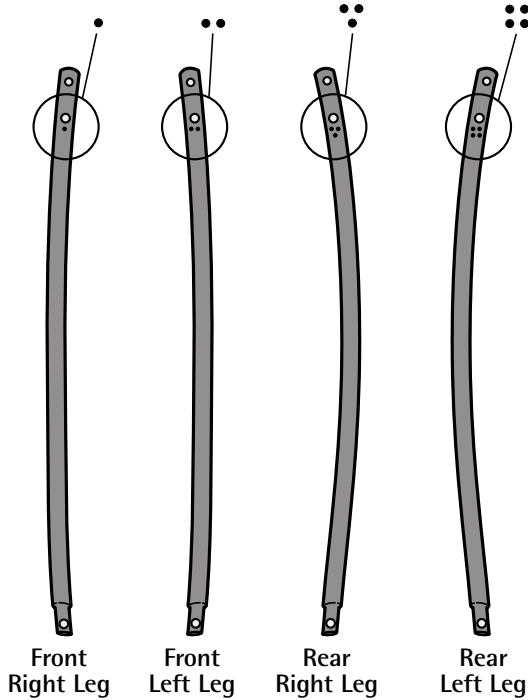


- Identify the front legs and the rear legs. Each is marked:
  - Front right leg
  - Front left leg
  - Rear right leg
  - Rear left leg

4

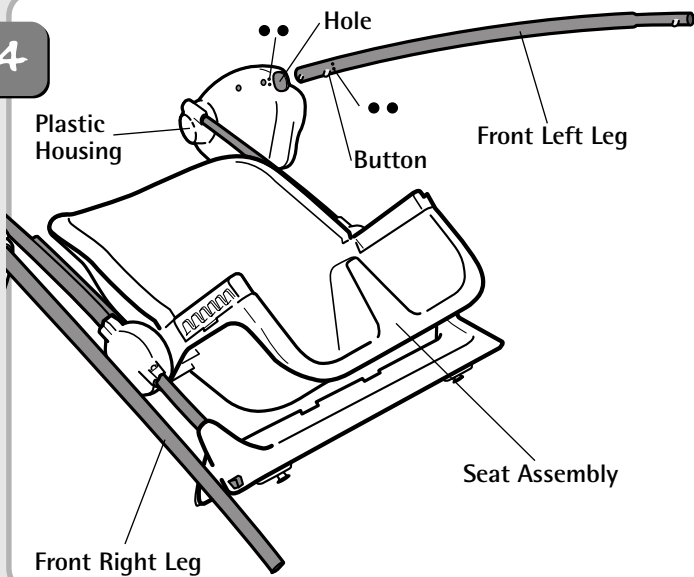


- Position the seat assembly so that the front of the seat is upright.
- Locate the hole in the plastic housing marked ••.
- Insert the front left leg marked •• into the hole in the plastic housing marked ••.
- Press the button on the front left leg and continue to insert the front left leg into the hole in the plastic housing until it "snaps" into place. **Make sure you hear a "snap"**.
- Pull the front left leg. It should remain secure. If you can remove the front leg, you have assembled it incorrectly. Please remove it and repeat step 4.
- Repeat this procedure to attach the front right leg marked • into the hole in the other plastic housing marked •.

5

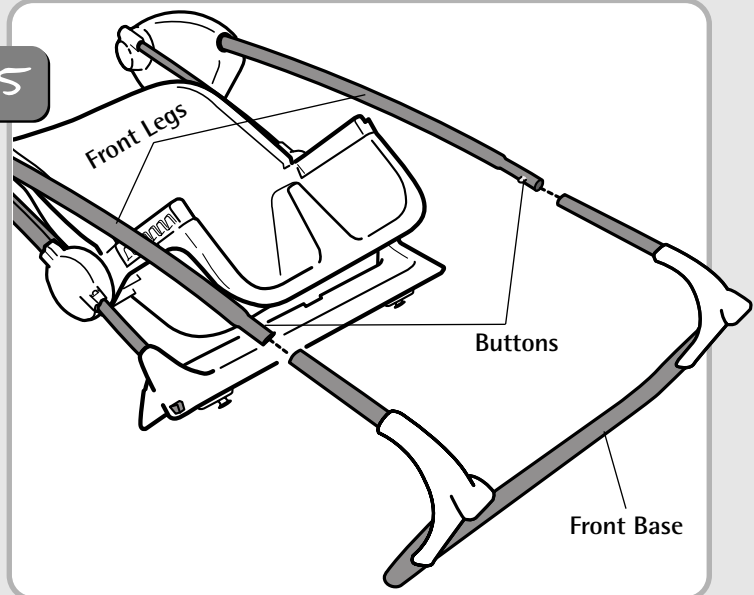

- Position the front base so that the curved end faces down.
- Fit the front base tubes over the front legs.
- Press the buttons on the front legs. Continue to fit the front base tubes onto the front legs until they "snap" into place. **Make sure you hear each tube "snap"**.
- Pull the front base. It should remain secure. If you can remove the front base, you have assembled it upside-down. Remove the front base, turn it over and repeat step 5.


6

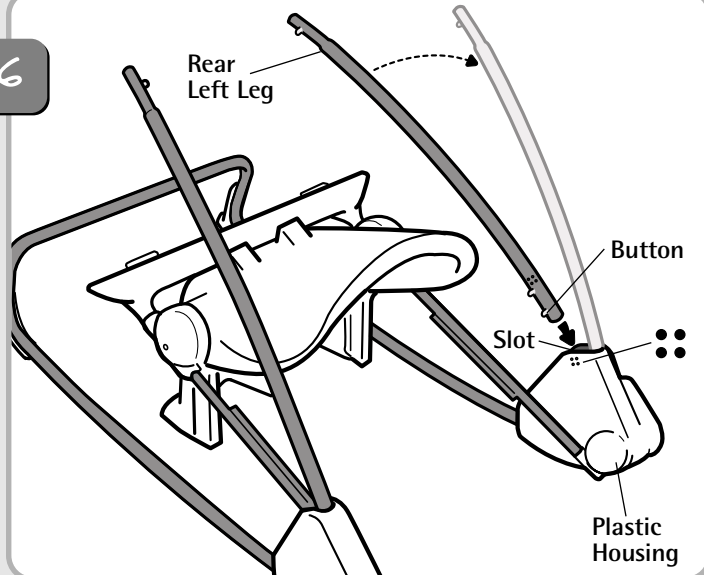

- Turn the assembly over so that the back of the seat is upright.
- Locate the slot in the plastic housing marked •••.
- Insert the rear left leg marked ••• into the slot in the plastic housing marked •••.
- Press the button on the rear left leg and continue to insert the rear left leg into the slot. Lift the rear left leg up until it "snaps" into place. **Make sure you hear a "snap"**.
- Pull the rear left leg. It should remain secure. If you can remove the rear leg, you have assembled it incorrectly. Please remove it and repeat step 6.
- Repeat this procedure to attach the rear right leg marked ••• into the slot in the other plastic housing marked •••.


# ASSEMBLY

7

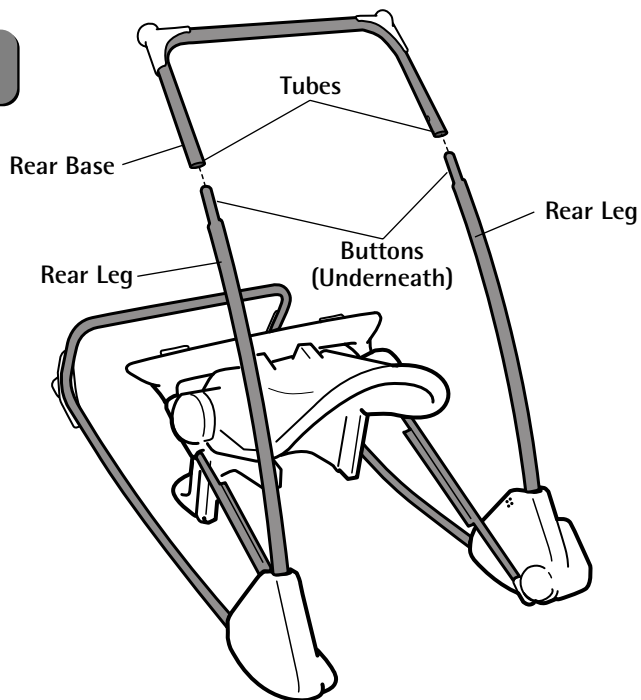


- Position the rear base with the holes in the tubes downward.
- Fit the rear base tubes over the rear legs.
- Press the buttons on the rear legs. Continue to fit the rear base tubes onto the rear legs until they “snap” into place. **Make sure you hear each tube “snap”.**
- Pull the rear base. It should remain secure. If you can remove the rear base, you have assembled it upside-down. Remove the rear base, turn it over and repeat step 7.

8

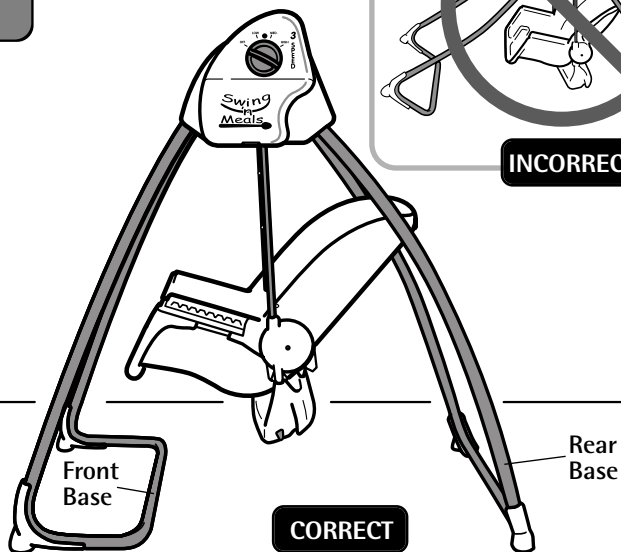


- Turn the assembly upright.
- Make sure the front and rear base are **flat** on the floor.
- If either or both the front and rear base is not flat on the floor, you have assembled the front and rear legs and bases incorrectly. Please remove these parts and repeat steps 1-7.

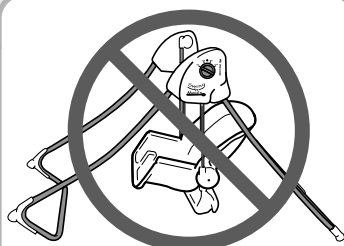


**INCORRECT**

9

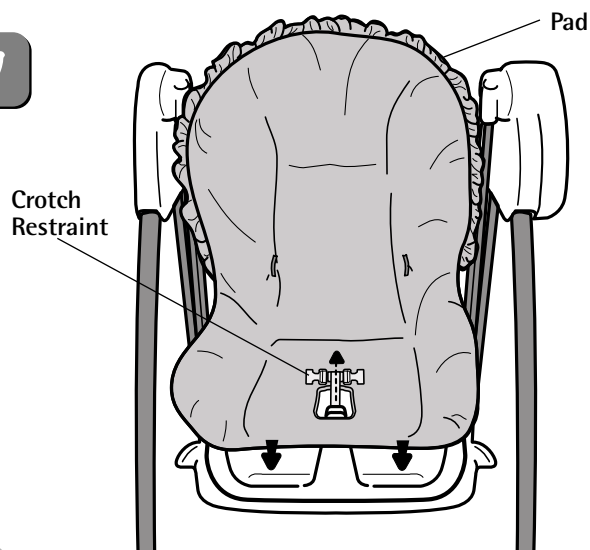

- Decide which side of the reversible pad you will use. One side of the pad has a soft, cotton material with ruffle (for swing use); the other side is a wipeable vinyl (for high chair use).
- Fit the pocket on the back of the reversible pad onto the seat back.
- Insert the crotch restraint through the large rectangular opening in the pad.

10

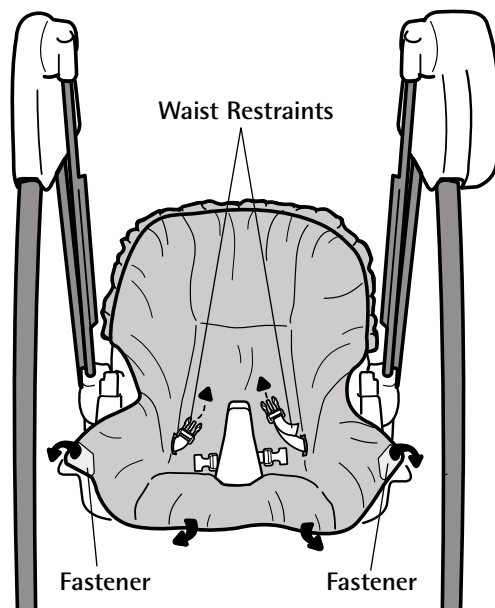


- Fit the waist restraints through the smaller slots in the reversible pad.
- Fasten the fasteners on the sides of the reversible pad to the back of the seat.
- Fit the bottom edge of the reversible pad around the bottom edge of the seat.

Assembly is now complete.

**IMPORTANT!** Before first-time use, please read and understand how to install batteries, setup, use, store and care for Swing 'n Meals™.

## BATTERY INSTALLATION

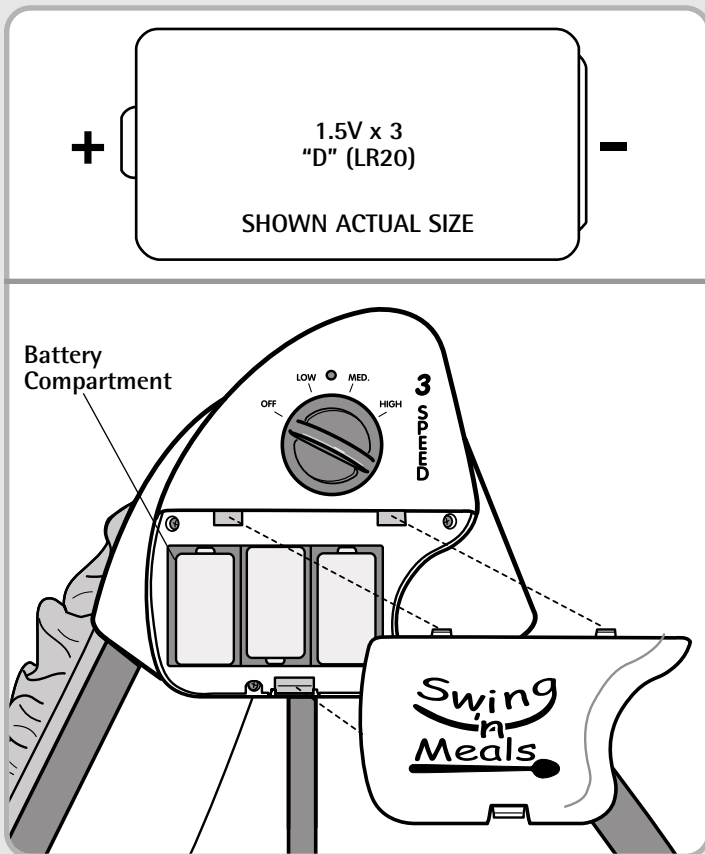

- Locate the battery compartment on the plastic housing.
- Using a coin, press the tab on the battery compartment door and remove it.
- Insert three, new size "D" (LR20) alkaline batteries as shown in the battery compartment. We recommend using alkaline batteries for longer battery life.
- Replace the battery compartment door.

**Hint:** When swinging motion becomes noticeably slower, remove the batteries and replace them with three, new "D" (LR20) alkaline batteries. Dispose of exhausted batteries properly.

### Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage this product.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the Battery Installation instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

## SWING AND HIGH CHAIR USE

**IMPORTANT!** Before each use or assembly, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. Do not use if any parts are missing or broken. Contact Fisher-Price® for replacement parts and instructions if needed. Never substitute parts.




# HIGH CHAIR SETUP AND USE

## WARNING


- Never leave child unattended.
- To prevent falls when using the swing, never use with an active child who may be able to climb out of the seat.
- Always keep child in view while in product.
- The child should be secured in the product at all times by the restraining system. The tray is not designed to hold the child in the chair. It is recommended that the product be used as a high chair only by children capable of sitting upright unassisted.

### Converting from Swing to High Chair

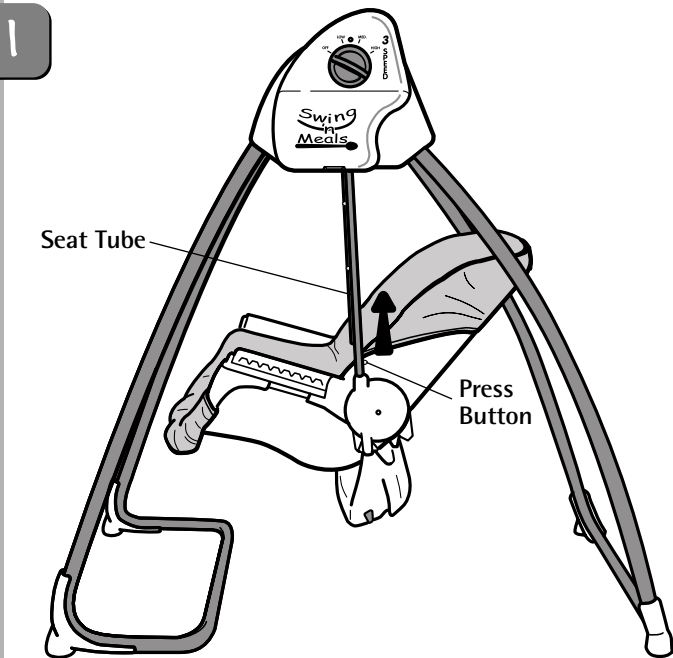


- Lift the seat and then press the buttons on the back side of the seat tubes to release the seat.
- Lift the seat again.

2

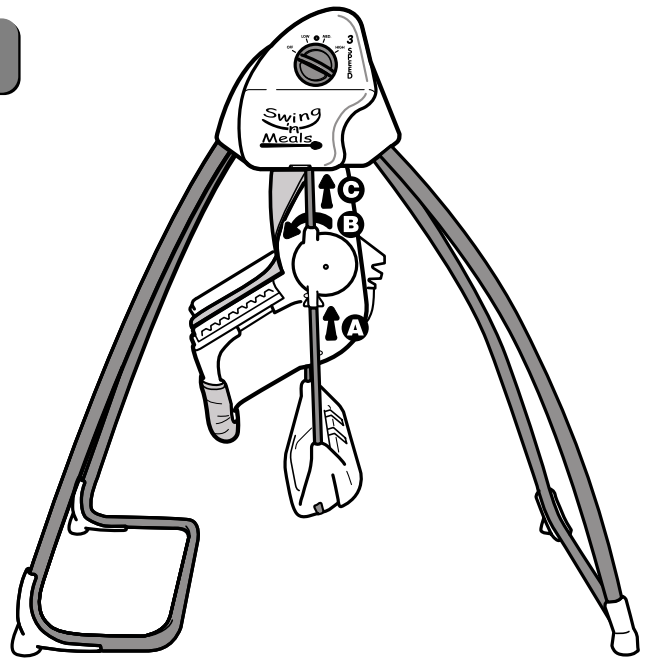

- Continue to lift the seat **A** until it rotates forward **B**. The notches in the hubs will align with the plastic ridge on the seat frame tubes.
- Continue to lift **C** the seat until it "snaps" into place. The seat is now in the **lower** high chair position.


3

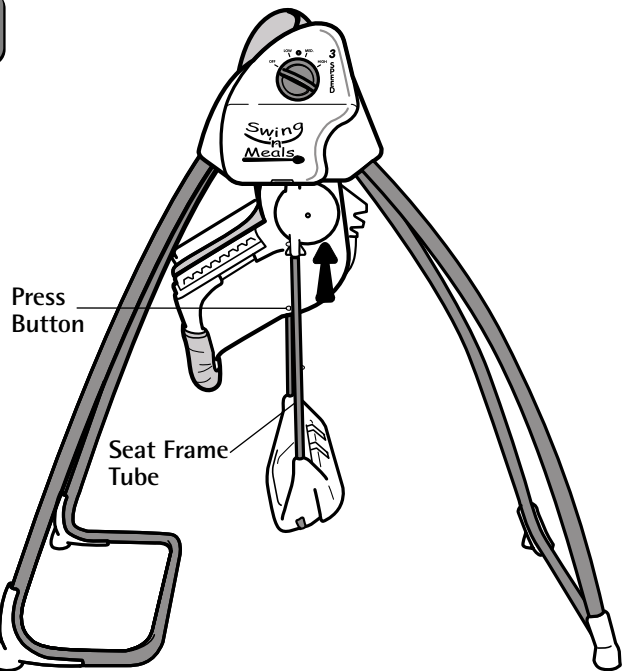

- For the **upper** high chair position, simply press the buttons on the front side of the seat frame tubes and lift the seat until it "snaps" into place.

# HIGH CHAIR SETUP AND USE

4

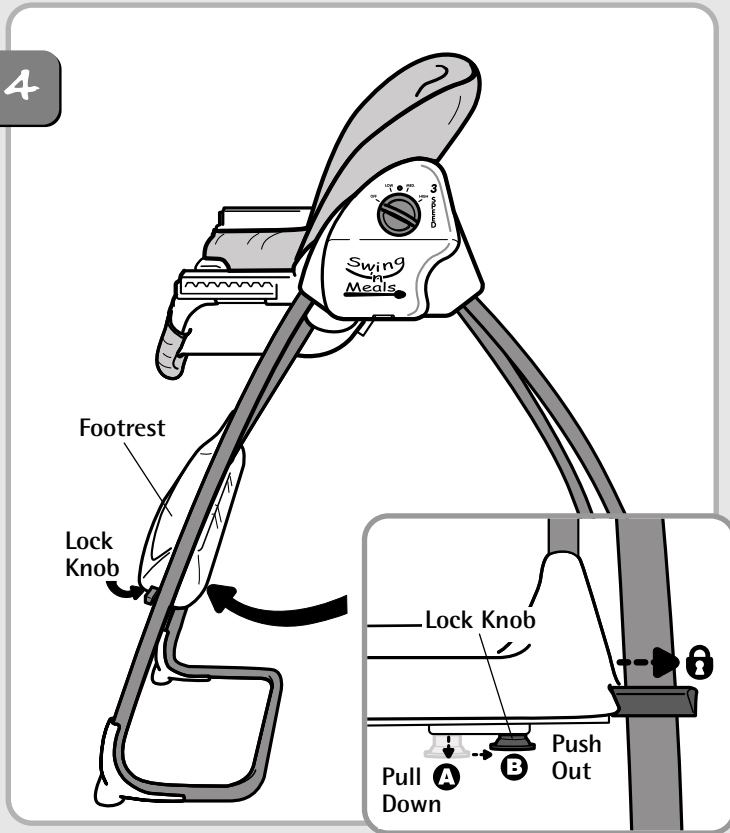

- Pull the footrest forward.
- Locate the lock knobs on each end of the footrest.
- Pull the lock knobs down **A** and then slide them out **B**. The lock symbol **L** should be visible on both lock tabs. The footrest locks for high chair use.
- Check to be sure the seat is secure for high chair use:
  - Push the seat bottom down with your hand. The seat should not move.
  - Push the footrest back. The footrest should not move.

Swing 'n Meals™ is now ready for high chair use.


## Restraint Use



## WARNING



The child should be secured in the product at all times by the restraining system. The tray is not designed to hold the child in the chair. It is recommended that the product be used as a high chair only by children capable of sitting upright unassisted.

5

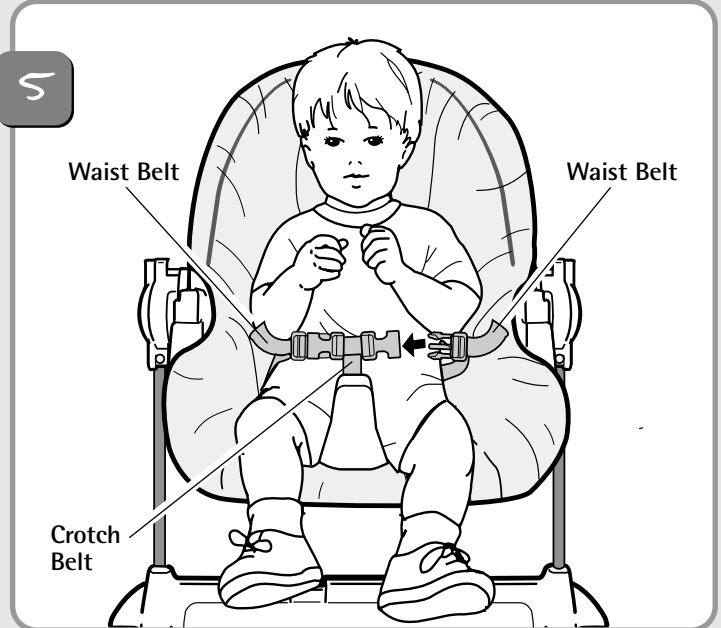

**Hint:** Choose which side of the reversible pad you would like to use. Refer to assembly steps 9 and 10 (on page 5) to attach the pad.

- Place your child in the seat.
- Pull the crotch belt up between your child's legs and fasten both waist belts to the crotch belt. **Make sure you hear a "snap" on both sides.**

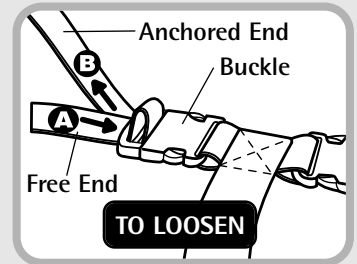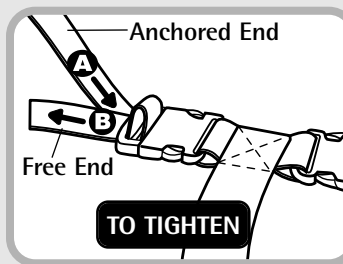

### To tighten the waist belts:

- Feed the anchored end of the waist belt up through the buckle to form a loop **A**.
- Pull the free end of the waist belt **B**.
- Repeat this procedure to tighten the other waist belt.

### To loosen the waist belts:

- Feed the free end of the waist belt up through the buckle to form a loop **A**.
- Enlarge the loop by pulling on the end of the loop toward the buckle.
- Pull the anchored end of the waist belt to shorten the free end of the waist belt **B**.
- Repeat this procedure to loosen the other waist belt.




# HIGH CHAIR SETUP AND USE


## High Chair Tray Use

6


Large High Chair Tray

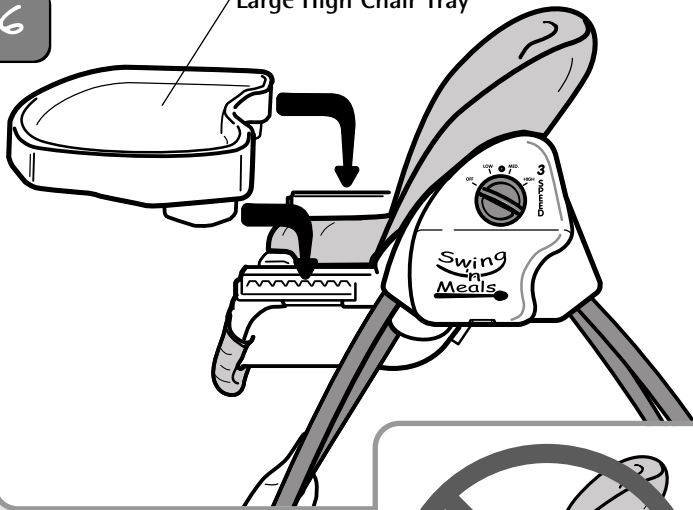

- Fit the large high chair tray onto the seat armrests.
- **DO NOT** use the small swing tray when using this product as a high chair.

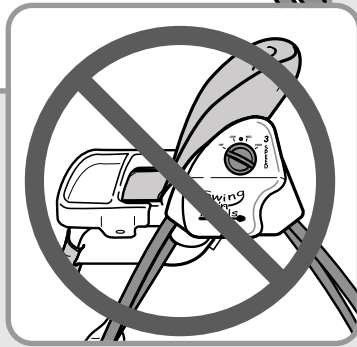

7

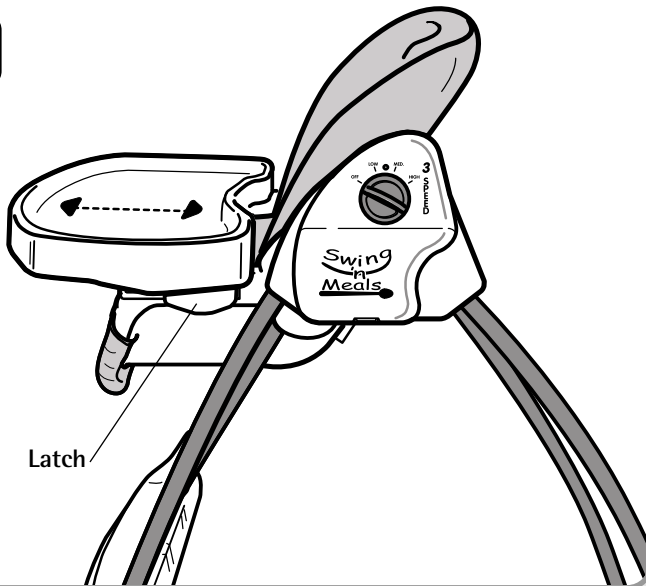

- The tray is adjustable to several positions.
- Press the latches on the underside of the tray and move the tray forward or backward. Release the latches to lock the tray in place.

## Booster Seat

8




Hint: Remove the tray for use as a booster seat at a table.

# SWING SETUP AND USE

## WARNING


- Never leave child unattended.
- To prevent falls when using the swing, never use with an active child who may be able to climb out of the seat.
- Always keep child in view while in product.
- Prevent serious injury or death from falls or sliding out. Always use the restraint system. Never rely on the tray to restrain child.

### Converting From High Chair to Swing

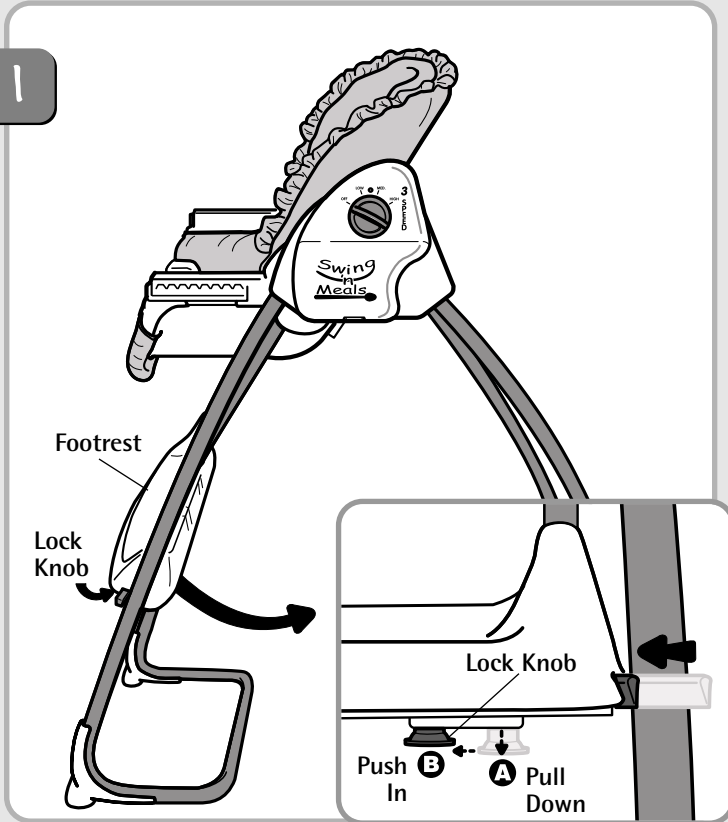


- Locate the lock knobs on each end of the footrest.
- Pull the lock knobs down **A** and then slide them in **B**. The footrest unlocks for swing use.

2

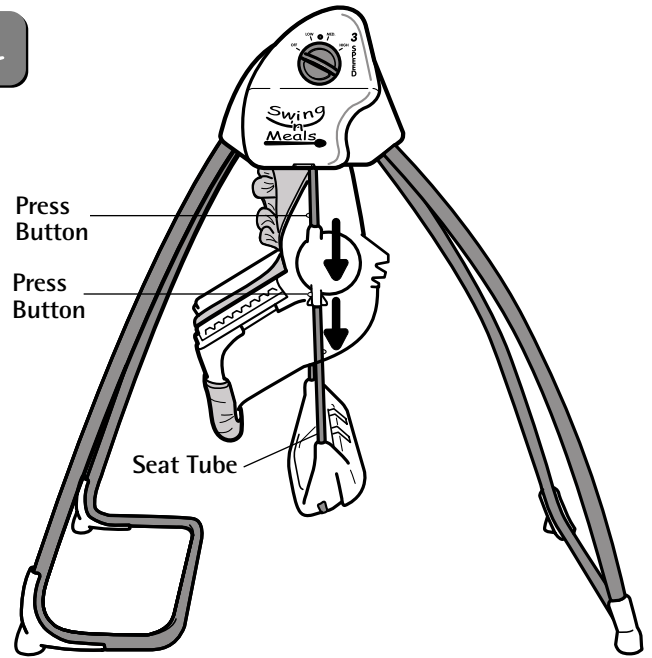

- Press the buttons on the front side of the seat tubes and pull the seat down to completely lower the seat.

3

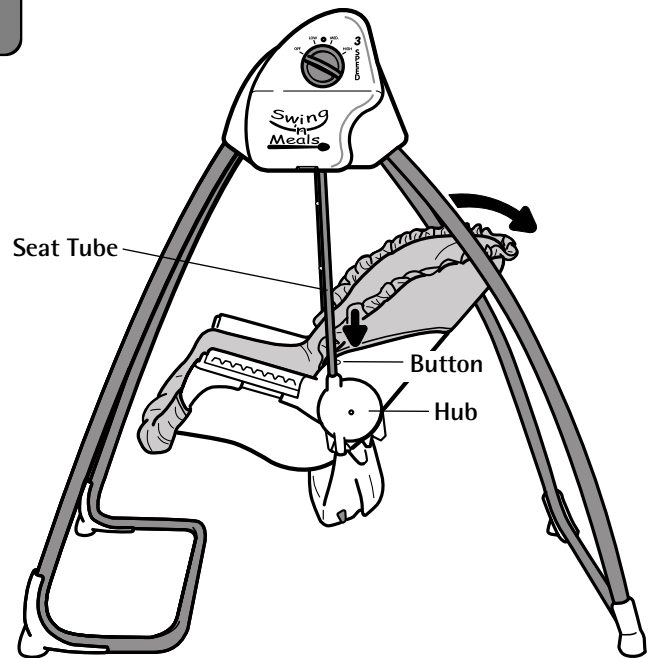

- Tilt the seat back and pull the seat down so that the seat hubs pass over the buttons on the back side of the seat tubes. **You should hear a "snap"**.
  - Check to be sure the seat is secure for swing use. Push the seat bottom down with your hand. The seat should not move down.
- Swing 'n Meals™ is now ready for swing use.

# SWING SETUP AND USE

## Restraint Use



## WARNING


To prevent serious injury or death from falls or sliding out, always use the restraint system. Never rely on the tray to restrain child.

4

Waist Belt



Waist Belt

Crotch Belt

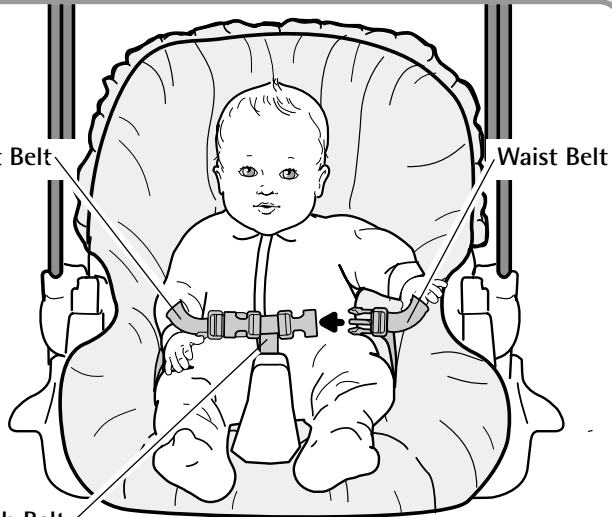

**Hint:** Choose which side of the reversible pad you would like to use. Refer to assembly steps 9 and 10 (on page 5) to attach the pad.

- Place your child in the seat.
- Pull the crotch belt up between your child's legs and fasten both waist belts to the crotch belt. **Make sure you hear a "snap" on both sides.**

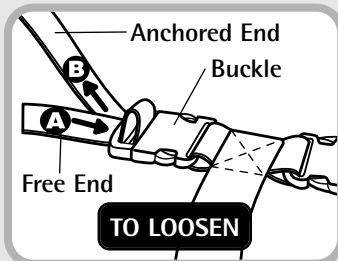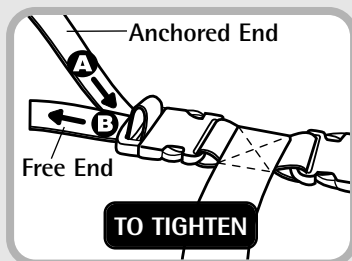

### To tighten the waist belts:

- Feed the anchored end of the waist belt up through the buckle to form a loop **A**.
- Pull the free end of the waist belt **B**.
- Repeat this procedure to tighten the other waist belt.


### To loosen the waist belts:

- Feed the free end of the waist belt up through the buckle to form a loop **A**.
- Enlarge the loop by pulling on the end of the loop toward the buckle.
- Pull the anchored end of the waist belt to shorten the free end of the waist belt **B**.
- Repeat this procedure to loosen the other waist belt.


## Swing Tray Use

5

Small Swing Tray

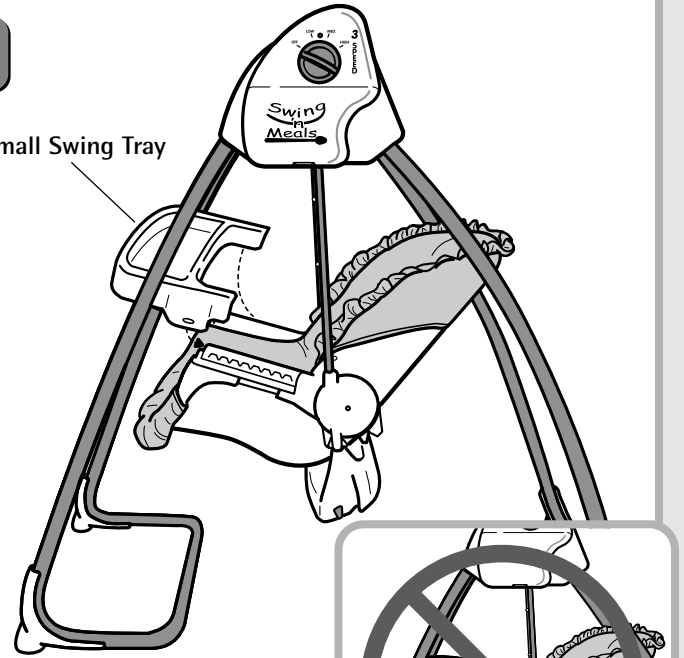

- Fit the small swing tray onto the seat armrests.
- **DO NOT** use the large high chair tray when using this product as a swing.

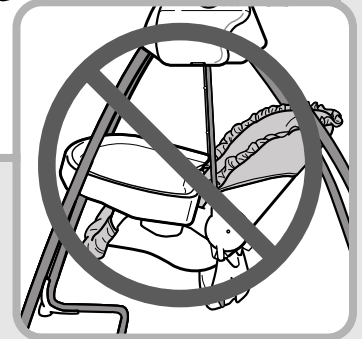


## Swing Use

6

Power Indicator

Power Dial

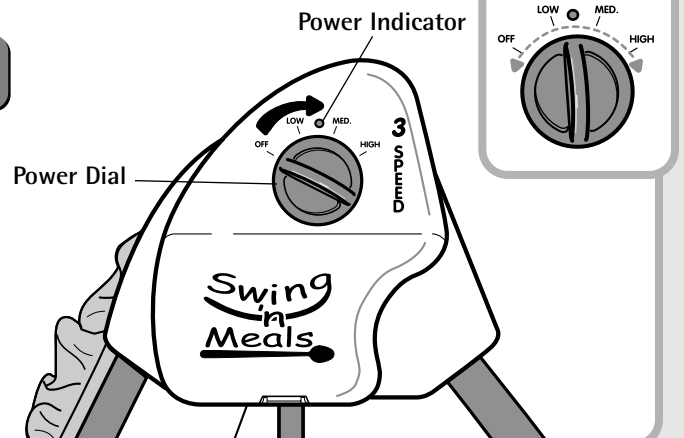

### To start:

- Turn the power dial to the medium setting. The power indicator will light.
- Give the seat a light push to start the swinging motion. Adjust the power dial to the desired swing motion setting: low, medium or high.


### Hints:

- As with most battery-powered swings, a heavier child will reduce the amount of swinging motion on all settings. In most cases, the low setting works best for a smaller child while the high setting works best for a larger child.
- If the low setting provides too much swinging motion for your child, try placing one end of a blanket underneath your child and let the other end of the blanket drape down while swinging.

# SWING SETUP AND USE

## Seat Positions

7

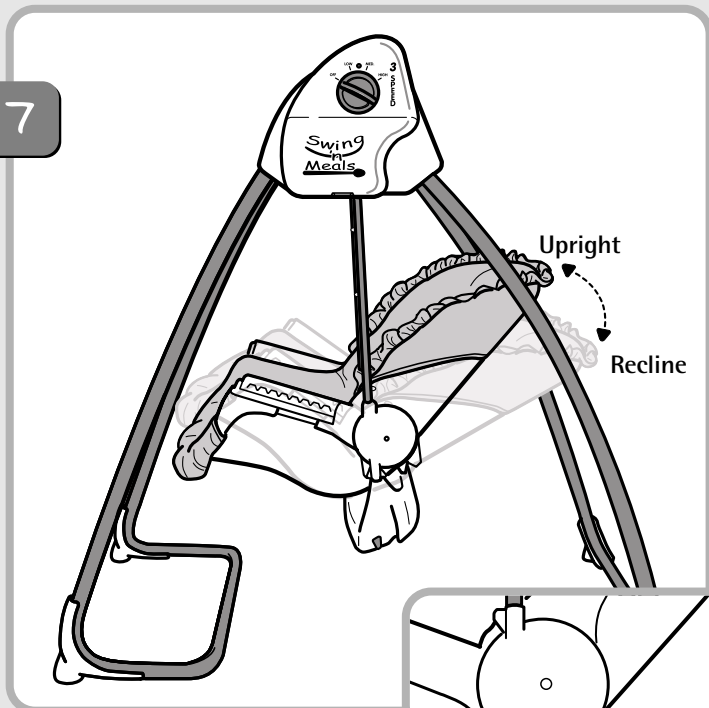


- The seat can be adjusted to an upright or recline position.

### Upright


- Lift the seat up slightly and rotate the seat forward, so that the seat tabs rest in the footrest notches.

### Recline

- Lift the seat up slightly and rotate the seat back, so that the seat tabs rest in the footrest notches.
- Again, check to be sure the seat is secure for swing use:
  - Push down on the seat bottom with your hand. The seat should not move down.

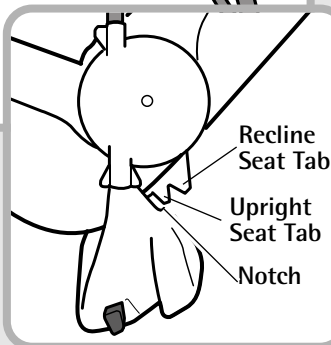

# STORAGE

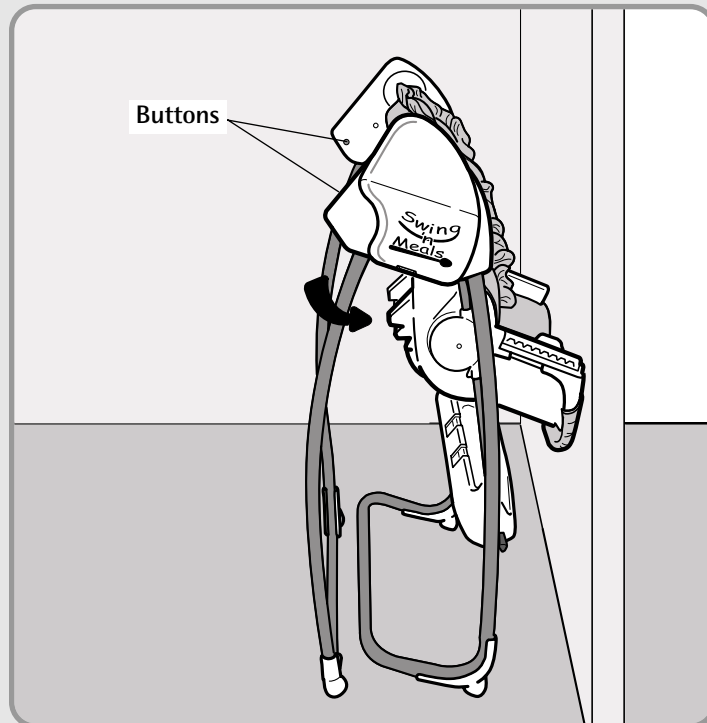

- Press the buttons on the back of the plastic housing and rotate the back legs in. Stand the frame against a wall for storage.

# CONSUMER INFORMATION

Occasionally a consumer may experience a problem with one of our products. If this should happen please call us, toll-free, rather than return this product to the store. Usually we can solve the problem on the telephone or by sending you replacement parts. Please call Fisher-Price® Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 5 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

# CARE

- Remove the trays from the seat.
- Unbuckle the restraint system.
- Unfasten the fasteners on the seat pad from the sides of the seat.
- Remove the pad from the seat.
- Machine wash the pad separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly.
- The frame and trays may be wiped clean using a mild cleaning solution and a damp cloth.
- Replace the pad on the seat (see assembly steps 9 - 10, page 5.)
- Periodically check the product for loose fasteners or broken parts and tighten as needed.

# ONE (1) YEAR LIMITED WARRANTY

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants Swing 'n Meals™ is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Affairs at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

**SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.**

**THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.**

If you have any questions about this product: In Canada, call 1-800-567-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

In Great Britain, telephone 01628 500303.

In Australia, call the Fisher-Price Australian Consumer Advisory Service toll-free at 1-800-800-812, or write to: Mattel Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond Victoria, 3121 Australia.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2000 Mattel, Inc. All Rights Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.

79739pr-0920

Printed in China