


Fisher-Price®

INTERACTV

DVD BASED LEARNING SYSTEM

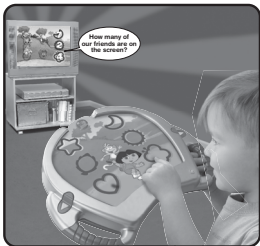

Manufacturer's Code Booklet

MANUFACTURER	MODEL	CODE
# 3DLabs	ALL MODELS	0463
A Acoustic Solutions	ALL MODELS	1113
Advent	ALL MODELS	1053
AEG	ALL MODELS	1069, 1134, 1114
Alfreay	ALL MODELS	1130
Aim	ALL MODELS	1029
Alwa	A/D67	0921
Alwa	XDAX1	1022
Alwa	XDDV370	0465
Alwa	XDDW1	0465
Alwa	ALL MODELS	0465, 0456, 1022, 1063, 1064, 0921
Akai	DVPS760	0884
Akai	ALL MODELS	1152, 0884, 0878, 1139, 1051, 1124, 1114
Akira	ALL MODELS	1129, 1029
Alba	ALL MODELS	0456, 1129, 0460, 1132, 1124, 1045, 1044
Albatros	ALL MODELS	1111, 1110, 1067
Alco	ALL MODELS	0878*
Allegro	ABV341	1136
Allegro	ALL MODELS	1081, 0475*, 1136
Alpine	ALL MODELS	1098
Amitech	ALL MODELS	1069, 1134, 1056
Amcisonic	ALL MODELS	1152
Amstrand	ALL MODELS	1124
AMW	T352	1140
AMW	ALL MODELS	1140, 1141
Anaba	ALL MODELS	1143
Anam	ALL MODELS	0894, 0201
Anim	ALL MODELS	0201
Apex	AD1010W	0437
Apex	AD1100W	1067
Apex	AD1110W	0437
Apex	AD1200	0437
Apex	AD1201	1067
Apex	AD1225	1006
Apex	AD1500	0437
Apex	AD1600	0437
Apex	AD1700M	0437
Apex	AD2100	0460
Apex	AD2500	1030
Apex	AD2600	1006
Apex	AD500	0437
Apex	AD660	0455
Apex	AD700	0455
Apex	ADR1000	0437
Apex	ADV3800	1006
Apex	GT2015DV	1009
Apex	GT2715DV	1009
Apex	MD100	1059
Apex	PD100	1075
Apex	PD450	1060
Apex	PD650	1060
Apex	ALL MODELS	0455, 1132, 0460, 0437, 0921, 0461, 0485, 1067, 1068, 1069, 1070*, 1073*, 1075, 1030, 1031, 1010, 1009, 1006, 1089, 1059, 1060
Arena	ALL MODELS	1139
Aria	ALL MODELS	1145

MANUFACTURER	MODEL	CODE
Arianet	ALL MODELS	1145
Ariston Acoustics	ALL MODELS	1035, 1034
A-Trend	ALL MODELS	1130
Audiosonic	ALL MODELS	1152
Audiovox	D1530	1132
Audiovox	D1730	1132
Audiovox	D1800	0437
Audiovox	D1830	1132
Audiovox	DVD1210	1042
Audiovox	ME20	1042
Audiovox	PE701	1132
Audiovox	PE702	1042
Audiovox	VBP4000	1042
Audiovox	ALL MODELS	0878, 0437, 1042, 1046, 1132
Aurio	ALL MODELS	1036, 1037
AWA	ALL MODELS	1113
Baier	ALL MODELS	0986
Black Diamond	ALL MODELS	1124
Blaupunkt	ALL MODELS	1132, 0460, 0658*
Blue Parade	ALL MODELS	0453
Blue Sky	ALL MODELS	0457, 0437, 0456, 1129, 1024, 1037
Boman	ALL MODELS	0881
Bose	Bose321	0489
Bose	ALL MODELS	0489
Brain Wave	ALL MODELS	1069, 1134
Brandt	ALL MODELS	1120, 0457
Brooksonic	ALL MODELS	0925*, 0456
Bush	ALL MODELS	1152, 0456, 1129, 0460, 1132, 1029, 1045, 1124, 1123
C California Audio	ALL MODELS	0445
Cambridge	SoundWorks	1143
Cambridge	ALL MODELS	1143, 1046, 1121
Cary	ALL MODELS	0459
CAT	ALL MODELS	1129, 0448, 1055, 1054, 1053
Celestial	ALL MODELS	0437, 1006
Centrex	ALL MODELS	0437, 1030
Centrum	ALL MODELS	0448, 1124
CGE	ALL MODELS	1044
dineULTRA	ALL MODELS	1129
CineVision	ALL MODELS	1081, 1024
Classic	PV7000	1047
Classic	ALL MODELS	1047, 1141, 1113
Claton	ALL MODELS	1124
Clatronic	ALL MODELS	1114
Coby	DVD707	1021
Coby	DVD7500	1115
Coby	ALL MODELS	1029, 1021, 1113, 1115
Concept	ALL MODELS	0460, 0877
Conia	ALL MODELS	1152, 0437, 1139, 1109
Continental Edison	ALL MODELS	1141
Crown	ALL MODELS	1152, 1069, 1134, 0457
C-Tech	ALL MODELS	0484
Cybercom	ALL MODELS	1005
Cyberhome	CHDVD300	1130
CyberHome	ALL MODELS	1130
Cytron	ALL MODELS	0884, 0457

MANUFACTURER	MODEL	CODE	
D	Daewoo	DV6T8348	1106
	Daewoo	DVG3000D	1069
	Daewoo	DVG4000S	1061
	Daewoo	DVG5200S	1154
	Daewoo	DVG9000N	1061
	Daewoo	ALL MODELS	1130, 1141, 0884, 1106*, 1129, 1130, 1069, 1134, 1029, 1061, 1154
	Dalton	ALL MODELS	1055
	Dansai	ALL MODELS	1069, 1134, 0881
	Dantax	ALL MODELS	1045
	Dargon	ALL MODELS	1005
	Daytek	ALL MODELS	1141
	Dayton	ALL MODELS	1141
	DEC	ALL MODELS	1129, 1029
	Decca	ALL MODELS	1069, 1134
	Denon	DVD1000	0886
	Denon	DVD1500KE3	0886
	Denon	DVD2800	0886
	Denon	ALL MODELS	0886, 0477, 0472, 0478, 0439, 0869, 0481, 0482, 0444, 0884, 0452
	Denver	ALL MODELS	1129, 1029, 1114
	Denzel	ALL MODELS	1141
	Desay	ALL MODELS	1102
	Diamond	ALL MODELS	1029, 0457, 0484, 1045, 1046
	Digihome	ALL MODELS	1124
	digIRED	ALL MODELS	1132, 0460
	Digital I	ALL MODELS	1145
	Digitor	ALL MODELS	1069
	Digitrex	ALL MODELS	1067, 0437
	DiK	ALL MODELS	1005
	Dinamic	ALL MODELS	1114
	Disney	DVD2000C	0487
	Disney	ALL MODELS	0487
	DViDo	ALL MODELS	0884
	DK	ALL MODELS	1005
	DMTECH	ALL MODELS	0881, 0878
	Dual	ALL MODELS	0457, 1141, 0881, 0878, 1124, 1113
	Duraband	ALL MODELS	0448
	DVD2000	ALL MODELS	0470, 1033
	DVX	ALL MODELS	1041
E	E-Boda	ALL MODELS	1045
	Eclips	ALL MODELS	1045
	Electrohome	ALL MODELS	1069, 1134
	Elin	ALL MODELS	1069, 1134
	Ellon	ALL MODELS	1056
	Elta	ALL MODELS	1152, 1069, 1134, 0878, 1114
	Emerson	DVD2000	1136
	Emerson	EWD7002	0487
	Emerson	ALL MODELS	1151, 1136, 0884, 0487*, 1097
	Encore	ALL MODELS	1130
	Enterprise	ALL MODELS	1136, 1097
	Enzer	ALL MODELS	1141, 0438
	esa	DP3220	1004
	esa	ALL MODELS	1004
	Escent	DVDM100	0451
	Escent	ALL MODELS	0451

MANUFACTURER	MODEL	CODE
F Farenheit	ALL MODELS	1144, 1038
Ferguson	ALL MODELS	0457
Finlux	ALL MODELS	1136, 1069, 1134, 0881
Firstline	ALL MODELS	1136, 0484, 0457
Fisher	DVDS1000	0436
Fisher	DVDS1100	0436
Fisher	DVDS1500	0436
Fisher	DVDS2000	0436
Fisher	ALL MODELS	1137, 0445, 1154, 0436
Funai	ALL MODELS	1074, 0456
Funi	ALL MODELS	1019
G GE	GE1401P	0450
GE	ALL MODELS	0450, 0460, 1132, 0441, 1108
Genica	ALL MODELS	1102
Global Solutions	ALL MODELS	0484
Global Sphere	ALL MODELS	0484
Goldstar	ALL MODELS	1136, 0475
Goodmans	ALL MODELS	1152, 0881, 0878, 1030, 0457, 1045
Go-Video	DP7030	1008
Go-Video	DVR4300	1107
Go-Video	DVR5000	1107
Go-Video	GVP5850	0460, 1131
Go-Video	ALL MODELS	1128, 0881, 1107, 0446, 0466, 1076, 1008, 0460, 1113
GPX	ALL MODELS	1129, 1005
Gradiente	ALL MODELS	0457
Graetz	ALL MODELS	1141
Greenhill	ALL MODELS	1132, 0878, 0460
Grundig	ALL MODELS	0457, 0436, 0456, 0438, 0884, 0878, 1045, 0463, 1124, 1112
Grunkel	ALL MODELS	1099, 1134
H H&B	ALL MODELS	1124
Haaz	ALL MODELS	0484
Hanseatic	ALL MODELS	1136
Harmon Kardon	DVD 25	1088
Harmon Kardon	ALL MODELS	0468, 1028, 1025, 1088
HDT	ALL MODELS	0884
He	ALL MODELS	1113
HenB	ALL MODELS	1124
Himage	ALL MODELS	1041, 1040
Himax	ALL MODELS	1037
Hitachi	DVP315	0447
Hitachi	ALL MODELS	1141, 0447, 0464, 1072
Hiteker	ALL MODELS	0437, 1031
HMC	ALL MODELS	1114
Home Electronics	ALL MODELS	1113
Hypson	ALL MODELS	1035
Hyundai	ALL MODELS	0881, 1058, 1057, 1056
I i2dvd	ALL MODELS	1122
Ingelen	ALL MODELS	1114
Initial	ALL MODELS	0460, 1132
Integra	ALL MODELS	0488
IRT	ALL MODELS	0881
ISP	ALL MODELS	0456
J Jaton	ALL MODELS	1141
JBL	ALL MODELS	0468, 0022", 1028

MANUFACTURER	MODEL	CODE
Jeken	ALL MODELS	1129, 1029
Jensen	ALL MODELS	1053
Jindian	ALL MODELS	0484
JMB	ALL MODELS	0456
JNL	ALL MODELS	1103
JVC	HRXVC1U	1150
JVC	HRXVC25U	1150
JVC	HRXVC27	1150
JVC	MXJ70	0485
JVC	XV421BK	0485
JVC	XV521BK	0485
JVC	XVM555BK	0485
JVC	XVM567GD	0485
JVC	XVN30BK	0485
JVC	XVN33SL	0485
JVC	XVN3SL	0485
JVC	XVN50BK	0485
JVC	XVN55SL	0485
JVC	XVS200	0485
JVC	XVS300BK	0485
JVC	XVS302SL	0485
JVC	XVS30BK	0485
JVC	XVS402SL	0485
JVC	XVS40BK	0485
JVC	XVS45BK	0485
JVC	XVS500BK	0485
JVC	XVS502SL	0485
JVC	XVS550SL	0485
JVC	XVS62SL	0485
JVC	XVS65SL	0485
JVC	XVSA70BK	0485
JVC	ALL MODELS	1144, 0461, 0485, 0451, 1133, 1150, 0463
Jwin	ALL MODELS	1138
K Karcher	ALL MODELS	0881
Kendo	ALL MODELS	1129
Kenwood	ALL MODELS	0452, 0480, 0482, 1122
Kilo	ALL MODELS	1069, 1134
King DHome	ALL MODELS	0484
Kiss	ALL MODELS	1141
KLH	ALL MODELS	1132, 0448, 0878*, 0460, 1013
Konka	ALL MODELS	1099, 1116, 1117
Koss	KD270	0457
Koss	ALL MODELS	0457*, 1003
Krell	ALL MODELS	1095
Kyocera	ALL MODELS	0869, 0481, 0482, 0439
L Lasonic	ALL MODELS	0484
Lawson	ALL MODELS	0884, 0484
Lecson	ALL MODELS	1121
Legacy	ALL MODELS	1039
Lenco	ALL MODELS	1129, 1069, 1134, 1029, 0457
Lennox	ALL MODELS	1152, 0448
Lexia	ALL MODELS	1129
Lexicon	ALL MODELS	1093, 1094
Lg	ALL MODELS	1081*, 1136, 1097, 0475
Lifetec	ALL MODELS	0457
Limit	ALL MODELS	0484

MANUFACTURER	MODEL	CODE
Loewe	ALL MODELS	0463
LogicLab	ALL MODELS	0484
Logix	ALL MODELS	0884, 0881
Lumatron	ALL MODELS	0884
Luxman	ALL MODELS	0464
Luxor	ALL MODELS	1030
LXI	ALL MODELS	0953*
M Magnavox	27MDTR10S	1153
Magnavox	27MDTR20/17	1074
Magnavox	DVD611	0463
Magnavox	MDV422	1086
Magnavox	MDV530	0463
Magnavox	PLDVD01	0463, 1023
Magnavox	ALL MODELS	1153, 1074, 0477, 0472, 0478, 0870, 0463, 0451, 0487, 0435, 1023, 1086
Magnex	ALL MODELS	1045
Manhattan	ALL MODELS	0884
Marantz	ALL MODELS	0463, 1080, 1086, 1087
Mark	ALL MODELS	1124, 1049, 0451
Matsui	ALL MODELS	0456, 0457
MBO	ALL MODELS	1152, 1113
MD'S	ALL MODELS	1129, 1029
Mediencom	ALL MODELS	1101
Medion	ALL MODELS	0881, 1005, 0457
Memorex	DVD2000	0487
Memorex	MVD2027	1005
Memorex	MVD2256	0456
Memorex	ALL MODELS	0456, 0487, 1005, 1124
Meridian	ALL MODELS	1092
Metz	ALL MODELS	0453
Mico	ALL MODELS	1045, 1046
Micromaxx	ALL MODELS	0456
Micromedia	ALL MODELS	0451, 0463
Micromega	ALL MODELS	0463
Microsoft	ALL MODELS	0450
Microstar	ALL MODELS	1005
Minato	ALL MODELS	0986
Minax	ALL MODELS	1124
Minoka	ALL MODELS	1059, 1134
Mintek	RC320H	0460, 1132
Mintek	ALL MODELS	1132, 0460, 0469
Mitsubishi	DD4020	0470
Mitsubishi	DD4030	0470
Mitsubishi	DD6030	0470
Mitsubishi	DD6040	0470
Mitsubishi	ALL MODELS	0477, 0472, 0478, 0470, 1124
Monyka	ALL MODELS	1141
MP	ALL MODELS	1037
MPX	ALL MODELS	1037
Mustek	ALL MODELS	1113
Mx Onda	ALL MODELS	1045, 1046, 0457
Myryad	ALL MODELS	0466, 1091
NAD	ALL MODELS	1135, 1136, 0477, 0472, 0478, 0894
Naiiko	ALL MODELS	1059, 1134
Nakamichi	ALL MODELS	1090
NEC	ALL MODELS	1135, 1136, 0894

MANUFACTURER	MODEL	CODE
Nesa	ALL MODELS	1132, 0460
Neufunk	ALL MODELS	1141
NextBase	ALL MODELS	1058
Ninfaus	ALL MODELS	1142
Norcent	ALL MODELS	1131, 0448, 1141, 1047
Nordmende	ALL MODELS	1005
Noriko	ALL MODELS	0986
O Okano	ALL MODELS	0986
Omni	ALL MODELS	1130, 1129, 1029, 1152
Onix	ALL MODELS	1051
Onkyo	ALL MODELS	0488, 0032*, 0451, 0553
Optimus	ALL MODELS	0453, 0474, 0458
Optiview	ALL MODELS	1143
Orion	ALL MODELS	0456, 1124
Ortron	DVD100	0457
Ortron	DVD3116	0457
Ortron	ALL MODELS	1067, 0457
P Pacific	ALL MODELS	0484, 0878, 1005, 1124
Palladium	ALL MODELS	0456
Palsonic	ALL MODELS	1152, 1139, 0437, 1123
Panasonic	DMRE30	0452
Panasonic	DMRE50	0452
Panasonic	DVDF84	0869
Panasonic	DVDLV55	0452
Panasonic	DVDLV60	0452
Panasonic	DVDRP56	0482
Panasonic	DVDRV20	0452
Panasonic	DVDRV30	0452
Panasonic	DVDRV31K	0452
Panasonic	DVDRV32K	0869
Panasonic	DVDRV65	0452
Panasonic	DVD/S25	0452
Panasonic	DVD/S27	0481
Panasonic	DVD/S35	0869
Panasonic	PVD4742	1084
Panasonic	PVD4743	0439
Panasonic	PVD4752	0452
Panasonic	PVDM2791	1083
Panasonic	ALL MODELS	0439, 0869, 0481, 0482, 0445, 1096, 0479, 1020, 0486, 0477, 0472, 0478, 0434, 0886, 0452, 0488, 1011, 1083, 1084, 1085, 1043, 0452
Panda	ALL MODELS	0881
Philco	ALL MODELS	1114, 1152, 1045, 1044
Philips	DVD711/171	1086, 1087, 1023
Philips	DVD712	0463
Philips	DVD724AT	0463
Philips	DVD726	0463
Philips	DVD750VR	1023
Philips	DVDR985	1027
Philips	ALL MODELS	0463, 0870, 0451, 0435, 1074, 1027, 1023, 1105, 1080, 1086, 1087, 1082
Phonotrend	ALL MODELS	1129
Pioneer	CLDVD22	0453
Pioneer	DV440	0453
Pioneer	DV45A	0453

MANUFACTURER	MODEL	CODE
Pioneer	V434	0453
Pioneer	ALL MODELS	0477, 0472, 0478, 0453, 0458, 0869, 1146, 1014, 0021*, 1078, 1079, 1077, 0481
Pointer	ALL MODELS	1069, 1134
Polaroid	PDV0700	1141
Polaroid	ALL MODELS	1141, 1115
Polkaudio	ALL MODELS	0463
Popular_Mech	ALL MODELS	0471
Prima	ALL MODELS	1053
Proline	ALL MODELS	0437, 0878, 0457
Proscan	ALL MODELS	0450, 0441
Prosonic	ALL MODELS	1129
Provision	ALL MODELS	1129
Pyle	ALL MODELS	1038, 1048
D Quasar	ALL MODELS	0445, 1039
Qwestar	ALL MODELS	1039, 1048
R Radionette	ALL MODELS	1136
Ralite	ALL MODELS	1141
RCA	DRC105N	0450
RCA	DRC220N*	0450
RCA	DRC350N	0450
RCA	DRC6100N*	0450, 0441
RCA	RC5220	0450
RCA	RC5231Z	0450
RCA	RC5240P	0450
RCA	RTDVD1	0450
RCA	ALL MODELS	0450, 0460, 0477, 0472, 0478, 0878*, 0894, 0201*, 0440, 0441, 1012, 1007, 0457, 0453, 1132
Realistic	ALL MODELS	0474
REC	ALL MODELS	0452, 0482, 1123
Red Star	ALL MODELS	1134, 1069, 1114
Reoc	ALL MODELS	0986, 0484
Revoy	ALL MODELS	1129
Rex	ALL MODELS	1051
Rio Audio	ALL MODELS	1136
Roadstar	ALL MODELS	1129, 1124, 1152
Ronin	ALL MODELS	1141
Rotel	ALL MODELS	1133, 0485
Rowa	ALL MODELS	0490, 1030
S Saba	ALL MODELS	0457
Sabaki	ALL MODELS	0484
Salora	ALL MODELS	1136
Sampo	ALL MODELS	1148, 1130, 0986, 1029
Samsung	DVD511	1130
Samsung	DVDM301	0464
Samsung	DVDP231	0464
Samsung	DVDP421	0464
Samsung	DVDS221	0464
Samsung	DVDS321	0464
Samsung	DVDV1000	1107
Samsung	DVDV2000	1107
Samsung	DVDV2500	1107
Samsung	DVDV3500	1107
Samsung	ALL MODELS	1016, 1129, 1126, 0464, 0447, 0452, 1107, 0466, 0446*, 1076, 1072

MANUFACTURER	MODEL	CODE
Sansul	CDVD2500	0456
Sansul	VRDVD4000	0456
Sansul	ALL MODELS	0456, 0484, 1069, 1134, 1045, 1046
Sanyo	DMW1000	1137
Sanyo	DMW360	0436
Sanyo	DMW380	0436
Sanyo	DVD1100	0436
Sanyo	DVD1500	0436
Sanyo	DVD5010	0436
Sanyo	DVD6000	0436
Sanyo	DVD6040	0436
Sanyo	DVD6070	0436
Sanyo	DVD7000	0436
Sanyo	DVD9201	0436
Sanyo	DVD9501	0436
Sanyo	DWM1000	1137
Sanyo	RB470MT	0436
Sanyo	RBDMW770	1137
Sanyo	ALL MODELS	1154, 0436, 0827, 0456, 0878, 1137, 0476
Scan	ALL MODELS	1152, 0884, 1056
ScanMagic	ALL MODELS	1113
Schaub Lorenz	ALL MODELS	1069, 1134, 1114
Schneider	ALL MODELS	0884, 0881, 0878, 1005, 1114, 0457
Schwaiger	ALL MODELS	0986
Scientific Labs	ALL MODELS	0484
Scott	ALL MODELS	1144, 0437, 0457
SEG	ALL MODELS	1141, 0484, 1134
Shanghai	ALL MODELS	0437
Sharp	DV740U	0986
Sharp	DVS1U	0491
Sharp	ALL MODELS	0491, 0986, 0456, 0480, 1017
Sherwood	ALL MODELS	1132, 1136, 0460, 1026
Shinco	DVD868	1132
Shinco	ALL MODELS	1132, 0460
Shinsonic	ALL MODELS	0469, 0460, 1015, 1132
Silva	ALL MODELS	1005, 1114
Simaudio	ALL MODELS	1087
Singer	ALL MODELS	1152, 1045, 1046
Skymaster	ALL MODELS	0484, 1113
Slim Art	ALL MODELS	1069, 1134
SM Electronic	ALL MODELS	1152, 0484, 1113
Smart	ALL MODELS	0884, 1124
Sonic Blue	ALL MODELS	1136
Sony	DAVS300	1015
Sony	DVPC670D	0469
Sony	DVPF21	0469
Sony	DVPNC600	0469
Sony	DVPNS300	0469
Sony	DVPNS315	0469
Sony	DVPNS325	0469
Sony	DVPNS415	0469
Sony	DVPNS425P	0469
Sony	DVPNS700	0469
Sony	DVPNS715	0469
Sony	DVPNS725P	0469
Sony	DVPS560D	0469

MANUFACTURER	MODEL	CODE
Sony	SLVD100	1118
Sony	SLVD300P	1118
Sony	ALL MODELS	1018, 0469, 1015, 0464, 0827, 0024*, 0443, 1118
Soundmaster	ALL MODELS	0484
Soundmax	ALL MODELS	0484
Soundwave	ALL MODELS	0881
Standard	ALL MODELS	0484, 0457
Starmedia	ALL MODELS	1145, 1058
Sungale	ALL MODELS	1139
Sunwood	ALL MODELS	1114
Supervision	ALL MODELS	0484, 1113
SVA	ALL MODELS	0437
Sylvania	DVC860D	0487
Sylvania	DVL100	0487
Sylvania	ALL MODELS	0487*, 1074*, 1107, 0446
Symphonic	ALL MODELS	1074, 0487*
Synn	ALL MODELS	0484
Tag McLaren	ALL MODELS	1091
Tandberg	ALL MODELS	1124
Tandy	ALL MODELS	0658*
Tatung	ALL MODELS	1069, 1134, 0466
Teac	ALL MODELS	1132, 1136, 0438, 0871, 0872, 0882, 0453, 0894, 1135, 0460, 0484, 0878
Technics	ALL MODELS	1096, 1151, 0445, 0479, 1020, 0452, 1136, 0434, 0488, 1011
Technika	ALL MODELS	1069, 1134, 0482
Techwood	ALL MODELS	0894, 1135, 1124
Tensai	ALL MODELS	1152, 0457
Tevion	ALL MODELS	0484, 0457
Thakral	ALL MODELS	0438
Theta Digital	ALL MODELS	0870, 0453, 0435
Thompson	ALL MODELS	0450, 0441
Thomson	ALL MODELS	1120
Tokai	ALL MODELS	1130, 1141, 1114
Tokaido	ALL MODELS	1130
Tokiwa	ALL MODELS	0884
Toshiba	SD1200	0451
Toshiba	SD1800	0451
Toshiba	SD2150	0451
Toshiba	SD2705	0451
Toshiba	SD2800	0451
Toshiba	SD2900	0451
Toshiba	SD3750	0451
Toshiba	SD3800	0451
Toshiba	SD3900	0451
Toshiba	SD3960	0451
Toshiba	SD4700	0451
Toshiba	SD4900	0451
Toshiba	SDP2500	0451
Toshiba	SDV280	0451
Toshiba	SDV290	0451
Toshiba	SDV291	0451
Toshiba	ALL MODELS	0463, 0456, 0925, 0451*, 0477, 0472, 0478, 0892, 0452, 0480, 1104, 1071
Trans-Continents	ALL MODELS	1141

MANUFACTURER	MODEL	CODE
Tredex	ALL MODELS	0484, 1102
TVView	ALL MODELS	1143
U Umax	ALL MODELS	1152
United	ALL MODELS	1141, 1113, 0878
Universum	ALL MODELS	1136, 1124
Urban Concepts	ALL MODELS	0451
US Logic	ALL MODELS	0460
V V inc	ALL MODELS	1125
Venture	ALL MODELS	0878*, 1065, 0491
Vieta	ALL MODELS	0884
Vooxon	ALL MODELS	1005, 1113
W Walkvision	ALL MODELS	1132, 0460
Welkin	ALL MODELS	1005
Wesder	ALL MODELS	1129
Wharfedale	ALL MODELS	1130, 0986, 1121, 1045, 1046
Windy Sam	ALL MODELS	0464
X XLogic	ALL MODELS	1069, 1134, 1144, 0484
XMS	ALL MODELS	1123, 1114
Xoro	ALL MODELS	1052
Xwave	ALL MODELS	1119
Y Yamada	ALL MODELS	1030
Yamaha	ALL MODELS	0462, 0471, 0439, 0869, 0481, 0482, 0473, 1027, 1023, 1100, 1066, 1086, 0452, 0463
Yamakawa	ALL MODELS	1141
Yukai	ALL MODELS	1113
Z Zenith	DVB312	1136
Zenith	XBV342	1081
Zenith	ALL MODELS	1081*, 1136, 1097, 0475, 0451

*combo model (DVD/VCR or DVD/TV or DVD/VCR/TV)

89-376-0-002

©2003, 2004 Vocom International Inc. All Rights Reserved.
Nickelodeon, Nick Jr., Dora the Explorer and all related titles,
logos and characters are trademarks of Vocom International Inc.

InteracTV is a mark of Deep Telecommunications and Computing, L.L.C. Used under license.
Fisher-Price, Inc., a subsidiary of Mattel, Inc., New York, New York 10019 U.S.A.

PRINTED IN CHINA.

Manufactured for Fisher-Price. ©2003, 2004 Mattel, Inc. All Rights Reserved.

Fisher-Price and the Fisher-Price logo are U.S. trademarks of Mattel, Inc.

Packaging and address should be retained for future reference.

Mattel Canada Inc., Mississauga, Ontario L5R 3R9. You may call us free at 1-888-892-6123.

Mattel U.K. Ltd., Vauxhall Business Park, Maidenhead SL6 4UB. Helpline: 01628500303.

Mattel Australia Pty. Ltd., Richmond, Victoria, 3121. Consumer Advisory Service - 1300 136 312.

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Dimpleon & Diederick Olieh: Mattel (SEA) Pte Ltd (8935033-P) Lot 13.5, 13th Floor, Menara Lien Hoe,

Pentamora Tropicana Golf Country Resort, 47410 P.J. Tel:03-79802817, Fax:03-79802887.

Mattel, Inc., 323 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Affairs 1 (800) 524-Toys.



Qualifies for Special Offer
1-888-892-6123

Fisher-Price

ITEM NO. B9376