

**Swing****Infant Seat****Toddler Rocker**

**IMPORTANT!** Keep these instructions for future reference.  
Please read these instructions before assembly and use of this product.  
Adult assembly is required. Tool needed for assembly: Phillips screwdriver (not included).  
Requires four D (LR20) **alkaline** batteries (not included) for operation.  
Product features and decorations may vary from photographs.

## Care

- The pad is machine washable. Wash the pad separately in cold water on the gentle cycle. Do not use bleach. Tumble dry separately on low heat and remove promptly.
- The swing and seat frames, toy bar and toys may be wiped clean using a mild cleaning solution and a damp cloth. Do not use bleach. Do not use harsh or abrasive cleaners. Rinse clean with water to remove residue. Do not immerse the the swing or seat frames.



### UNITED STATES

**1-800-432-5437.** Fisher-Price, Inc.,  
636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers:  
1-800-382-7470.

### To remove the pad:

- Unfasten the buckles around each side rail. Unfasten the rear strap buckle on the pad.
- Remove the lower pocket on the pad from the footrest.
- Press the seat back tube buttons on each side rail. Pull to remove the ends of the seat back tube. Remove the seat back tube from the sleeve in the pad.

### To replace the pad:

- Insert the seat back tube into the sleeve in the top of the pad.
- Follow the assembly instructions to assemble the seat back tube and the pad to the seat frame.

## Consumer Information



### WARNING

 
#### **To prevent serious injury or death from falls or being strangled in the restraint system:**

- Never leave child unattended.
- This product is not intended to replace a crib or bassinet for prolonged periods of sleep.
- **When used as a swing:**
  - Always use the restraint system.
  - Discontinue use when an active child attempts to climb out.
  - Keep swing seat fully reclined until child is at least 4 months old AND can hold up head without help. Young infants have limited head and neck control. If seat is too upright, infant's head can drop forward, compress the airway, and result in DEATH.
- **When used as an infant seat or rocker:**
  - **Fall Hazard** - Never use on any elevated surface, since child's movement may cause the product to slide or tip over. Use only on a floor.
  - **Suffocation Hazard** - Never use on a soft surface (bed, sofa, cushion) since the product can tip over and cause suffocation in soft surfaces.
  - Always use the restraint system until child is able to climb in and out of the product unassisted.
  - Use upright position only with a child who can sit up unassisted.
  - Never use as a carrier or lift while child is seated. Never use toy bar as a handle.

- Use as a swing from birth until an active child attempts to climb out.
- Use as an infant seat/toddler rocker from birth until child weighs 40 lb (18 kg).
- Swing/infant seat maximum weight: 25 lb/11,3 kg
- Toddler rocker maximum weight: 40 lb (18 kg)

# Parts

**IMPORTANT!** Please remove all parts from the package and identify them before assembly. Some parts may be packed in the pad.

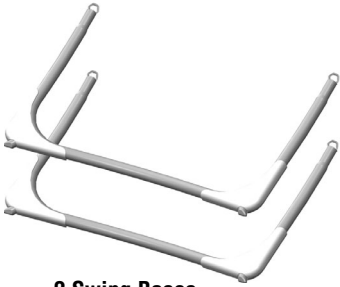


2 Swing Bases



2 Swing Frames



 Cross Brace

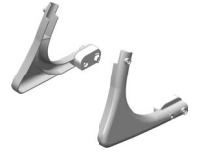


2 Feet



Pad with Seat Back Tube

 *Hint:* Please refer to the care section to remove the seat back tube for cleaning.

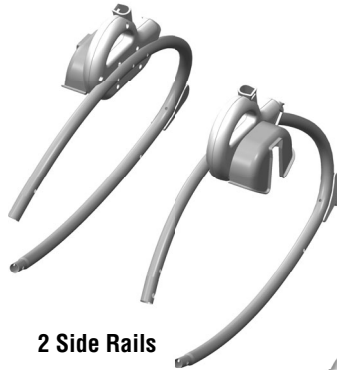


2 Side Rails




2 Retainers with Lock Nut



 Kickstand



Footrest

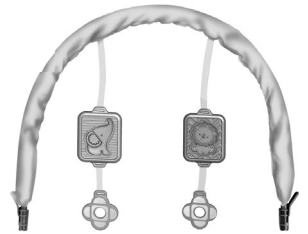 

Toy Bar

Fasteners shown actual size. Tighten or loosen all screws with a Phillips screwdriver. Do not over-tighten the screws.




M5 x 30 mm Screw – 2




M5 x 50 mm Screw – 4

# Assembly

 **IMPORTANT!** Before assembly and each use, inspect this product for damaged hardware, loose joints, missing parts or sharp edges. DO NOT use if any parts are missing or broken. Contact Fisher-Price® for replacement parts and instructions if needed. Never substitute parts.

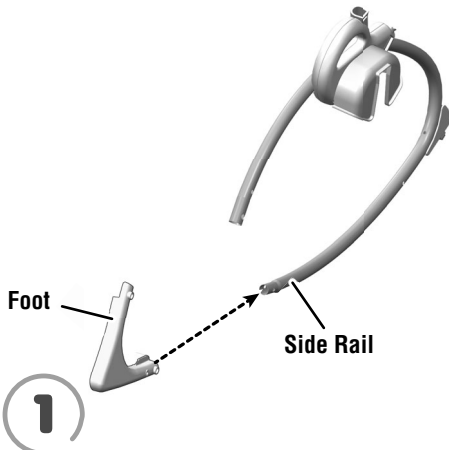


 
- Slide the socket on a foot onto the tapered end of a side rail.

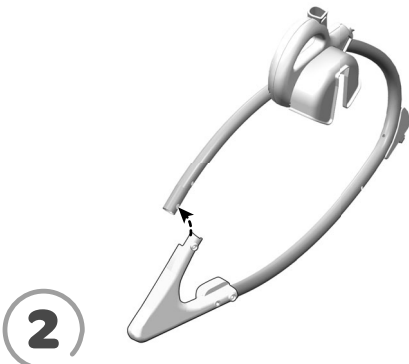

- Fit the peg on the inside of the foot to the hole in the end of the side rail.





**Hint:** Each foot is designed to fit the side rails one way. If a foot does not seem to fit, remove it and assemble it to the other side rail.

  - Repeat this procedure to assemble the other foot to the other side rail.

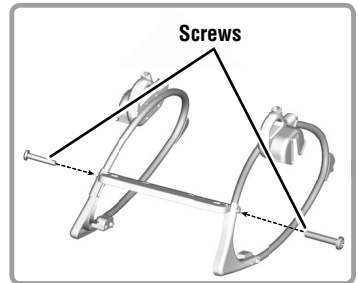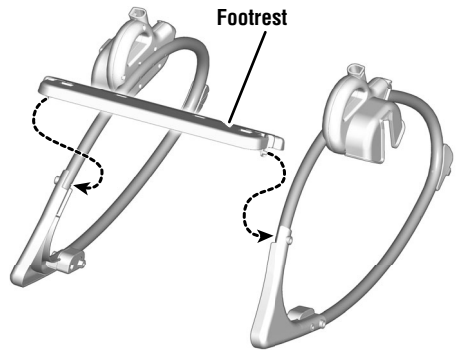


- Fit the pegs on the footrest to the side rails.
- Insert a M5 x 50 mm screw through the outside of each side rail and into the ends of the footrest. Tighten the screws.


# Assembly

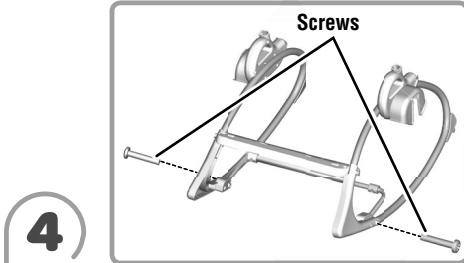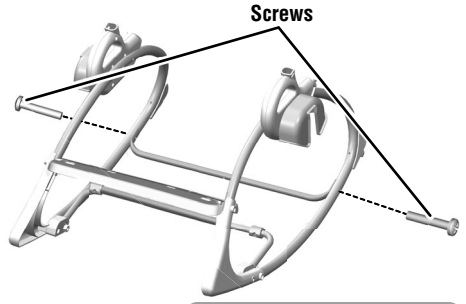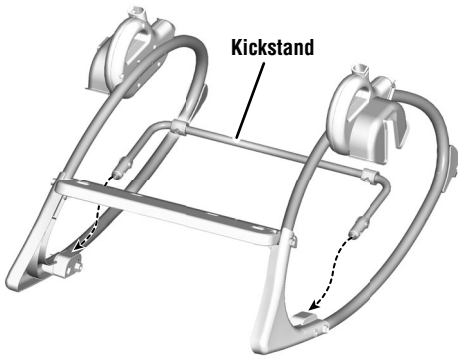    

 
- Insert the ends of the kickstand into the socket in each foot.
- Insert an M5 x 50 mm screw into each foot and tighten.

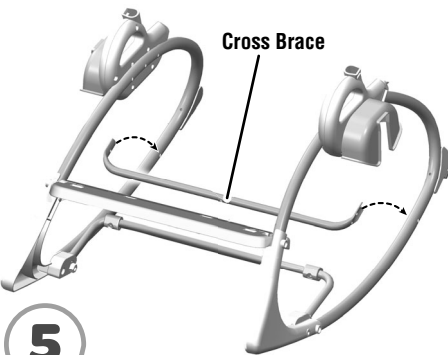

 - Fit the cross brace between the side rails, as shown.
- Hint:** The cross brace is designed to fit one way. If it does not seem to fit, turn it around and try again.



 
- Insert an M5 x 30 mm screw through the outside of each side rail and into the ends of the cross brace.
- IMPORTANT!** Please follow the next assembly (step 7) carefully to completely secure the cross brace to the side rails.

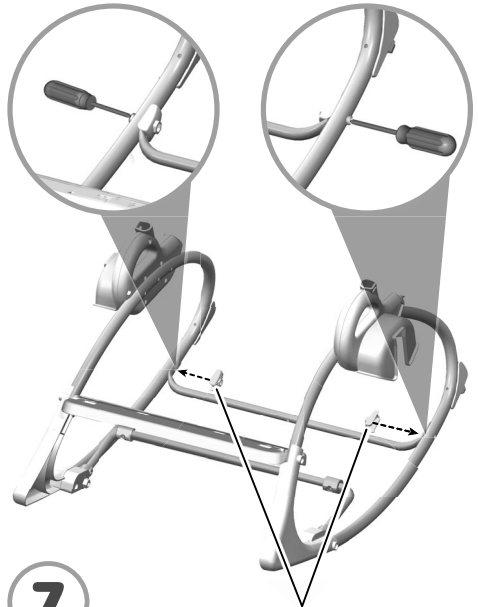

Retainers with Lock Nut

- Fit a retainer with lock nut onto the end of each screw and to the inside of a side rail. Tighten the screws.

# Assembly

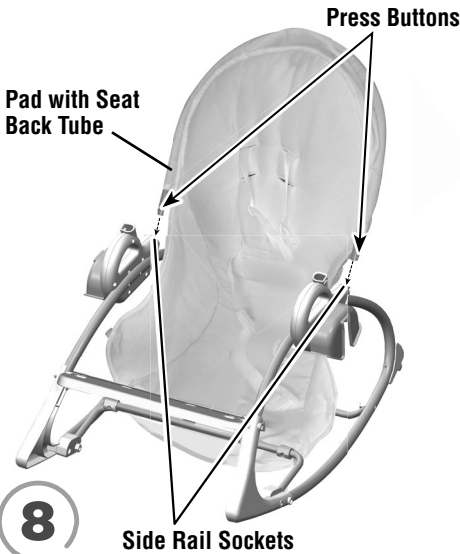 


- While pressing the buttons on the ends of the seat back tube (inside the pad), insert the seat back tube into the sockets in each side rail. Push until the buttons "snap" into place. **Make sure you hear a "snap" on each side.**
- Pull the seat back tube up to be sure it is secure in the side rail sockets.



- Fit the lower pocket on the pad around the footrest.
- Fit the button holes on the lower pad pocket to the hooks underneath the footrest.



 - Fasten the buckle on the back of the pad to the buckle on the cross brace. **Make sure you hear a "click".**

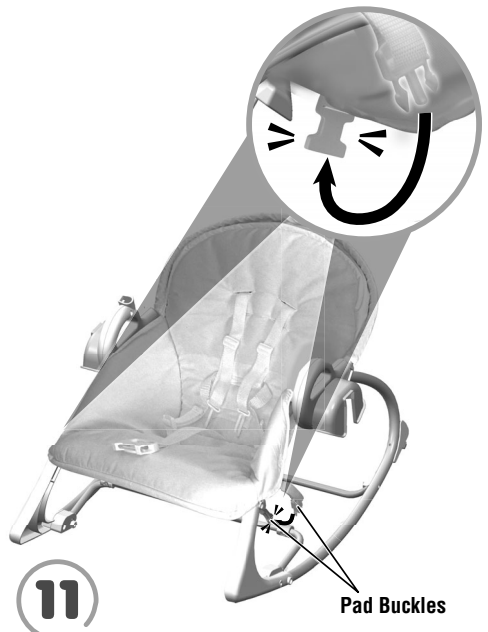

- Fasten the buckles on each side of the pad around each side rail. **Make sure you hear a "click" on each side.**

# Assembly

Shoulder Belt  
Lower Slots



12

## Smaller Baby

- Insert the ends of the shoulder belts through the **lower slots** in the seat pad back.

Shoulder Belts  
Upper Slots

 


13

## Larger Baby

- Insert the ends of the shoulder belts through the **upper slots** in the seat pad back.

Swing Frame  
Hubs

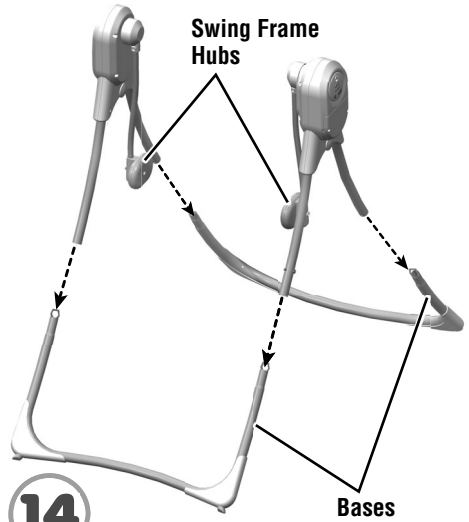

14

Bases


- Position the swing frames so that the hubs face each other.
- Fit the tubes on the swing frames onto the tubes on the bases.

*Hint: The swing frame tubes are designed to fit the tubes on each base one way. If the swing frame tubes do not seem to fit, turn the base around or try the other base.*



# Battery Installation

 *Hint: We recommend using **alkaline** batteries for longer battery life.*

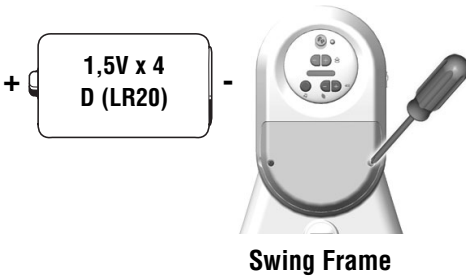

- Locate the battery compartment door on the swing frame.
- Loosen the screws in the battery compartment door and remove the door.
- Insert four D (LR20) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws.

**Note:** Low battery power causes product movement to slow and sound to become faint or stop. If this should happen, replace the batteries with four D (LR20) **alkaline** batteries.

- If this product begins to operate erratically, you may need to reset the electronics. Turn the power off and then back on.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

## Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

## Setup and Use



# WARNING

### **To prevent serious injury or death from falls or being strangled in the restraint system:**

- Never leave child unattended.
- This product is not intended to replace a crib or bassinet for prolonged periods of sleep.
- **When used as a swing:**
  - Always use the restraint system.
  - Discontinue use when an active child attempts to climb out.
  - Keep swing seat fully reclined until child is at least 4 months old AND can hold up head without help. Young infants have limited head and neck control. If seat is too upright, infant's head can drop forward, compress the airway, and result in DEATH.
- **When used as an infant seat or rocker:**
  - **Fall Hazard** - Never use on any elevated surface, since child's movement may cause the product to slide or tip over. Use only on a floor.
  - **Suffocation Hazard** - Never use on a soft surface (bed, sofa, cushion) since the product can tip over and cause suffocation in soft surfaces.
  - Always use the restraint system until child is able to climb in and out of the product unassisted.
  - Use upright position only with a child who can sit up unassisted.
  - Never use as a carrier or lift while child is seated. Never use toy bar as a handle.

## Infant Seat Kickstand



**Note:** Use the kickstand only when using as an infant seat.

- Rotate the kickstand out. Push down on the seat bottom to be sure the kickstand is in position.

## Adjustable Seat Back



**Upright Position**

 
- Lift the seat back and fasten the strap buckles. Make sure you hear a “click”.



**Recline Position**


- Unfasten the strap buckles and lower the seat back.

# Securing Child

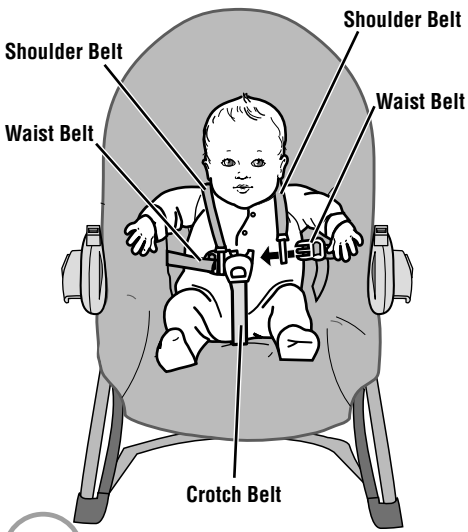


- Place your child in the seat. Position the crotch belt between your child's legs.
- Insert the ends of the waist belts through the slots in the shoulder belts.
- Fasten the waist/shoulder belts to the crotch restraint. **Make sure you hear a "click" on both sides.**
- Check to be sure the restraint system is securely attached by pulling it away from your child. The restraint system should remain attached.
- Tighten the waist/shoulder belts so that the restraint system is snug against your child. Please refer to the next section for instructions to tighten the waist/shoulder belts.

## TIGHTEN

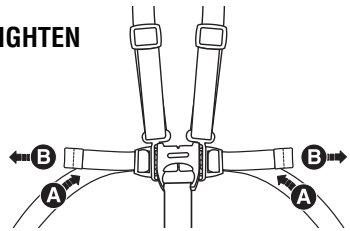 


## LOOSEN

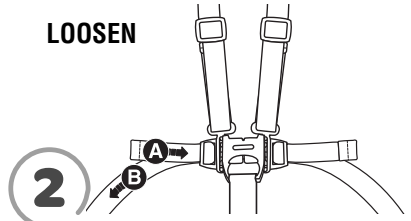 


- **To tighten the waist belts:** Feed the anchored end of the belt up through the buckle to form a loop **A**. Pull the free end of the belt **B**. Repeat this procedure to tighten the other belt.
- **To loosen the waist belts:** Feed the free end of the belt up through the buckle to form a loop **A**. Enlarge the loop by pulling on the end of the loop toward the buckle. Pull the anchored end of the belt to shorten the free end of the belt. Repeat this procedure to loosen the other belt **B**.

## TIGHTEN

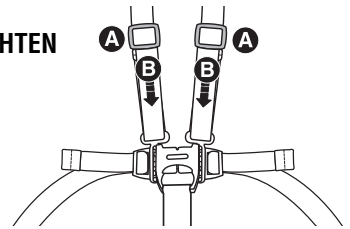 

## LOOSEN

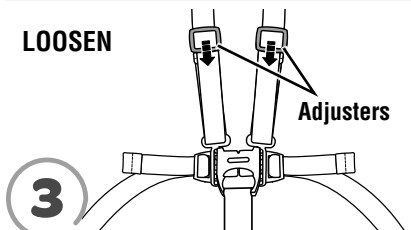 


- **To tighten the shoulder belts:** Hold the adjuster **A** and pull the front shoulder strap down **B**.
- **To loosen the shoulder belts:** Slide the adjuster down.

## Toy Bar



 
- 
- Fit the plugs on each end of the toy bar into the sockets in each side rail.
- Hint:** *The toy bar is removable. Press the ends of the latches and lift the toy bar.*

## Swing Setup

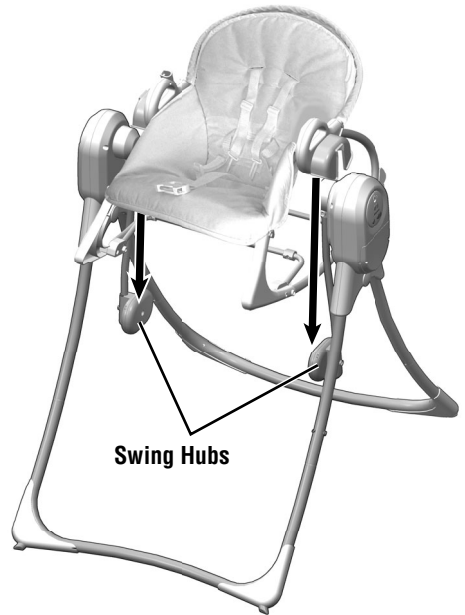

- 
- Fit the seat onto the swing hubs.
  - Push down on the seat to be sure it's secure to the swing hubs.

# Soothing 6-speed Swing

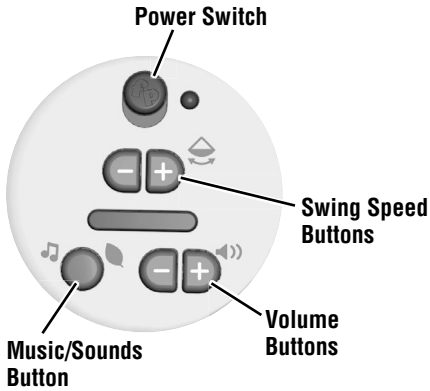 

## Swing

- Slide the **power switch ON**.
- Press the **swing speed buttons** ⇄ to select any of six speed settings.
- Swinging will turn off after approximately four hours. Press a **swing speed button** to restart.
- Be sure to slide the **power switch OFF** when not in use.

## Music and Sounds

- Press the **music/sounds button** 🎵 to turn music/sounds ON. Press the button again to turn music/sounds OFF.  
***Hint:** Music/sounds will turn off after approximately 20 minutes. Press the **music/sounds button** to restart.*
- Press the **volume buttons** 🔊 to adjust the volume level.

 
## Rocker Use



1


- Insert the restraint belts back through the slots in the pad.

## Swing Frame Storage

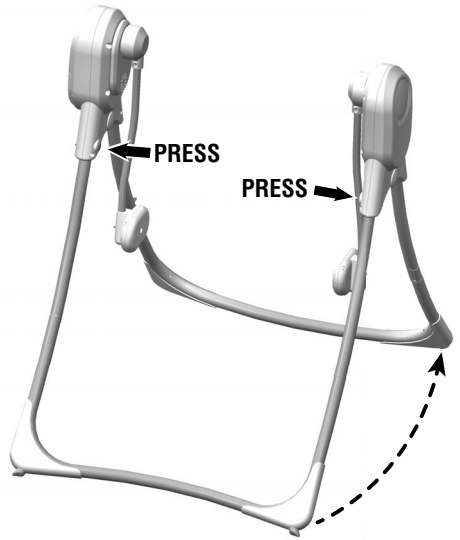

- Lift to remove the seat from the swing frame.
- Press the button on each swing frame and push the bases together.
- Lean against a wall for storage.

 Pad Straps

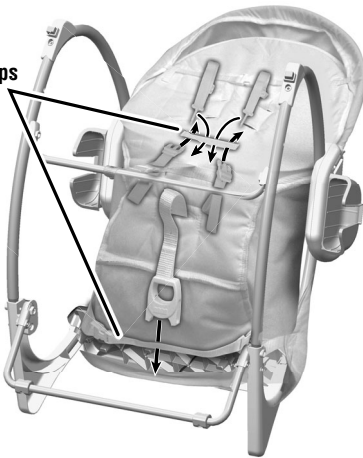

2

- Turn the seat face down.
- Tuck the ends of belts under the pad straps.

# Consumer Information

## FCC Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**Note:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## ICES-003

This Class B digital apparatus complies with Canadian ICES-003. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

## NMB-003

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.