

MATCHBOX

ON A MISSION

3+



BML03-0920

WRECKY


THE WRECKING BUDDY™



BUDDY MANUAL


Please keep these instructions for future reference as they contain important information.

////// BATTERY REPLACEMENT ////

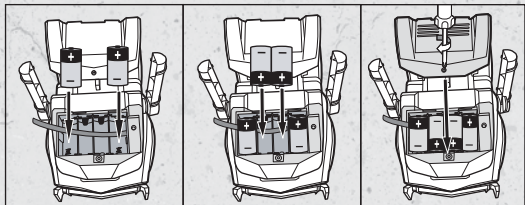

- Batteries included are for demonstration purposes only.
- Replace the batteries if Wrecky's lights dim, his words sound distorted or he starts to move slowly.
- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Pull ribbon up to remove batteries and dispose of them safely.
- Push ribbon back into the bottom of the battery compartment and install 4 new "C" size batteries on top of it.
- First, install 2 batteries into the lower section in the orientation (+/-) shown.
- Then, install 2 batteries into the upper section in the orientation (+/-) shown.
- Replace battery cover and tighten screw.
- For longer life, use alkaline batteries.
- When exposed to an electrostatic source, the product may malfunction. To resume normal operation, remove and re-install the batteries.

**READY FOR MY
MISSION!**

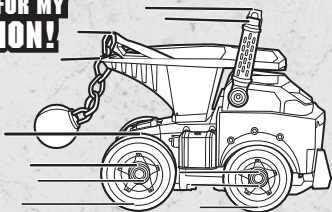

©2014 Mattel. All Rights Reserved. Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Malaysia. Tel:03-78803817, Fax:03-78803867.

SERVICE.MATTEL.COM

/// BATTERY SAFETY INFORMATION ///

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

For product sold in USA.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

- This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

**WORK IS
DONE,
TIME FOR
FUN!**




“CLEAR THE ROAD - WRECKY’S HERE!”

Get ready to kick up your wheels and go on the ultimate construction adventure with **WRECKY the Wrecking Buddy™!**

This truck can haul, dump, bulldoze, spin and even dance because he’s all that *and* a tank of gas!




GETTING STARTED

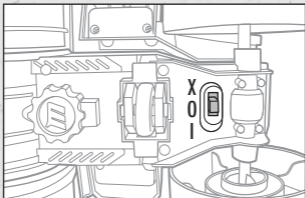

I = ON
O = OFF
X = Try Me

Turn On/Off/Try Me switch to "ON" to get Wrecko™ going. He'll be happy and ready to roll!

SO HOW DOES HE WORK?

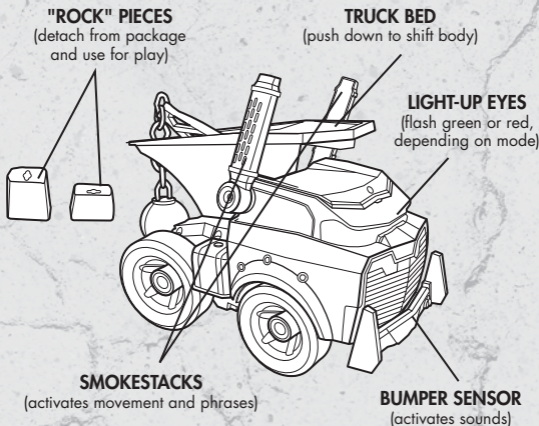


////// ACTION MODES ////

Wrecky's not your ordinary construction truck - his body can transform into 3 different action modes! The mode he's in determines his movements and phrases.


HAULING

- Carries your stuff
- Drives forward
- Dumps cargo out

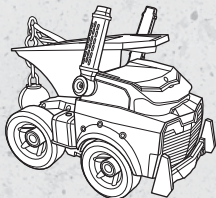


BULLDOZING

- Charges forward
- Knocks down structures

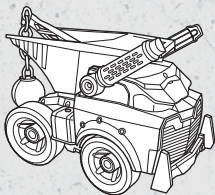

WRECKING

- Spins 360° with wrecking ball extended
- Dances like a champ!

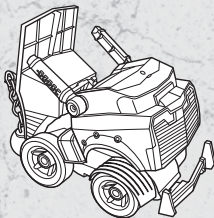


HAULING

When Wrecky's truck bed & cab are level and his smokestacks are pointing upward, he's in HAULING mode.

CARRYING YOUR STUFF


Load his truck bed with whatever you want - blocks, rocks... even dirty socks! Start with the 2 "rock" pieces locked under Wrecky™ in package.

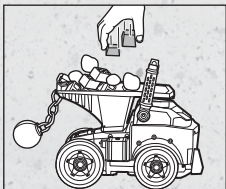

**MAKE WAY FOR
WRECKY!**


DRIVING FORWARD

Push his smokestacks FORWARD and he'll drive straight for a few seconds, then quickly turn around to make sure he didn't leave you behind!

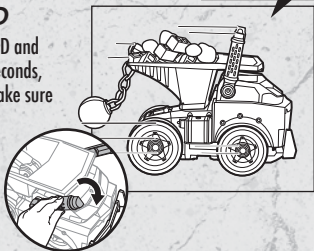


DUMPING CARGO OUT

Ready to lighten your load? Just pull his truck bed up and release!

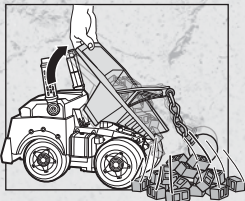

BULLDOZING

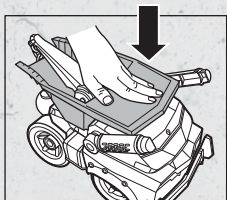

To transform Wrecky™ into BULLDOZING mode, push down on the hand sticker on his truck bed until he locks in place.


**Body will be slanted DOWNWARD.
Smokestacks will be pointing FORWARD.**

CHARGING FORWARD

Push his smokestacks FORWARD and he'll stagger back and forth, then charge forward like a raging bull!



**READY OR NOT,
HERE I COME!**

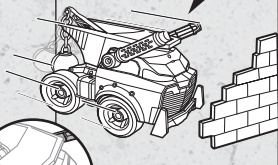


KNOCKING DOWN STRUCTURES

If there's a wall in his path, Wrecky™ will bulldoze right through it! Push his smokestacks FORWARD again for another thundering charge!

**CHECK IT,
THEN WRECK IT!**



WRECKING

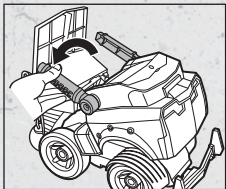


To transform Wrecky™ into WRECKING mode, pull backward on his smokestacks 2 TIMES. First he'll return to HAULING mode, then he'll pop up into WRECKING mode.

**Body will be slanted UPWARD.
Smokestacks will be pointing BACKWARD.**

SPINNING 360°

Pull his smokestacks BACKWARD and he'll spin in circles with his wrecking ball extended outward. Stay clear of his rear!


**I'M BUSY
GETTIN' DIZZY!**

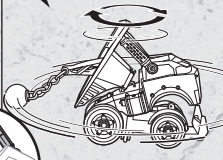

DANCING


Push his smokestacks FORWARD and he'll dance to some cool music to celebrate a job well done!

**I CALL THAT DANCE
"THE WRECKY!"**

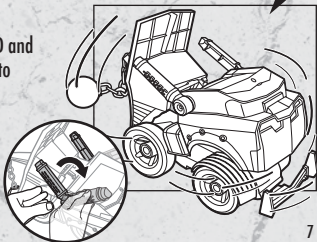


CREATE YOUR OWN WRECKING CHALLENGE!

Wrecky's a true wreck-a-holic - he loves knocking anything down. Try putting together one of these do-it-yourself challenges for your wrecking buddy!

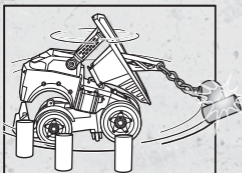


Place several empty toilet paper rolls in a circle around Wrecky[™]. While in **WRECKING** mode, make him spin and try to knock them all down!

Set up a bunch of plastic cups in front of Wrecky[™]. While in **BULLDOZING** mode, make him charge forward and see how many he can knock over! Try different configurations for a new challenge each time!

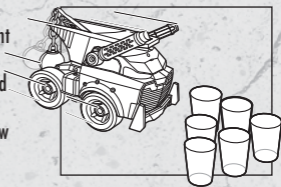

Gather a bunch of books and place them upright in a row, as if they are dominoes. While in **WRECKING** mode, make Wrecky[™] spin and hit the first book to start the domino action!

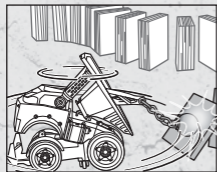

/// TIPS FOR A SUCCESSFUL ADVENTURE ///

- Wrecky™ likes to roll, spin and dance on smooth, flat surfaces. After all, what kind of construction truck drives around on carpet?
- Just like your own feet, keep your buddy's wheels clean. Make sure they're free of dirt and lint.
- As much as you may want to take Wrecky™ to the beach with you, he can't do his construction work in sand.
- If Wrecky™ starts moving sluggishly or speaking like a tired old truck, check his batteries. If the batteries are OK and he still isn't working properly, try switching him OFF, pausing 5 seconds and turning him back ON.

**LET'S GO
FOR A
SPIN!**

