



# Walkie-Talkies



**Model Number: C4778**

Please keep this instruction sheet for future reference,  
as it contains important information.

Requires two 9V (6LR61) **alkaline** batteries (Not included.)



Adult assembly required for battery installation.

Tool needed for battery installation: Phillips screwdriver (not included).

**Fisher-Price**

[www.rescueheroes.com](http://www.rescueheroes.com)

# BATTERY INSTALLATION

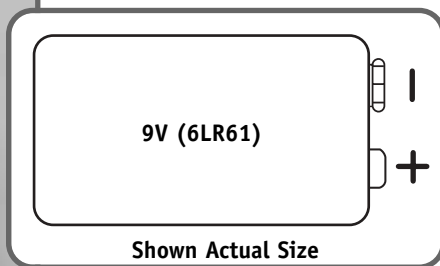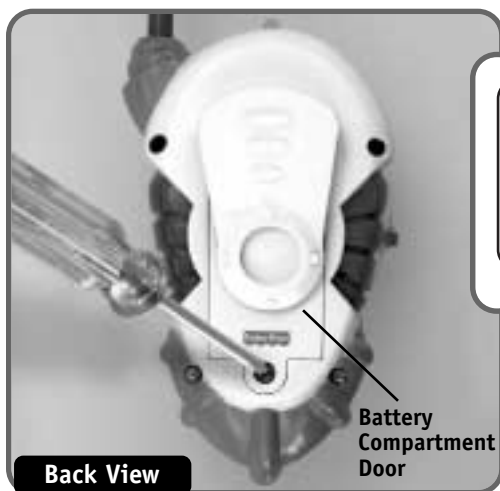

- Locate the battery compartment on the back of each walkie-talkie.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert one 9V (6LR61) **alkaline** battery into each walkie-talkie.
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

## Hints:


- We recommend using **alkaline** batteries for longer life.
- When sound becomes faint or walkie-talkie does not work, it's time for an adult to replace the batteries!

# BATTERY SAFETY INFORMATION

Batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

# LET'S TALK ACTION!

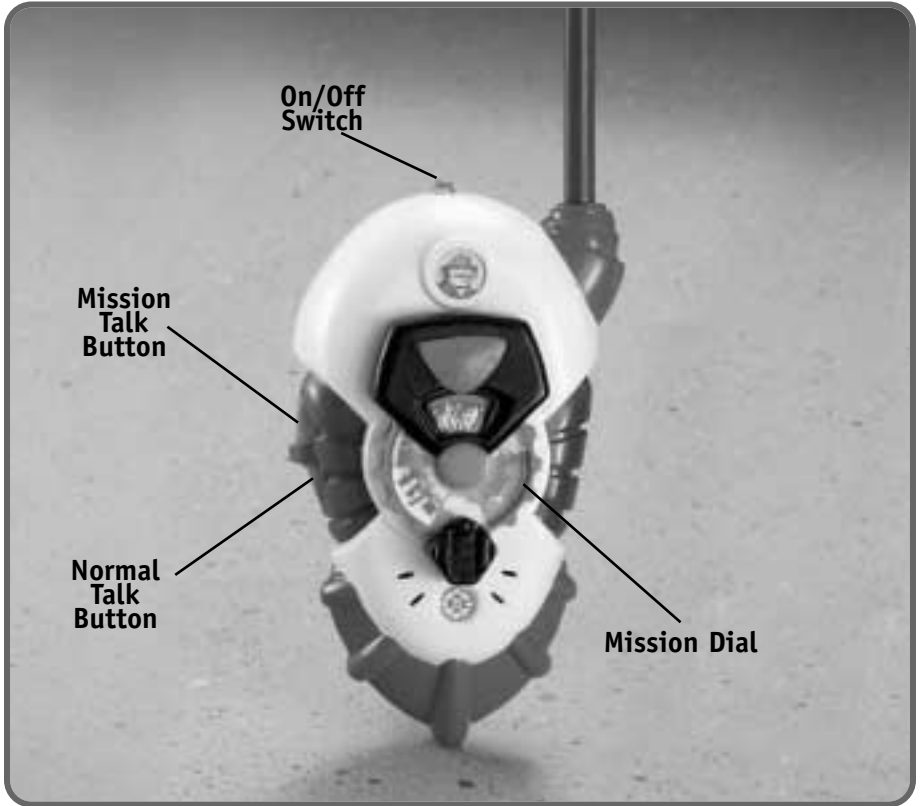

- Slide the power switch on top of each walkie-talkie to the ● position to turn it on or to the ○ position to turn it off.
- Turn the mission dial to choose one of six different missions.
- Press and hold the top (mission) talk button to transmit a message from Billy Blazes™ or Rocky Canyon™ about the chosen mission to the other walkie-talkie.
- Press and hold the bottom (normal) talk button to use like a regular walkie-talkie and transmit your own messages. Speak directly into the microphone below the mission dial.

# CARE

- To clean, wipe all parts with a damp cloth. Never immerse the walkie-talkie.
- Keep water, sand and dirt off of this toy.
- Do not drop this toy on a hard surface.
- This product contains no consumer replaceable parts. Do not take this toy apart.

## TROUBLE SHOOTING

PROBLEM	CAUSE	SOLUTION
Excessive Static	Interference from car engines, powerlines, fluorescent lights, electric motors or dimmer switches.	Change your location or point the antenna in different directions.
Walkie-Talkie does not work	Battery power is low	Replace the exhausted battery with a new 9V battery (see page 2).
Range of Walkie-Talkie is decreased	Unit does not transmit well through hills, trees, buildings or crowds of people.	Use walkie-talkie at a higher location or in a more open and flat area.
	Battery power is low.	Replace the exhausted battery with a new 9V battery (see page 2).

# FCC NOTE (UNITED STATES ONLY)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate this equipment.

Rescue Heroes® Walkie-Talkies

Model Number: C4778

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Consumer Relations Department

636 Girard Avenue

East Aurora, New York 14052

These walkie-talkies operate on 27.145MHz radio frequency.



- Meets requirements of Council Directives - 99/5/EC, 89/336/EEC, 88/378/EEC
- Suitable for use in all EC member states.

# CONSUMER INFORMATION

## Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price® Consumer Relations  
636 Girard Avenue  
East Aurora, New York 14052

For other countries, outside the United States:

### **CANADA**

**Questions? 1-800-567-7724.** Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

### **GREAT BRITAIN**

Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB.  
Helpline: 01628 500302.

### **AUSTRALIA**

Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

Consumer Advisory Service 1300 135 312.

### **NEW ZEALAND**

16-18 William Pickering Drive, Albany 1331, Auckland.

### **ASIA**

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©2004 Mattel, Inc. All Right Reserved. ® and ™ designate U.S. trademarks of Mattel, Inc.