



Newborn



Sitter



Toddler



## WARNING

To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.

Please keep this instruction sheet for future reference,  
as it contains important information.

Requires three AAA (LR03) **alkaline** batteries (not included) for operation.  
Adult assembly is required.

Tool required for battery installation: Phillips screwdriver (not included).  
The mat is machine washable. Wash separately in cold water on the gentle cycle.

Do not use bleach. Tumble dry on low heat.

The arch, toys and bases can be wiped with a clean, damp cloth.

Do not immerse the the arch or bases.

# Consumer Information



## CONSUMER ASSISTANCE

1-800-432-5437 (US & Canada)  
1300 135 312 (Australia)

[service.fisher-price.com](http://service.fisher-price.com)

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.  
Hearing-impaired consumers: 1-800-382-7470.

### Outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

Great Britain: Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB. Helpline: 01628 500303.  
[www.service.mattel.com/uk](http://www.service.mattel.com/uk)

Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland.

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

## CAN ICES-3 (B)/NMB-3 (B)

Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) l'utilisateur du dispositif doit être prêt à accepter tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre le fonctionnement du dispositif.


## FCC STATEMENT (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**NOTE:** Changes or modifications not expressively approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

## Assembled Parts

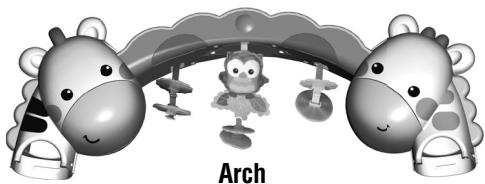

Arch

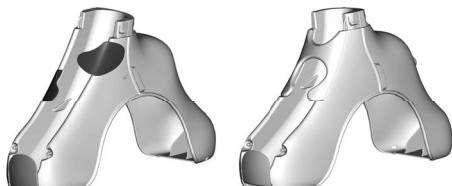


2 Bases



Mat

## One-Time Assembly

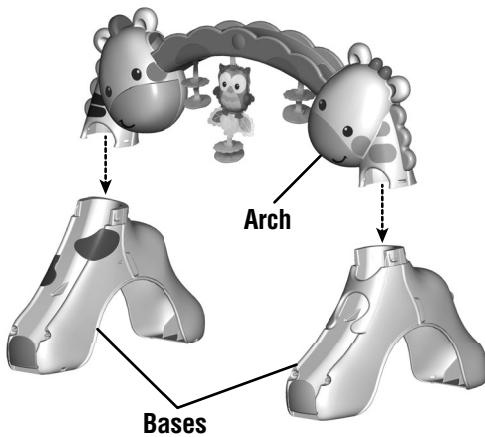

Bases


- "Snap" each base into the arch.

*Hint: Each base is designed to fit the arch one way. If it does not seem to fit, try the other base.*



2 Hanging Toys

## Battery Installation

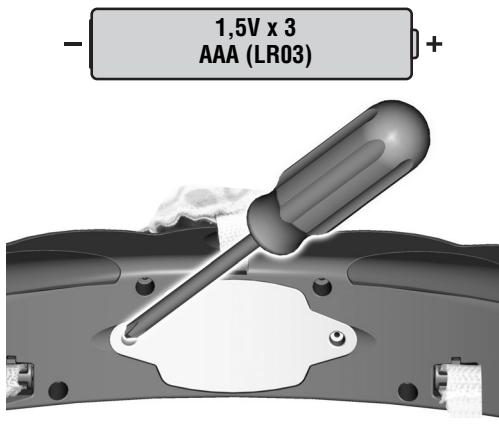

- For longer life, use **alkaline** batteries.
- Locate the battery compartment door on the bottom of the arch.
- Loosen the screws in the battery compartment door with a Phillips screwdriver and remove the door.
- Insert three, new AAA (LR03) **alkaline** batteries.
- Replace the battery compartment door and tighten the screws. Do not over-tighten.
- If this product begins to operate erratically, you may need to reset the electronics. Slide the power/volume switch off and then back on.
- When sounds/lights become faint or stop, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.


## Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

# Newborn Mode

Dancing lights and hanging toys entertain baby.

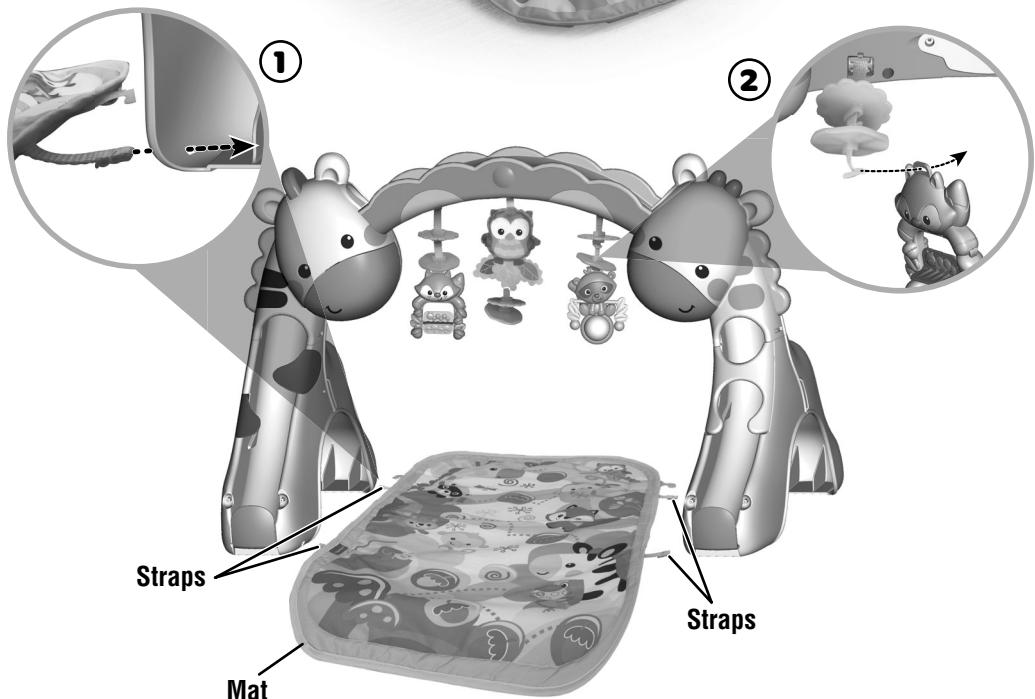

- 
- ① Fit each strap on the mat into each slot in the base feet. Make sure the tab on each strap forms a "T" on the other side of the slot. Pull up on the mat to be sure it is secure.
  - ② Hang the toys from the straps on the arch.

## Sitter Mode

Pockets on the mat provide put & take fun for sitting babies.




***Hint: If converting from newborn mode, remove each strap on the mat from each slot in the base feet.***

- ① Fit the lower straps on the mat into the slots in the front base feet. Make sure the tab on each strap forms a "T" on the other side of the slot.
- ② Fold the top of the mat over.
- ③ Insert the plastic tabs on each side of the mat into the slots in the base.



## Toddler Mode

Stand up and roll the balls down the ramp for even more excitement!

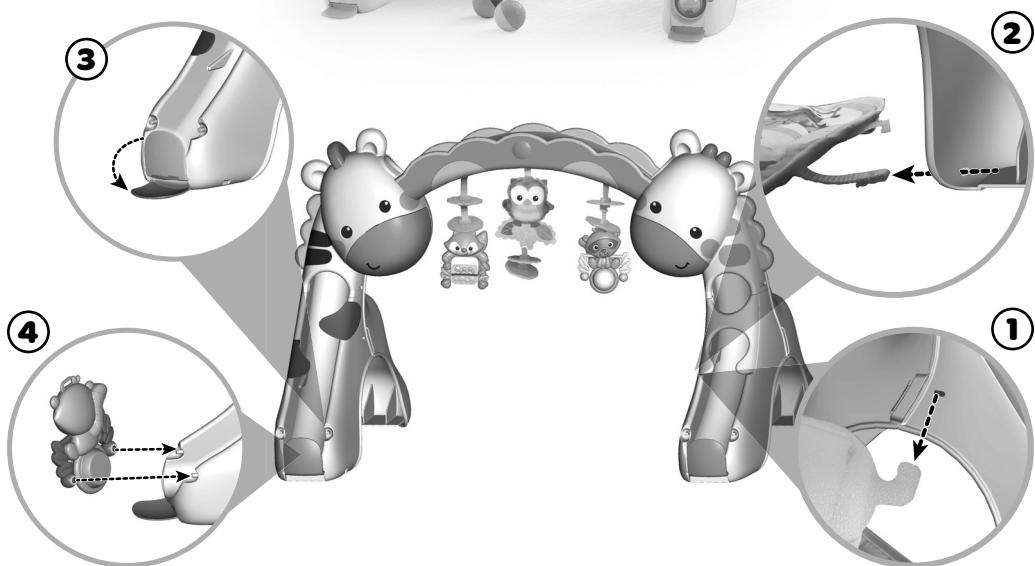

- 
- ① Remove the plastic clips on the mat from the slots in the base.
  - ② Remove the lower straps on the mat from the slots in the front base feet. Store the mat for future use.
  - ③ Lower the door on each foot.
  - ④ Remove the hanging toys from the arch and fit onto the pegs on each foot.

# Music, Sounds Effects & Lights!

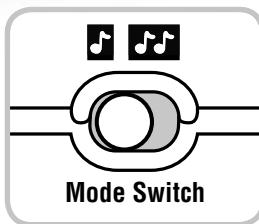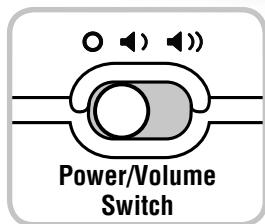

- Slide the power/volume switch to ON with low volume  $\blacktriangleleft$ , ON with high volume  $\blacktriangleright$ ) or OFF  $\textcircled{O}$ .
- Slide the mode switch to:
  - ☒ **Short Play** - pull the owl, bat at the toys or roll a ball down the arch for sound effects & lights.
  - ☒ **Long Play** - pull the owl, bat at the toys or roll a ball down the arch to play approximately 20 minutes of music and sounds.