



BATTERY INSTALLATION

- Replace the batteries if the doll fails to levitate, or if it fails to magnetically attach to the comet, when placed properly in the stand with the product "on."
- Replace the batteries if light effects dim or malfunction.
- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Remove the batteries and dispose of them safely.
- Install 6 new "AA" alkaline batteries in the orientation (+/-) shown.
- Replace the battery cover and tighten the screws.
- For best performance, use only alkaline batteries.
- When exposed to an electrostatic source, the product may malfunction; to resume normal operation, remove and re-install the batteries.

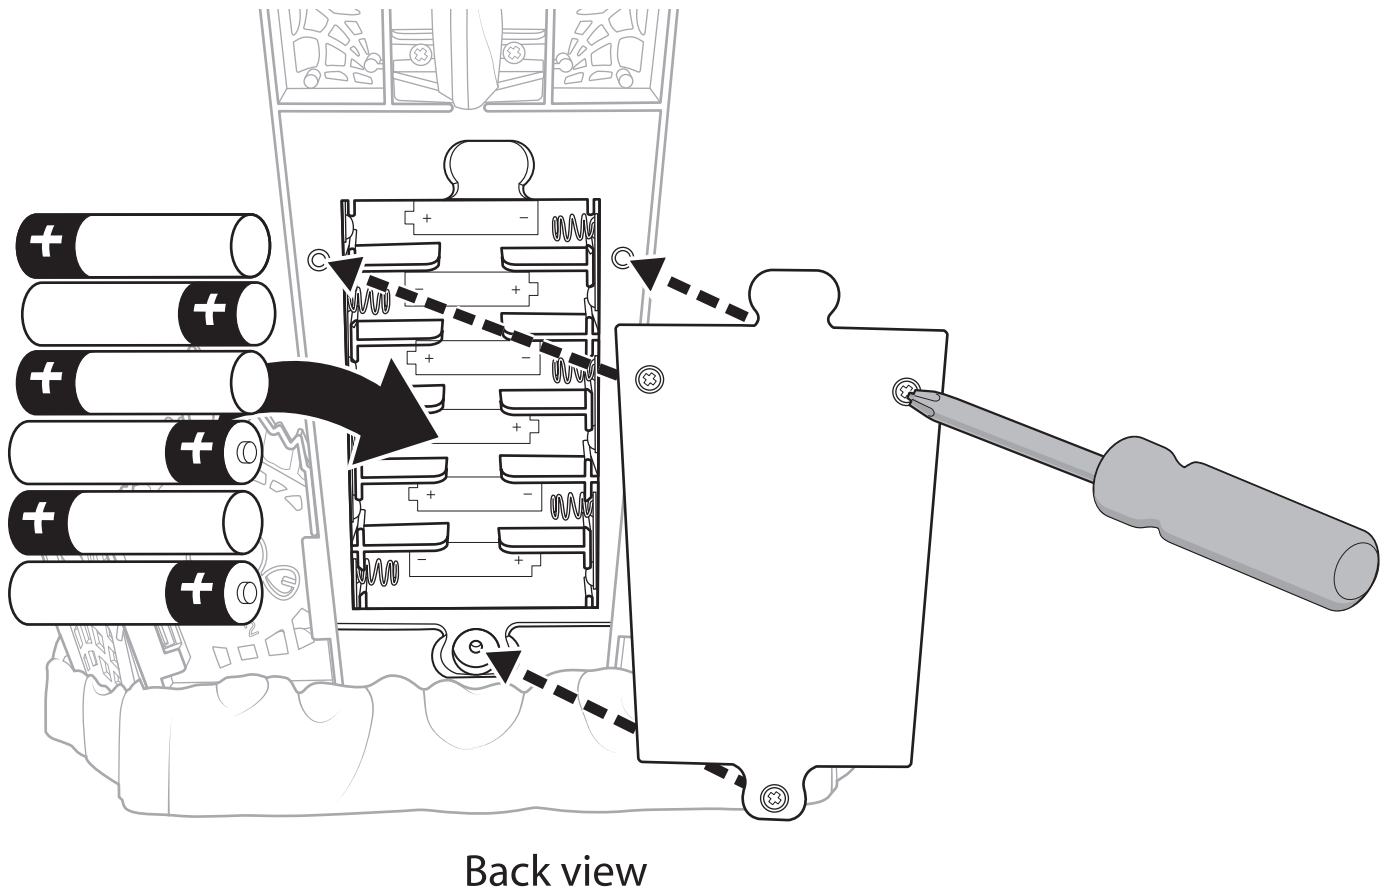

INSTRUCTIONS

CONTENTS

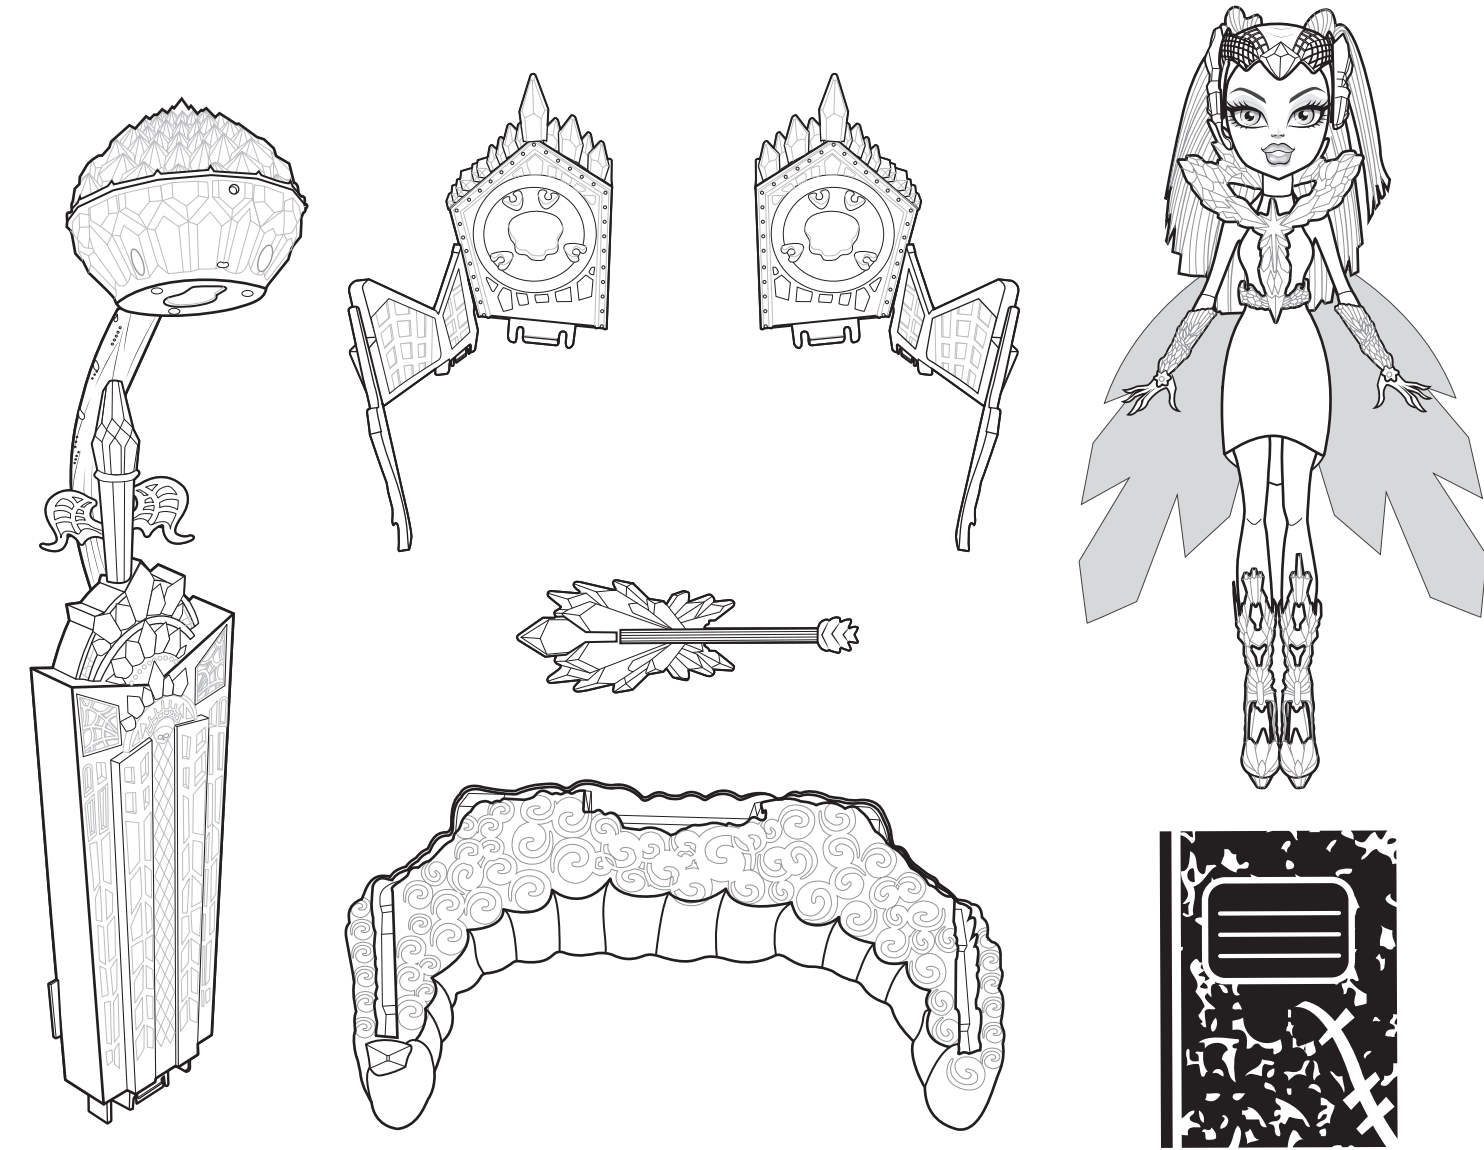

Intended for use with the doll included. This product contains a magnet. Do not use around items that are sensitive to or affected by magnetic fields. Requires 6 "AA" alkaline batteries (not included). Dispose of batteries safely.

CONSUMER INFORMATION
Need Assistance? Visit service.mattel.com or call 1-800-524-8697 (US and Canada only).
SERVICE.MATTEL.COM


Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Services 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121.Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 503-09, North Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Tel.: (852) 3185-6500. Diimport & Diedarkan Oleh: Mattel Southeast Asia Pte. Ltd. , No 19-1, Tower 3 Avenue 7, Bangsar South City, No 8, Jalan Kerinchi, 59200 Kuala Lumpur, Malaysia. Tel: 03-78803817, Fax: 03-78803867.

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.


Please remove everything from the package and compare to the contents shown here. If any items are missing, please contact your local Mattel office. Keep these instructions for future reference as they contain important information.

Assembly


1

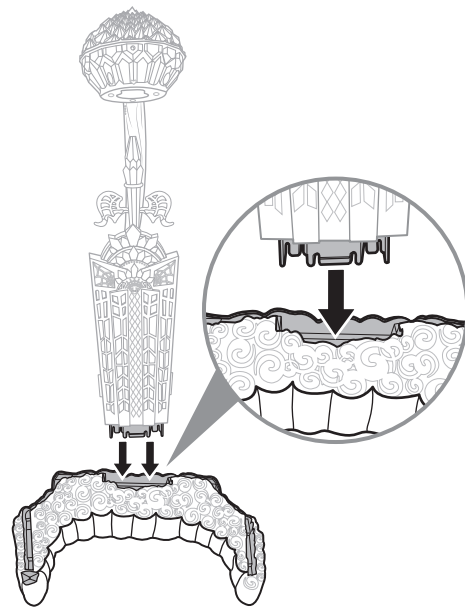

2

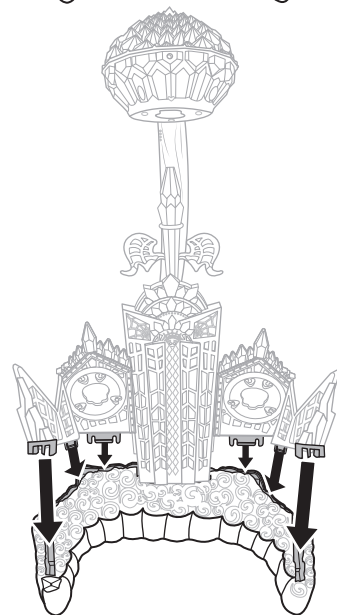


3

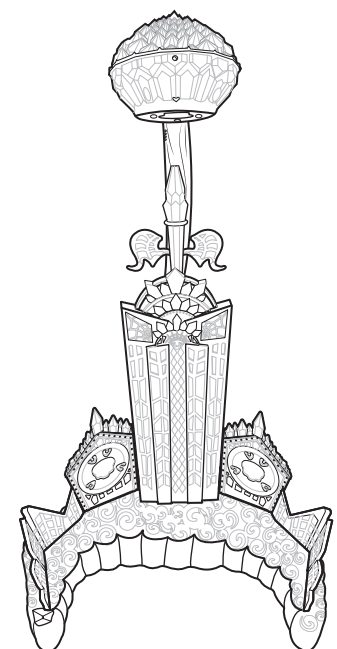

Let's Play!


For best performance: Place the product on a flat surface, and make sure the doll is wearing all of her included accessories.

NOTE: For longer life, please turn the product "off" when finished playing.

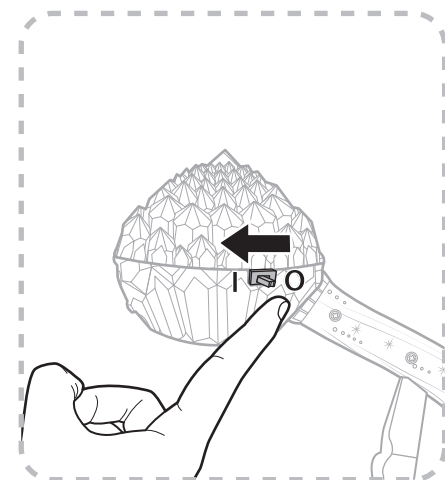


I = ON
O = OFF


4 For light effects, play music on any audio device; the lights will flash to the beat.
NOTE: If the lights don't react to your music, place the speaker closer to the microphone (shown).

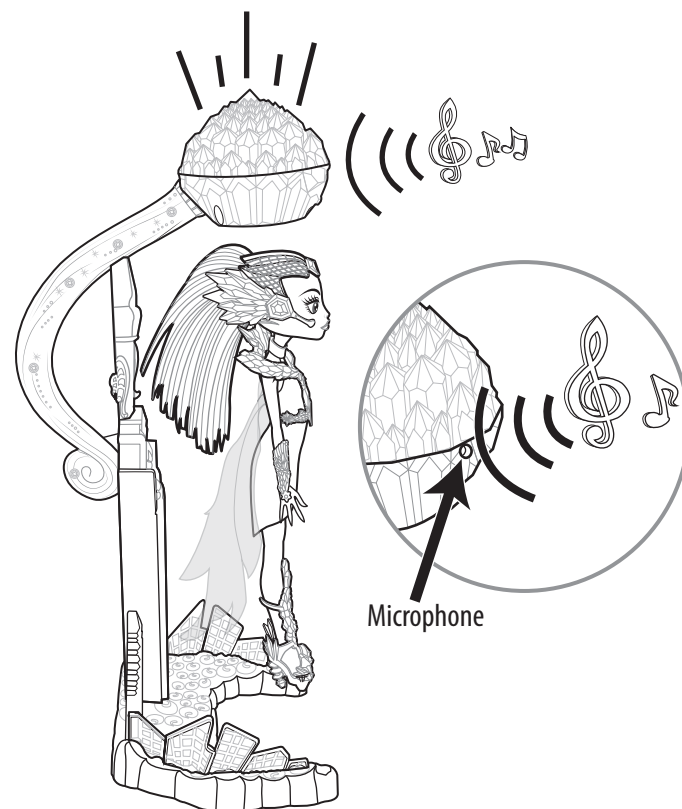


1 After turning the product "on," place the guitar between the comet and the doll.

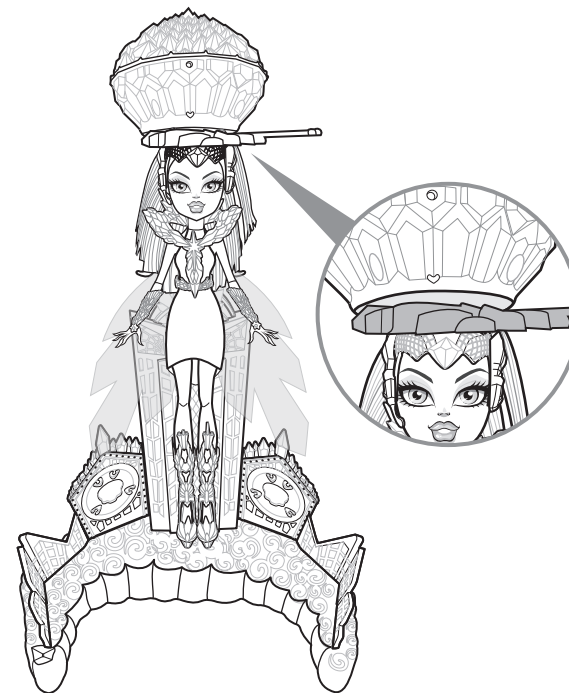

2 Slide the guitar horizontally out from between them.

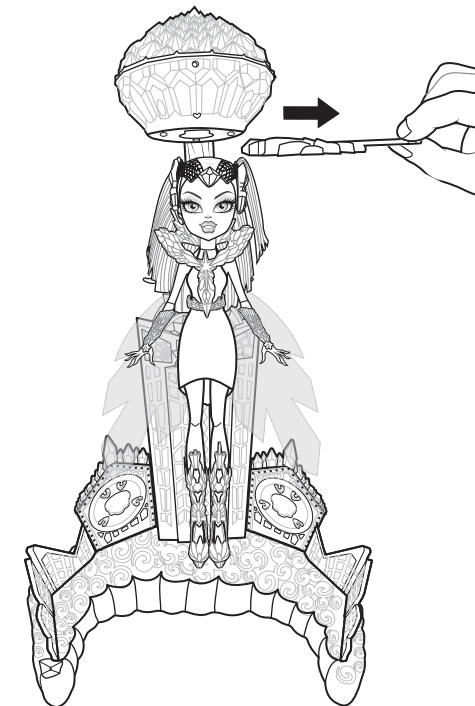

3 The doll will float ("levitate") for up to 5 minutes.

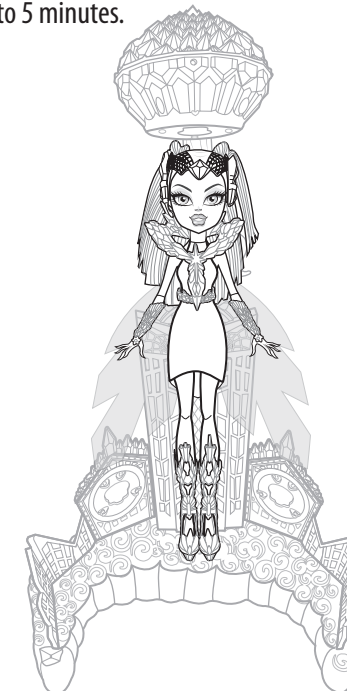

NOTE: After 5 minutes, the levitation feature will automatically time-out and the doll will rise up to attach to the comet.

NOTE: When the doll is floating, shaking or moving the stand may cause the doll to fall, or to rise up and attach to the comet.

Help!

I can't get Astranova™ to float!

- When you put Astranova™ doll close to the comet, she should light up and you should feel its magnet start to pull her in.
- Place the guitar between Astranova™ and the comet,, touch the doll's head to the guitar and allow her to stick there.
- Let the doll go so she is hanging by herself without you touching her.
- Finally, slowly slide the guitar away and she should float on her own.

If you follow these instructions and are still having trouble, remember:

- Make sure you let the doll go before sliding away the guitar.
- If you don't see any lights, make sure the on/off switch is switched "on."
- Make sure you are using fresh "AA" alkaline batteries.