

H4648

www.fisher-price.com

Fisher-Price®



GeoTrax™
Rail & Road System

Crankin' Round Crane™

Parts





- A. Crane
- B. Arch
- C. Base
- D. Chute

Parts not shown:
Pull Car
2 Cargo Crates

Please keep this instruction sheet for future reference, as it contains important information.


Adult assembly is required.

No tools needed for assembly.

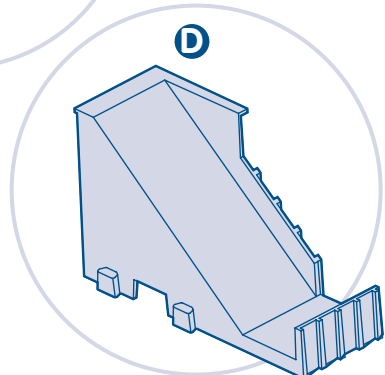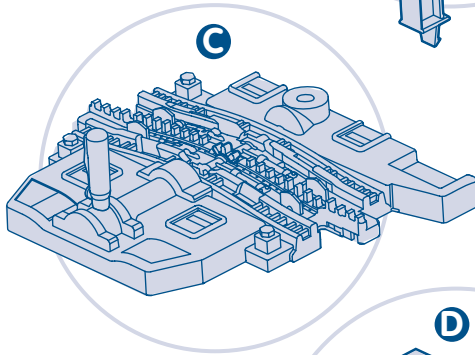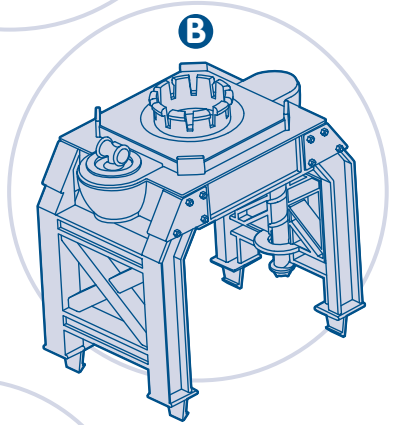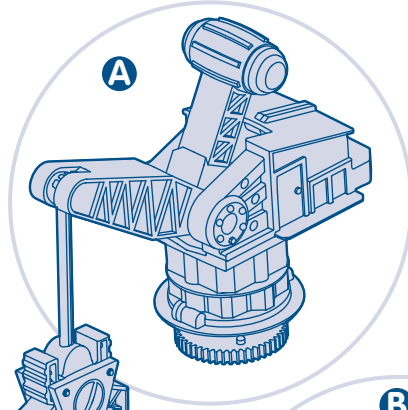


Assembly

1

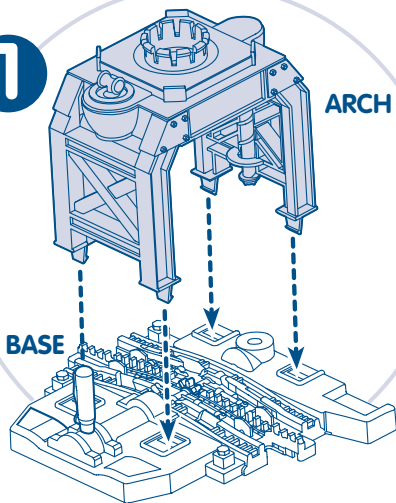


- "Snap" the arch into the base.

2

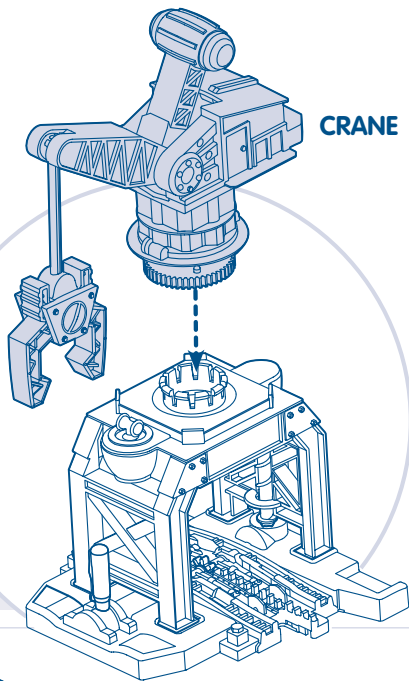

- Press firmly to "snap" the crane into the arch.

3

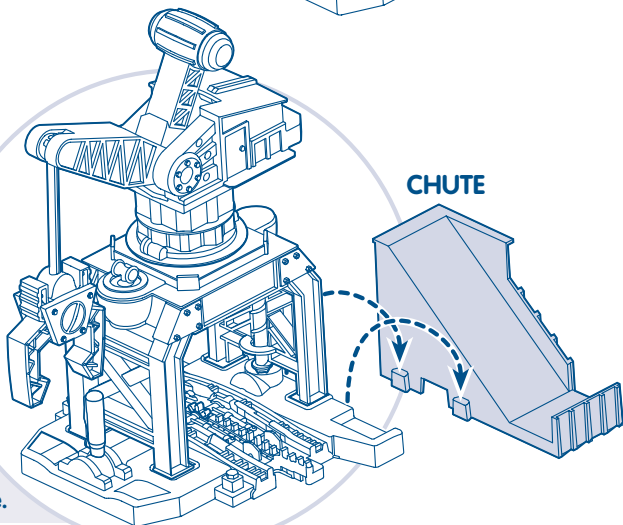

- Set the crane assembly grooves onto tabs on the chute, as shown.

Assembly is now complete.

 
■ Lots of Lifting and Loading



Squeeze the crane to pick up your cargo.



Lift the crane handle and rotate to move the cargo.



Squ
carg

Add your RC Train for the Magic of Geo



Flip the GeoMotion™ switch.



Use your remote controller to drive your RC engine under the arch.



Geo

RC train and extra track pieces shown are sold separately and subject to availability.

