


Protect your stuff as well as your privacy!

Hi! I want to tell you all about this great new room guard I found. It's called the Eye-Lock Room Guard and it's the latest in bedroom security! What? You find it hard to believe that a 12 year-old girl would need such a high-tech piece of equipment? Well, if YOU have a snoopy little brother who always messes around in your room when you're not there, you would need a room guard too! Hey, desperate times call for desperate measures!!!


FEATURES

First let me show you some of the Eye-Lock Room Guard's cool features!!

Back View of Eye-Lock Room Guard

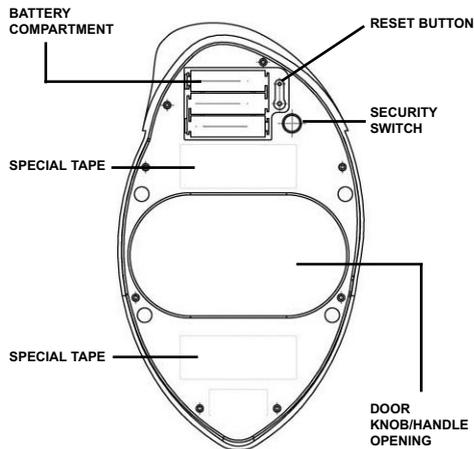

Front View of Eye-Lock Room Guard

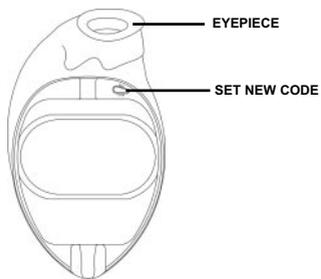

EYEPIECE – When you press your eye against the EYEPIECE, you'll be asked to enter your Eye Code using the flashing lights you'll see inside. Just make sure your eye stays firmly pressed against the EYEPIECE while you enter your code.

SET NEW CODE – With the Eye-Lock Room Guard open, you can enter a new Eye Code by pressing your eye against the EYEPIECE, then press this button.

SECURITY SWITCH – This switch is activated if the Eye-Lock Room Guard is removed from the door. If the correct code wasn't entered before Eye-Lock Room Guard is removed from the door, the alarm sounds and one intruder will be recorded.


RESET BUTTON - Using a pointed object, press this button to reset the Eye-Lock Room Guard and delete your old Eye Code.

GETTING STARTED

Once you remove your Eye-Lock Room Guard from its package, you will need to install the batteries. **NOTE:** Eye-Lock Room Guard requires three (3) AA batteries.

INSTALLING YOUR EYE-LOCK ROOM GUARD

Helpful Hint: Before attaching your Eye-Lock Room Guard permanently, try holding your room guard into place and close the door to make sure that you have not placed it too far to the right or left side.

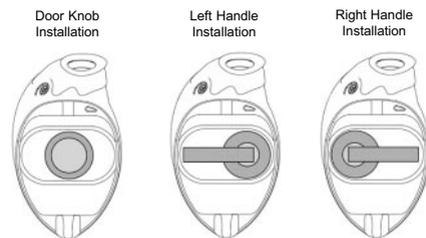

First place the Eye-Lock Room Guard over the door knob/handle to see how it will fit on your door. You will attach your Eye-Lock Room Guard to the door by placing it over the doorknob, using the special tape attached to the back. All you have to do is remove the paper backing from the special tape, allowing the adhesive to be exposed. Line the oval

opening of your Eye-Lock Room Guard even with the top of the door knob or handle. Firmly press your Eye-Lock Room Guard to the door and **finally, privacy is yours!**

NOTE: Your Eye-Lock Room Guard will work on most door knobs or door handles and the special tape allows for removal in an emergency.

SETTING YOUR EYE CODE

After you install the Eye-Lock Room Guard, the next thing you need to do is create your very own Eye Code. This is really easy!

Press your eye firmly against the EYEPIECE. The Eye-Lock Room Guard will then ask for your Eye Code.

When you look inside the EYEPIECE you'll see a small yellow light. Beside it, another light will blink in a looping series of orange, red and green. To set your Eye Code, all you have to do is wink when a certain color flashes. Your code will consist of three different winks.

It can be: "red, red, green," or "red, orange, green," or "green, green, green," or any other combination of three winks.

NOTE: Make sure you keep your eye firmly against the EYEPIECE. Sometimes, when you move your eye away from the EYEPIECE, it will cause an error and you will be asked to try again.

After you've entered your code, the Eye-Lock Room Guard will ask you to enter it again to confirm your code.

USING YOUR EYE CODE


Entering your special Eye Code is even easier than creating it! All you do is press your eye firmly against the EYEPIECE, and the Eye-Lock Room Guard will ask for your Eye Code. Wink in the code you created, and the Eye-Lock Room Guard will let you know if it has been accepted. Once your code has been accepted, the Eye-Lock Room Guard will open without sounding the alarm.

NOTE: The Eye-Lock Room Guard gives you three chances to enter the correct code. If you don't enter the correct code after three

tries, the alarm will sound and the Eye-Lock Room Guard will record *one* intruder. If you are having trouble entering your Eye Code, try to make your blink more definite so your Eye-Lock Room Guard will recognize your choice.

CHANGING YOUR EYE CODE

Let's face it, little brothers are nosy so you may need to change your Eye Code. Eye-Lock Room Guard makes it really easy! All you have to do is press your eye against the EYEPIECE and press the SET CODE button.

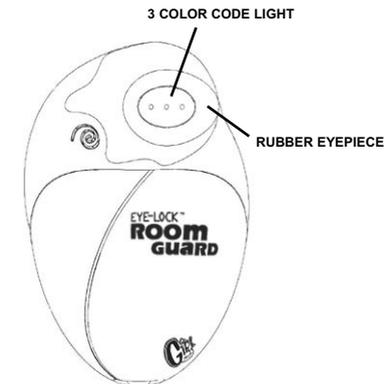

INTRUDERS

The Eye-Lock Room Guard does something else really cool besides keeping out unwanted guests (or little brothers). The Eye-Lock Room Guard will automatically let you know if anyone has tried to enter a code or if anyone has removed the Eye-Lock Room Guard from your door.


After you enter your correct code, the Eye-Lock Room Guard will tell you if there have been one to five intruders since you last entered your code. If someone has tried to access the Eye-Lock Room Guard more than five times, the Eye-Lock Room Guard will tell you there have been more than five intruders.

NOTE: If someone enters a wrong Eye Code more than three times, an alarm sounds and the Eye-Lock Room Guard records one intruder. The alarm also sounds and is recorded as one intruder, if someone removes the Eye-Lock Room Guard from the door without using the correct code.

RESETTING YOUR EYE-LOCK ROOM GUARD

To reset your Eye-Lock Room Guard, open the battery compartment door located on the back. Using a pointed object press the RESET button. This will clear any previously entered Eye Codes and will allow you to set a new Eye Code.

Battery Compartment

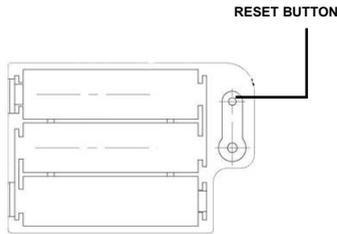

Helpful Hint: If your Eye-Lock Room Guard is not working correctly or you have forgotten your code, press the RESET button and reenter your Eye Code. If your Eye-Lock Room Guard is still not working correctly, you might need to change the batteries.

BATTERY INSTALLATION

This device is powered by three (3) AA batteries.

- Using a screwdriver, loosen the screw until the battery compartment door on the back can be removed.
- Insert three (3) AA batteries (we recommend alkaline) as indicated inside the battery compartment.
- Replace the battery compartment door and tighten the screw with a screwdriver. Do not over-tighten.

ADULT SUPERVISION IS RECOMMENDED WHEN CHANGING BATTERIES.

CAUTION:

- **As with all small batteries, the batteries used with this device should be kept away from small children who might still put things in their mouths. If a battery is**

swallowed, consult a physician immediately.

- **Be sure you insert the battery correctly and always follow the device and battery manufacturer's instructions.**
- **Do not dispose of batteries in fire.**
- **Batteries might leak if improperly installed, or explode if recharged, disassembled or heated.**

MAINTENANCE:

- Handle this device carefully.
- Store this device away from dusty or dirty areas.
- Keep this device away from moisture or extreme temperature.
- Do not disassemble this device. If a problem occurs, press the RESET button, or remove and replace the batteries to reset the device, or try new batteries. If problems persist, consult your warranty card for replacement instructions.
- Use only the recommended battery type.
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries.
- Do not use rechargeable batteries.
- Do not attempt to recharge non-rechargeable batteries.
- Remove any exhausted batteries from the device.
- Do not short-circuit the supply terminals.
- Insert batteries with the correct polarity.

Please retain this for future reference.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must

accept any interference received, including interference that may cause undesired operation.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help.



EYE-LOCK™
Room
Guard



Model G72028
For 1 player / Ages 8 and up
INSTRUCTION MANUAL

P/N 82364900 Rev.A

RADICA:®
GIRL TECH®
EYE-LOCK IS A TRADEMARK OF RADICA GAMES LTD.
© 2001 RADICA GAMES LTD.
PRODUCT SHAPE™
ALL RIGHTS RESERVED

U.S. Customer Support Line: 1-800-803-9611
www.girltech.com