

 


USER'S MANUAL

Keep this USER'S MANUAL for future reference as it contains important information.

BATTERY INSTALLATION

- The battery compartment is located on the back of the guitar.
- Unscrew and lift the cover away from the battery compartment.
- Insert 4 "C" batteries into the compartment as shown.
- For longest life and best performance use only alkaline batteries.
- Replace the battery compartment cover as shown.

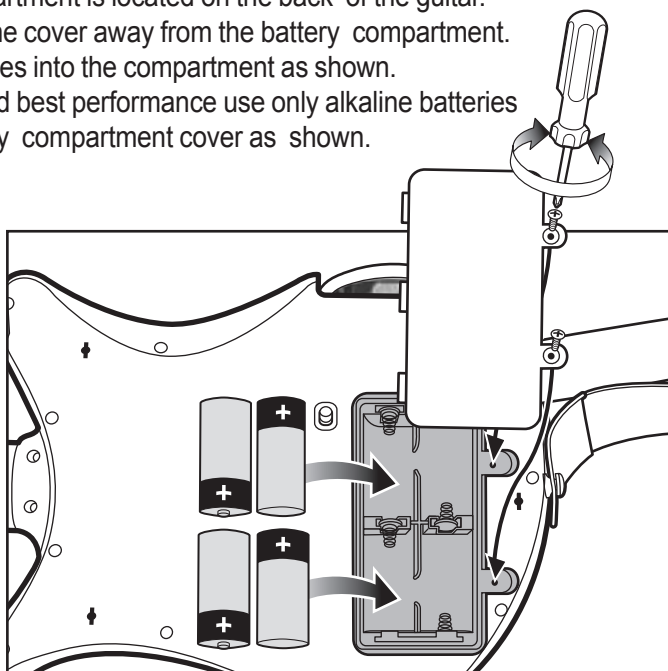


BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage;

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

 BUTTONS & SWITCHES

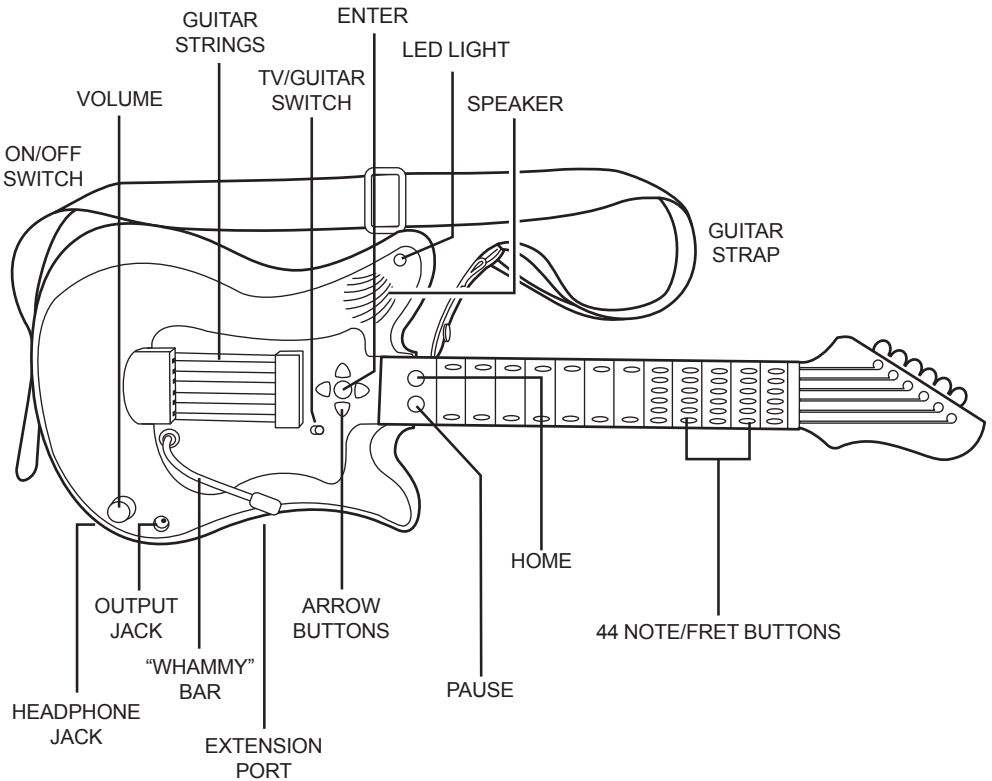


PARTS

SOFTWARE CARTRIDGE



 3 GUITAR PICKS

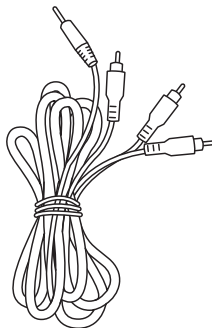

12' RCA CABLE



STICKERS

BUTTONS & SWITCHES

ARROW BUTTONS:

- **UP** - navigate through the menus; increase tempo during song play.
- **DOWN** - navigate through the menus; decrease tempo during song play.
- **FORWARD** - advance to the next screen or level if level is “unlocked” during **TV PLAY**; change guitar sounds in **GUITAR PLAY**.
- **BACK** - move back to the previous screen or level during **TV PLAY**; change guitar sounds in **GUITAR PLAY**.

ENTER - select your choices from the menus.

TV/GUITAR SWITCH – choose between **TV PLAY** and **GUITAR PLAY**.

PAUSE – stop the software briefly during **TV PLAY**.

HOME – return to the main menu from any point during **TV PLAY**.

VOLUME – controls the volume of the guitar during **GUITAR PLAY**. Also controls the volume of your headphones when plugged into the guitar during **GUITAR PLAY** and **TV PLAY** (headphones not included). NOTE: This knob does not control the volume on your TV.

“WHAMMY” BAR – distorts the pitch of the guitar notes.

OUTPUT JACK – used for connecting the guitar to your TV via the **12’ RCA cord**.

SPEAKER – for Guitar play. In TV play, all audio is heard through your TV speakers.

HEADPHONE JACK - (Headphones not included).

EXTENSION PORT – for connecting future additional hardware (to be sold separately).

GUITAR STRINGS – for strumming and to play individual notes, depending on the game; plays individual notes during **GUITAR PLAY**.

ON/OFF SWITCH - found on the back of the guitar.

44 NOTE/FRET BUTTONS.

PARTS

GUITAR STRAP

3 GUITAR PICKS

12’ RCA CABLE

 
SOFTWARE CARTRIDGE

STICKERS – to decorate your guitar any way you want!

SET-UP

IMPORTANT!


Before you begin play, be sure the software cartridge is fully inserted into the guitar as shown.

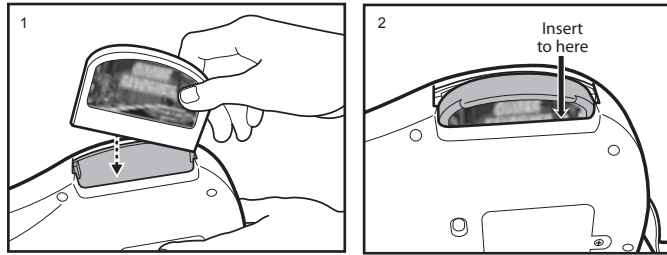

- Insert the 12' RCA cable that came with your *I CAN PLAY*™ GUITAR into the guitar, as shown. Please make sure it is inserted completely.
- Connect the other end of the cable to the color-coded inputs (red, white, and yellow) found on the front or back of your TV.

(NOTE: For older TV models, a separate purchase of an RF Modulator may be required.)

 
- Turn on your TV.
- Set the channel using your remote control or the buttons on your TV to one of the following settings which are usually found below channel 2:

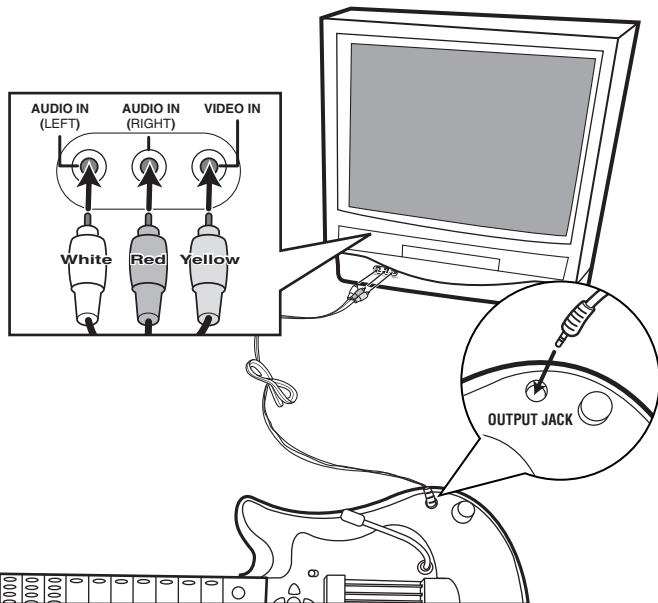

- AUX
- LINE IN
- INPUT
- SOURCE

- Slide the ON/OFF switch on the bottom of the guitar to the ON position.

 NOTE: If the guitar is not functioning after performing the above steps, make sure the cartridge is fully inserted until it clicks into place, and then reset the ON/OFF switch.

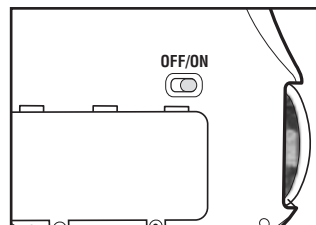

HOW TO PLAY

There are 2 ways to play *I CAN PLAY™ GUITAR*:

- **TV PLAY**

 
Play songs and games on your TV screen.

- **GUITAR PLAY**

Play with the guitar away from your TV.

TV PLAY

Set the TV/GUITAR SWITCH to the “TV” position.

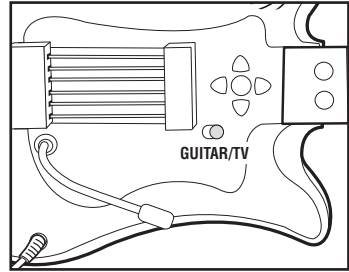

After turning on your TV and guitar, you will see several introductory screens followed by the MAIN MENU.

- **Road to Rock Game:**

Teaches you how to properly play your guitar.

- **Play a Song:**

Teaches you how to play songs using 3 different playing levels:

1. Right hand play
2. Left Hand play
3. Both hands



As you play and learn, you will be shown your score.

To advance to the next level, you have to achieve a score of 75% or more.

If you do not score 75%, you can play that level again.

Scoring a 75% or more also allows you to win onscreen collectible “prizes”!

- **Jam Session:**

Allows you to use all you have learned by playing free-style with a background track.

Select one of the choices from the MAIN MENU using the UP and DOWN arrows. Then press ENTER.

NOTE:

 
When you are finished, the game you are playing will be saved. The next time you begin play, you will be asked if you want to start a NEW GAME or continue playing your LAST GAME.



GUITAR PLAY

In addition to playing games on your TV, *I CAN PLAY™ GUITAR* can also be used as a stand-alone guitar.

- Simply disconnect the cable from your TV and the unit will play like a regular guitar.
- Set the TV/GUITAR SWITCH to the “GUITAR” position.
- Adjust the speaker volume with the VOLUME control.
- Choose between acoustic and electric guitar sounds using the left and right arrow buttons.

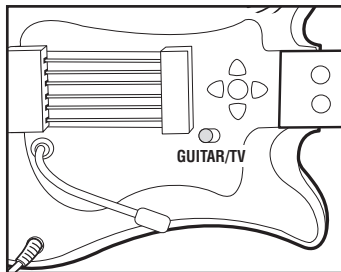

NOTE: A software cartridge must still be inserted into the guitar in order for GUITAR PLAY to function.

BATTERY SAVE MODE

If the guitar is not played with for more than five minutes, it will automatically shut-off to preserve battery life. To resume play, press any of the following buttons: UP, DOWN, LEFT, RIGHT, ENTER, HOME, or PAUSE. Switching the power switch to OFF and then back ON will also restart the guitar.

GUITAR FAVORITES

SMOKE ON THE WATER

Jon Lord, Ian Paice, Ian Gillan, Roger Glover and Ritchie Blackmore

©1972 Renewed 2000 B.Feldman & Co Ltd t/as HEC Music All Rights for the United States and Canada Controlled and Administered by Glenwood Music Corp. (ASCAP)

All Rights Reserved. International Copyright Secured. Used By Permission.

LA BAMBA

Ritchie Valens

©1958 Renewed 1986 EMI Longitude Music and Valens Heirs Designee.

All rights for the United States controlled & administered by EMI Longitude Music (BMI).

All rights reserved. International copyright secured. Used by permission.

MY GIRL

Smokey Robinson and Ronald White

©1964 Renewed 1992 Jobete Music Co., Inc.

All Rights Controlled and Administered by EMI April Music Inc. (ASCAP)

All Rights Reserved. International Copyright Secured. Used by Permission.

ALL STAR

Greg Camp

©1999 Warner-Tamerlane Publishing Corp. (BMI) and Squish Moth Music (BMI)

All Rights Administered By Warner-Tamerlane Publishing Corp.

All Rights Reserved. Used By Permission.

APACHE

Regent

Jeremiah Lordan

©1960 renewed Regent Music Corp. (BMI)

FCC NOTE (UNITED STATES ONLY)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Mattel Inc. 333 Continental Blvd. El Segundo, CA (310) 252-2400

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Due to possible surrounding electrostatic discharge, this product may malfunction and would require the user to reset the product by switching the main power off and then on again.



CONSUMER ASSISTANCE
Call toll free: 1-800-432-5437 (US & Canada only)
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

service.fisher-price.com

Write to us at: Fisher-Price® Consumer Relations,
636 Girard Avenue, East Aurora, New York 14052.
Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

PRINTED IN CHINA.

Manufactured for Fisher-Price. ©2007 Mattel, Inc. All Rights Reserved.
® and ™ designate U.S. trademarks of Mattel, Inc., unless otherwise indicated.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.
Great Britain: Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303.
www.service.mattel.com/uk

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria. 3121 Australia.
Consumer Advisory Service - 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Asia: Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.



K7357/L6356

K7357/L6356-0920 G2