


**CONSUMER INFORMATION**  
 Need Assistance? Visit [service.mattel.com](http://service.mattel.com) or call 1-800-524-8697 (US and Canada only), M-F 9AM - 7PM & SAT 11AM - 5PM, Eastern.  
**SERVICE.MATTEL.COM**

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at/ Composez sans frais le 1-800-524-8697.  
 Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB.  
 Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312.  
 Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.  
 Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.  
 Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A. Consumer Relations 1 (800) 524-8697.

**Contents:** Colors and decorations may vary from those shown. Please remove everything from the package and compare to the contents shown here. If any items are missing, please contact your local Mattel office. Keep these instructions for future reference as they contain important information.


**WARNING:**  
 CHOKING HAZARD - Small parts.  
 Not for children under 3 years.

# Assembly

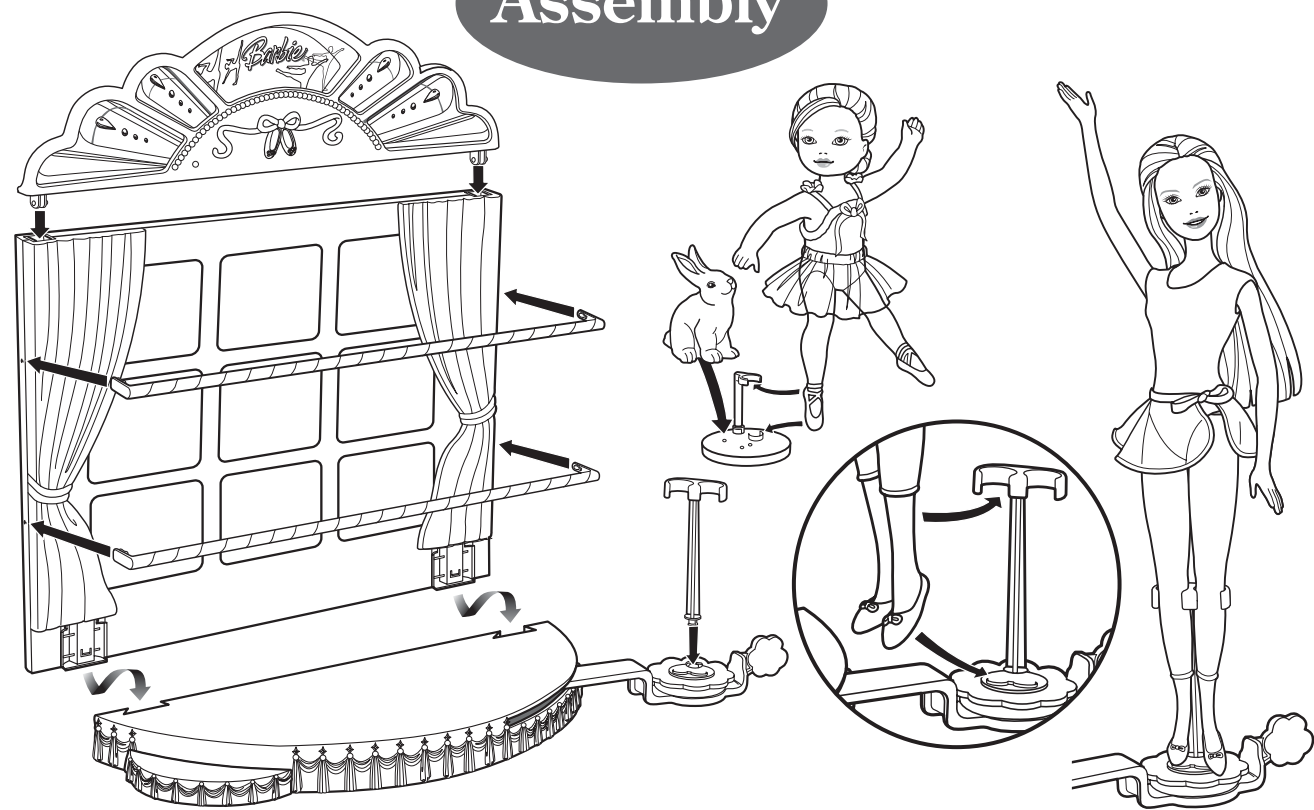

# Play Time!

The base of the small doll stand and the end of the "dance wand" located under the stage contain magnets. Do not use around items that are sensitive to or affected by magnetic fields.


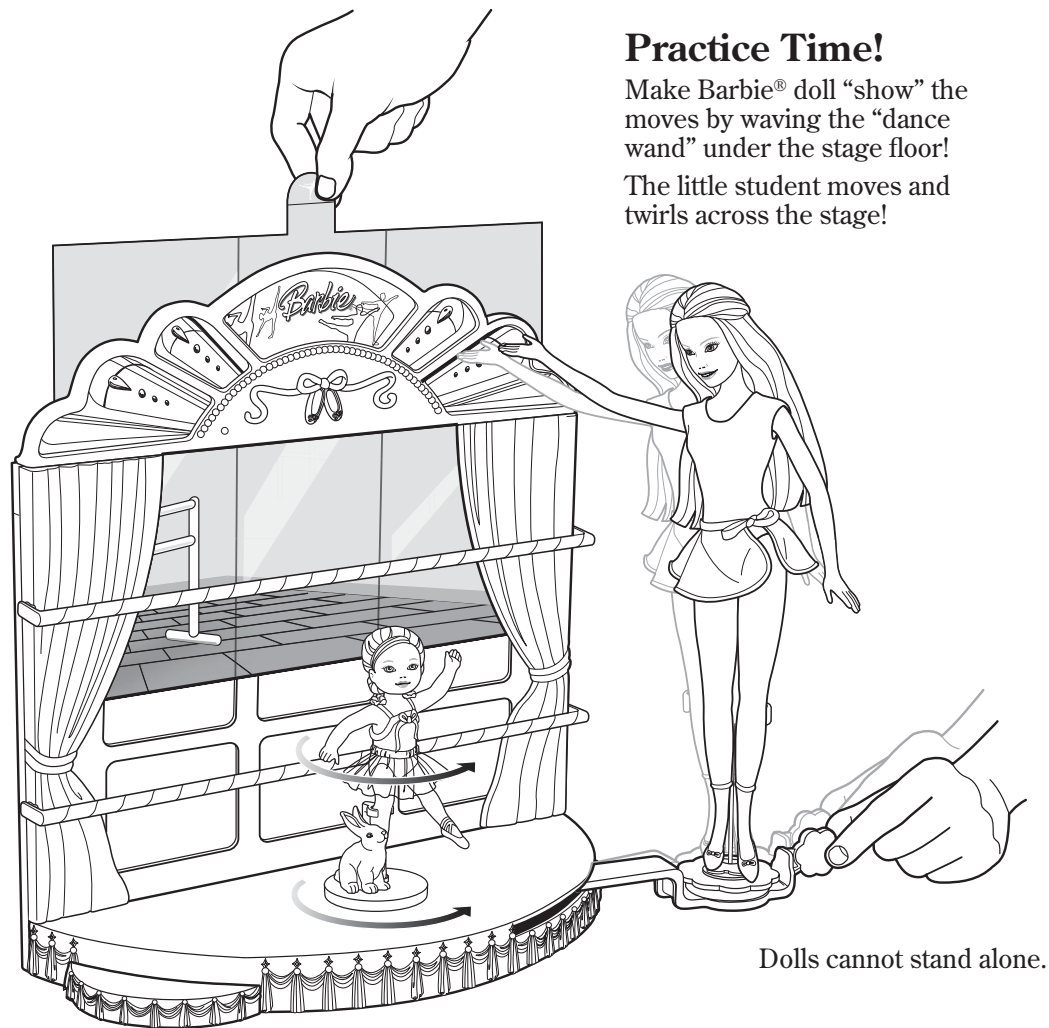


## Practice Time!

Make Barbie® doll "show" the moves by waving the "dance wand" under the stage floor!  
The little student moves and twirls across the stage!

Dolls cannot stand alone.

Change the scene from practice time to performance time!

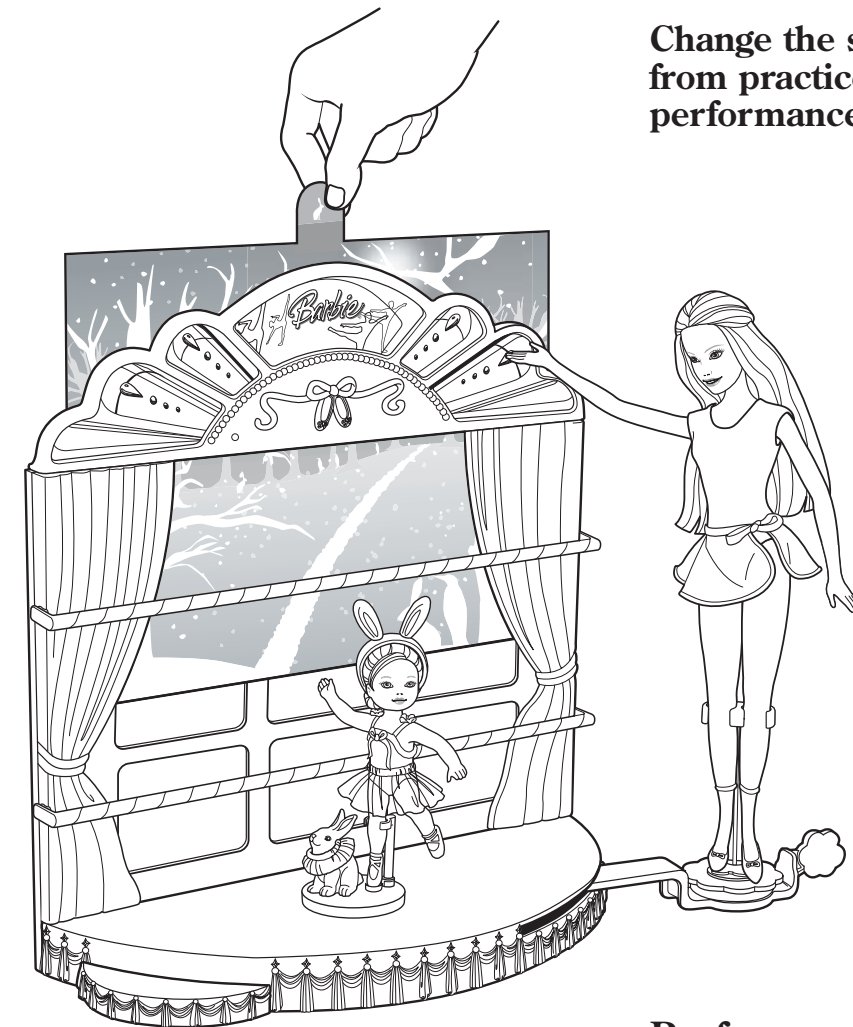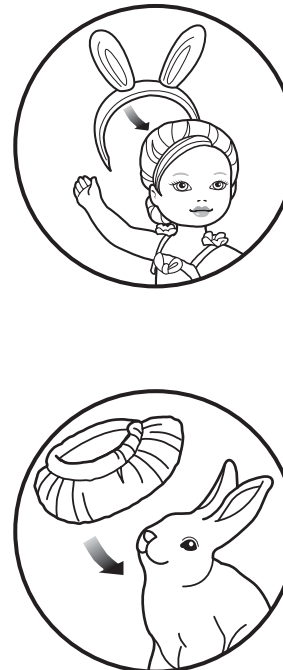

## Performance Time!

Let's put on a show!

