

**Fisher-Price®**

[www.fisher-price.com](http://www.fisher-price.com)

L5897









**GeoTrax**  
Rail & Road System

# Parts

- A. 2 Arched Overhangs
- B. 2 Overhangs
- C. Cross Track
- D. Chimney
- E. Base
- F. Tower

Part not shown: 1 Figure

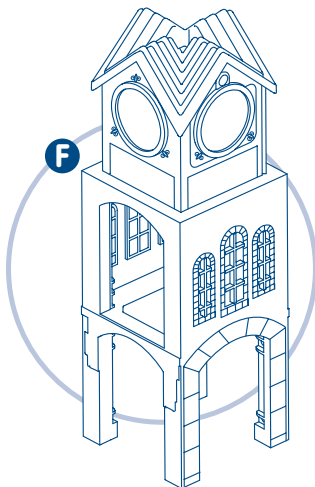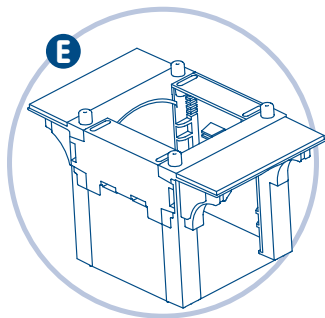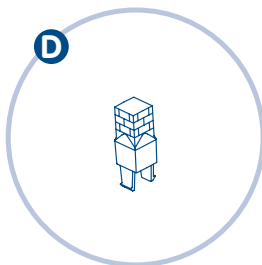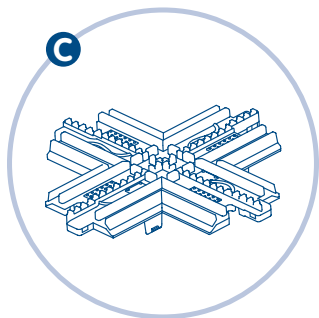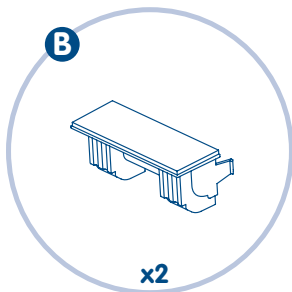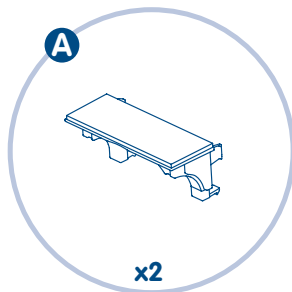


## Battery Installation

- Locate the battery compartment on the clock tower.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three "AAA" (LR03) **alkaline** batteries.  
**We recommend the use of alkaline batteries for longer battery life.**
- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When sounds become faint or stop, it's time for an adult to change the batteries.



- Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

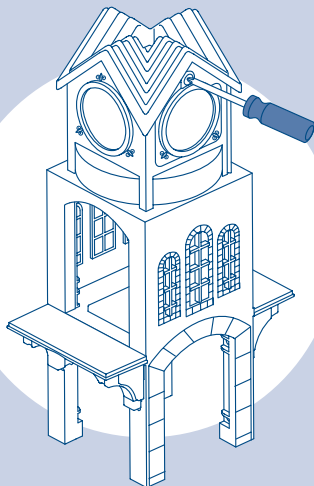


## Battery Safety Information




In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your toy. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of the product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.


# Assembly

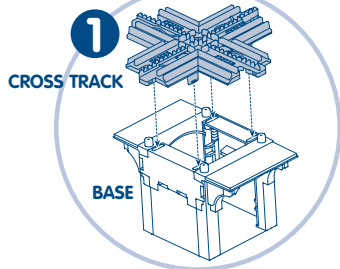

- "Snap" the cross track into the base.

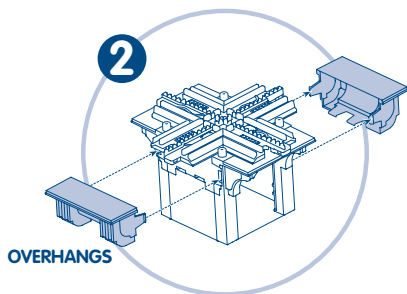


- "Snap" the overhangs into the base, as shown.

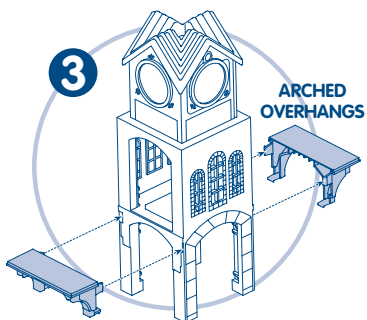

- "Snap" the arched overhangs into the tower, as shown.




- "Snap" the chimney into the top of the tower.

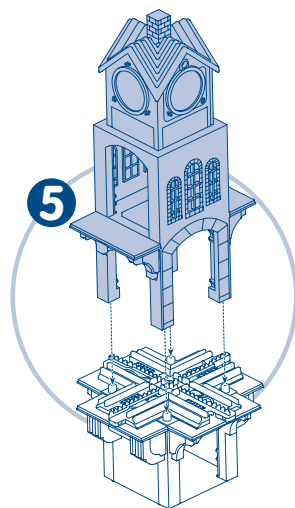


- Place the tower onto the base assembly.  
**Assembly is now complete!**

# Chimes & Music!

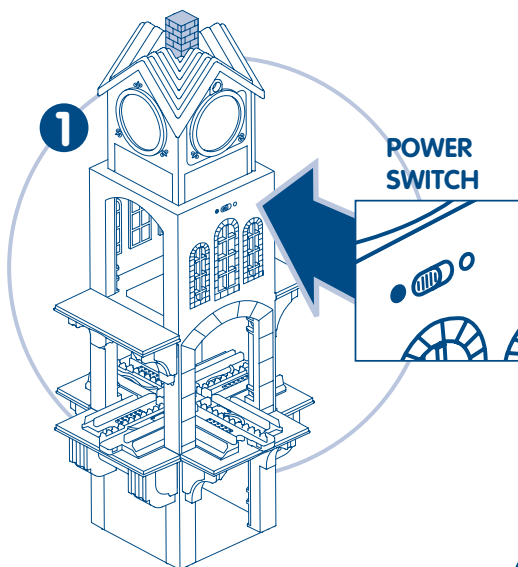


- Locate the power switch near the top of the tower.
- Slide the switch to ● to turn the toy on or to ○ to turn the toy off.

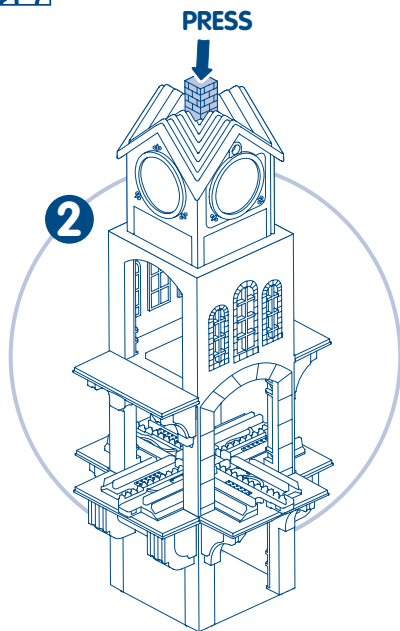

- Press the chimney to activate the tower.

# Chimes & Music!

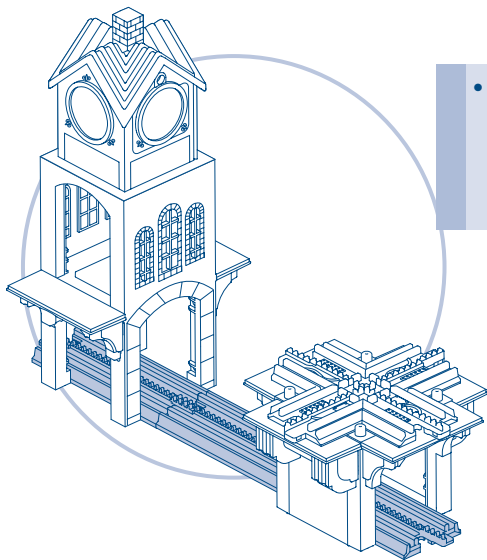

- You do not need an Elevation Track Pack™ (sold separately) for chimes and music. Simply separate the tower into two parts, so the middle level is now at ground level. When a train goes through, you'll hear chimes and music.

- When the train goes through the middle level of the tower, you'll hear chimes and music.



**Hint:** If the a train does not pass through the clock tower after a few minutes, the tower turns off automatically and plays a chime. Press the chimney again to turn the tower back on.

**IMPORTANT!** The clock tower sound effect feature is activated by contrast in lighting. This feature may not work if the toy is in very bright light or direct sunlight. Please keep the clock tower out of bright light or direct sunlight.

# Three Levels of Track Layouts!

LEVEL

1




- To build a layout on the bottom level, just place a straight track (not included) through the bottom arch of the tower.

- Use an Elevation Track Pack (sold separately) to access the second and third levels of the tower.
- Attach a ramp assembly (sold separately) to the middle level to reach the ground.
- Use supports and straight tracks (sold separately) to build an elevated assembly.

LEVEL


2

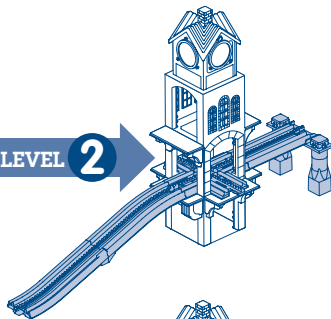

- Attach a ramp assembly to a support (each sold separately) to reach the third level.
- Use two supports stacked up and straight tracks (each sold separately) to build an elevated assembly.

LEVEL

3

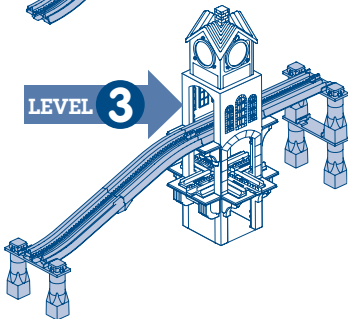

## FCC Statement

### United States Only

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

# Fisher-Price®



**Visit [www.fisher-price.com](http://www.fisher-price.com) to see  
the entire world of GeoTrax® accessories!**

Please keep this instruction sheet for future reference,  
as it contains important information.

Requires three "AAA" (LR03) **alkaline** batteries (not included).

Adult assembly is required.

Tool required for battery installation: Phillips screwdriver (not included).

Wipe the toy with a clean, damp cloth. Do not immerse.



## CONSUMER ASSISTANCE

Call toll free: 1-800-432-5437 (US & Canada only)  
M-F 9AM to 7PM / SAT 11AM to 5PM (EST)

**service.fisher-price.com**

Write to us at: Fisher-Price® Consumer Relations,  
636 Girard Avenue, East Aurora, New York 14052.

Hearing-impaired consumers using TTY/TDD equipment,  
please call 1-800-382-7470.

For countries outside the United States:

Canada: Mattel Canada Inc., 6155 Freemont Blvd.,  
Mississauga, Ontario L5R 3W2; [www.service.mattel.com](http://www.service.mattel.com).

Great Britain: [Mattel UK Ltd, Vanwall Business Park,  
Maidenhead SL6 4UB, Helpline: 01628 500303,  
\[www.service.mattel.com/uk\]\(http://www.service.mattel.com/uk\)](http://MattelUKLtd.VanwallBusinessPark.MaidenheadSL64UB)

Australia: Mattel Australia Pty. Ltd., 658 Church Street,  
Locked Bag #870, Richmond, Victoria 3121 Australia.  
Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive,  
Albany 1331, Auckland.

Asia: Mattel East Asia Ltd, Room 1106, South Tower,  
World Finance Centre, Harbour City, Tsimshatsui, HK, China.