 


## Battery Replacement

Batteries included are for demonstration purposes only. Replace batteries when sound or image becomes distorted.

For longer life use only alkaline batteries. Toy requires 2 replaceable AAA/LR03 alkaline batteries. When the "BATTERIES LOW" symbol shows on screen, change batteries within 2 minutes or game progress will be lost. To replace batteries, use a Phillips head screwdriver (not included) to open battery door. Insert 2 AAA/LR03 alkaline batteries as shown. Use either AAA/LR03 alkaline batteries or equivalent. Replace battery cover and screw closed.

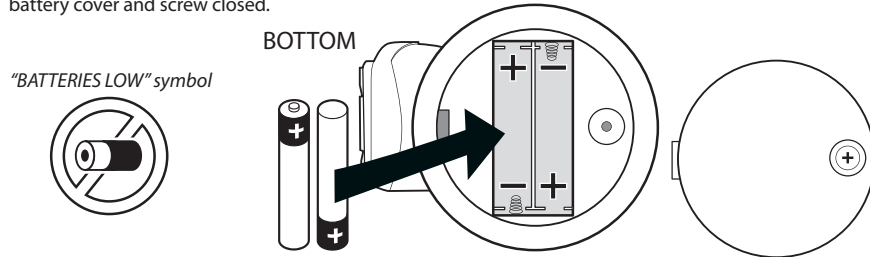

## Battery Safety Information

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

• NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.

CET APPAREIL NUMÉRIQUE DE LA CLASSE B EST CONFORME À LA NORME NMB-003 DU CANADA.

(VALID FOR CANADA ONLY • VALABLE AU CANADA SEULEMENT)

Operation is subject to the following two conditions:  
(1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

 
L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes:

(1) Il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.

# MY meebas™

## INSTRUCTIONS

### CONTENTS

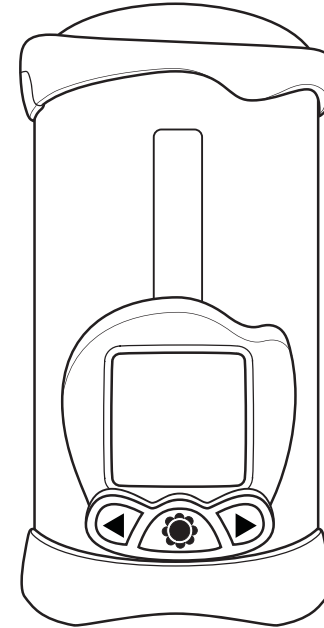

Batteries included are for demonstration purposes only. Requires 2 AAA (LR03) alkaline batteries.

## We listen to you!

We want you to have fun playing with our products.  
Please give us your feedback by filling out the short on-line survey. Go to:  
[secure.mattel.com/surveys](http://secure.mattel.com/surveys)

Thanks for helping us make great toys even better!

English-only site. • Sitio web en inglés. • Site Web en anglais uniquement. • Site na Internet disponível apenas em inglês.

Please remove everything from the package and  
compare to the contents shown here.

If any items are missing, please call 1-800-524-8697.

Keep these instructions for future reference as they contain important information.

©2008 Mattel, Inc., El Segundo, CA 90245 U.S.A. All Rights Reserved.

6+



M9188-0920

N2214

N2215

N2216

N2217

N2218

N2219

N8369



Protect the environment by not disposing of this product with household waste (2002/96/EC).  
Check your local authority for recycling advice and facilities.

## CONSUMER INFORMATION

Need Assistance? Visit [service.mattel.com](http://service.mattel.com) or call 1-800-524-8697 (US and Canada only), M-F 9AM - 7PM & SAT 11AM - 5PM, Eastern.

[SERVICE.MATTEL.COM](http://SERVICE.MATTEL.COM)

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697.

Mattel U.K., Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.

Mattel Australia Pty., Ltd., Richmond, Victoria 3121. Consumer Advisory Service 1300 135 312 (valid only in Australia).

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

 
Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410

# A cuddly surprise waits inside!

## BUTTONS



\*Artwork on center ACTION button may vary.

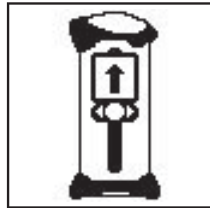



## START

1. Press any of the 3 buttons to turn on.
2. Move screen down to lowest position and hold it there for 2 seconds to exit "TRY ME" mode.
3. Then move screen up to top position to calibrate device and begin playing.



## EXPLORE

  4. Slide screen up and down to move MyMeebas™ and explore its environment.
5. Use the LEFT or RIGHT buttons to move MyMeebas™ side to side and to reach a Hot Spot.
6. To find a Hot Spot, move MyMeebas™ towards it, and you will see a flashing light and hear a bell sound. Press the ACTION button to enter a Hot Spot.

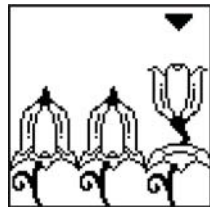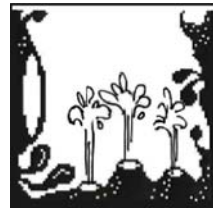

## GAMES

Swim to the left side for fun games.



## NURTURE

 
Swim to the right side for fun activities.



## STATS

At any time, you can check how MyMeebas™ is doing. Move the screen all the way up to the top to the heart-shaped hot spot at the top of the screen. Press the ACTION button, and enter STATS.

There is a kissing sound, and the STATS screen appears. You will see how MyMeebas™ is doing. Move the screen up and down to see how MyMeebas™ has evolved. Next to the different evolutions, there may be hearts. The number of hearts next to each character shows you how MyMeebas™ is doing. You can earn up to 5 hearts per evolution.

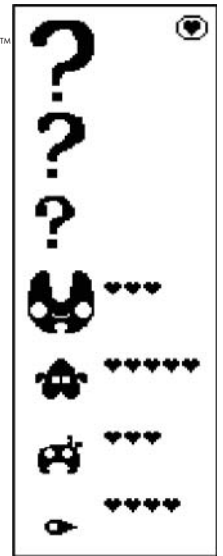

Complete all levels to unlock your tube.




## EVOLVE

 You earn hearts by playing games and activities. When you have earned 3 hearts, you can choose to have MyMeebas™ evolve. You will see MyMeebas™ next to a question mark. Use the RIGHT button to select the question mark, then press the ACTION button to proceed. There will be a "bling" sound and bubbles on the screen when you progress to the next evolution. You can also choose to stay at the current level and continue to earn hearts (up to 5). There are 7 levels to evolve through.

NOTE: Once MyMeebas™ has evolved, you cannot go back to a previous evolution.

My tube ONLY opens when I'm fully GROWN!

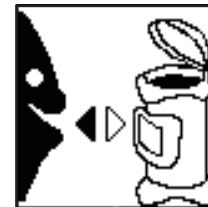

## FINAL MyMEEBAS™

Once MyMeebas™ has completed its evolution, you can choose to open the tube. Your cute creature is revealed!

You can store MyMeebas™ in the tube and play games.

 
NOTE: Top of tube will not open until final evolution of MyMeebas™. The product has limited game play after the MyMeebas™ is revealed and tube is open.

SLEEP MODE: After 30 seconds, the device enters sleep mode automatically.

TURN OFF: Press all 3 buttons at the same time for 3 seconds to power down the device.

Explore the mystery at [mymeebas.com](http://mymeebas.com)

20+ games and activities

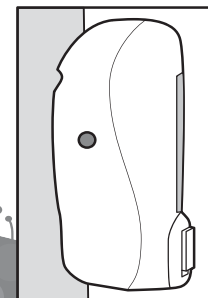

## TROUBLESHOOTING

### RESET BUTTON

When exposed to an electrostatic source, the product may malfunction and suffer memory lost. Reset the product if this occurs. Ask an adult to insert a metal tip, such as a bent paper clip, into the RESET hole. Reset is disabled after tube opens; close the tube before reset.