

This is a battery-operated product. 1 flyer (D0007-1849G6) is required to be placed inside the packaging.

Disney • PIXAR
TOY STORY 3
EVIL DR. PORKCHOP SPACESHIP PLAYSET 5+

INSTRUCTIONS

Please keep these instructions for future reference as they contain important information.

CONTENTS

Mattel, Inc. All Rights Reserved.
Mattel, Inc., 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-900-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty. Ltd., Richmond, Victoria, 3121 Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Oimport & Diedarkan Oleh: Mattel SEA Ptd Ltd (993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867. R2436-0920G1

© Disney/Pixar
SERVICE.MATTEL.COM

BATTERY INSTALLATION

- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Install 3 AAA (LR03) alkaline batteries in the orientation (+/-) shown.
- Replace battery cover and tighten screw.
- For longer life use only alkaline batteries.
- Replace the batteries if sounds distort or lights dim.

BATTERY SAFETY INFORMATION
In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.


ASSEMBLY

TO PLAY

1. TRANSFORMING SPACESHIP

INSTRUCTION SHEET SPECIFICATIONS

Toy: Toy Story 3 Evil Dr. Porkchop Spaceship Playset
Toy No.: R2436
Part No.: 0920G1
Trim Size: 594x210mm
Folded Size: A5
Type of Fold:
colors: 1C/1C
Colors: Black
Paper Stock: White Offset
Paper Weight: 70 lb.
EDM No.:

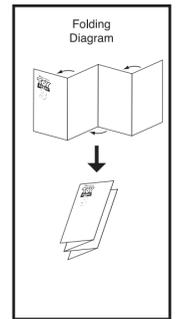

2. WORKING ELEVATOR

Works with most Buddy Pack figures.

3. ROTATING WINGS

4. POP-OPEN PRISON CHAMBERS OR

5. ZIP RAMP

6. OPENING COCKPIT

7. ROCKET LAUNCHER

Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range.

8. LASER LIGHTS & SOUNDS

I=ON
O=OFF
If the toy malfunctions, turn the switch to off and on again.

9. SECRET ESCAPE POD

STORAGE