 




Please keep these instructions for future reference as they contain important information.

BEFORE YOU BEGIN

- Remove and discard the "Try Me" pull-tab, located on Mickey's right foot next to the battery compartment. Once the TRY ME pull tab is removed, the toy will perform its full play pattern as described below.
- Be sure the ON/OFF switch is in the ON position. The ON/OFF switch is also located on Mickey's right foot, next to the battery compartment.

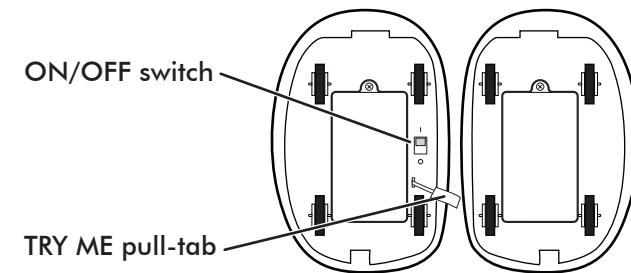

HOW TO PLAY

There are 2 places where you can press Mickey to begin play:

- LEFT HAND
- LEFT FOOT

Press either place to begin play.

There are 2 ways to play with Dance Star Mickey:

DANCE MODE

 
Press Mickey's foot to see him perform one of 6 different dances!

- TECHNO
- MAMBO
- MOONDANCE
- "SHAKE YOUR GROOVE THING"
- "GET UP OFFA THAT THING"
- "M" TO THE "I"

GAME MODE

Press Mickey's hand to alternate between 2 games:

- Mickey says**
Follow along and repeat Mickey's moves – but only when he says "Mickey says!"
- Freeze dance**
Dance to the beat when Mickey says "Go". When he says "Stop", you freeze in place!

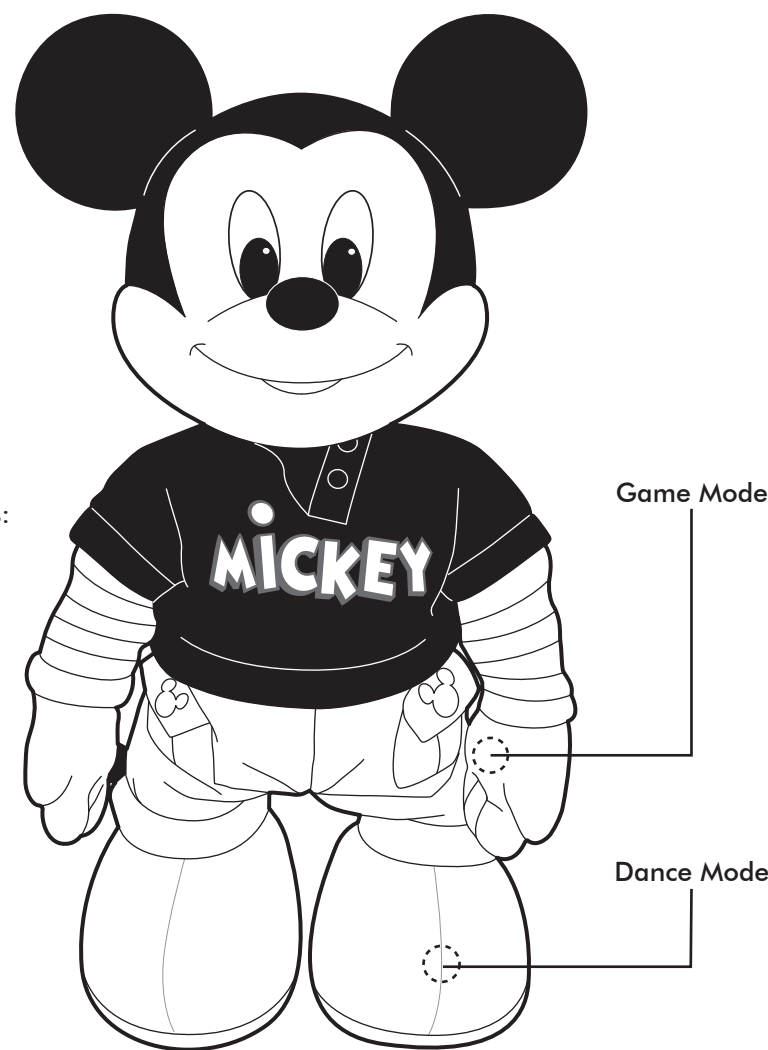


BATTERY SAVE MODE

- If Mickey is not played with for more than 20 seconds he will prompt you to play again.
- If you do not respond, he will automatically shut-off to preserve battery life.
- Press either his hand or foot switch to resume play.


BATTERY INSTALLATION

BATTERY INSTALLATION:

 Unscrew and lift cover away from bottom of product. Replace batteries as indicated inside the battery compartment. Batteries included are for demonstration purposes only. For longer life use only alkaline batteries. Requires 6 "AA" (LR6) batteries.

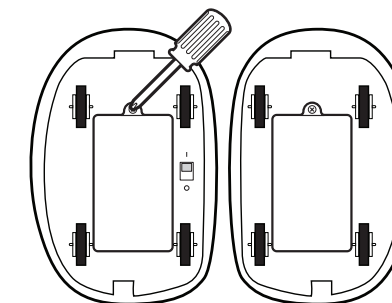

 Required tool: Phillips screwdriver (not included)



BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your toy (product). To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
- THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003.
- CET APPAREIL NUMERIQUE DE LA CLASSE B EST CONFORME A LA NORME NMB-003 DU CANADA.
- Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
- L'utilisation de ce produit est sujette aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities (Europe only).

"GET UP OFFA THAT THING"
(DEANNA BROWN, DEIDRA YVONNE JENKINS AND YAMMA BROWN)
© 1976 (RENEWED) DYNATONE PUBLISHING COMPANY (BMI)
ALL RIGHTS ADMINISTERED BY UNICAPPELL MUSIC INC.
ALL RIGHTS RESERVED. USED BY PERMISSION.

SHAKE YOUR GROOVE THING
FREDERICK J. PERREN, DINO FEKARIS
UNIVERSAL - POLYGRAM INT. PUBL., INC. on behalf of itself
and PERREN-VIBES MUSIC, INC.
(ASCAP)
© 1978



Fisher-Price, Inc., 636 Girard Avenue, East Aurora, NY 14052.
Hearing-impaired consumers: 1-800-382-7470.

Outside the United States:
Canada: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.
Great Britain: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB, Helpline: 01628 500303. www.service.mattel.com/uk
Mattel Europa, B.V., Gonde 1, 1186 MJ Amstelveen, Nederland.
Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.
New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

© Disney
Visit the Disney Web site at www.disney.com
Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

PRINTED IN CHINA.
Manufactured for Fisher-Price.
©2010 Mattel, Inc. All Rights Reserved.
© and ™ designate U.S. trademarks of Mattel, Inc., unless otherwise indicated.

Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsingshatsui, HK, China.

ID. V0797-0920

V0797



Item : V0797-0920
Version : EL
Size : A4
Paper : Woodfree Paper 80 gsm
Color : 1C
Date : May 17, 2010 (WC)