
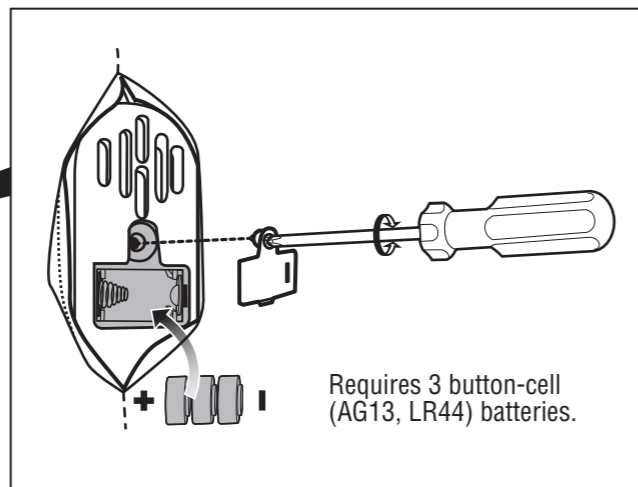


BATTERY INSTALLATION

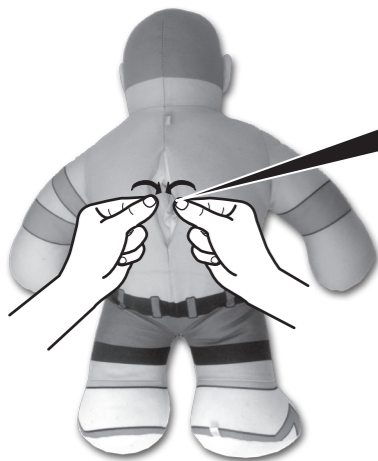

- Open the fastener to reveal the battery compartment.
- Unscrew the battery cover with a Phillips head screwdriver (not included).
- Remove batteries included for demonstration purposes and dispose of them safely.
- Install 3 new button-cell (AG13, LR44) batteries in the orientation (+/-) shown.
- Replace battery cover and tighten screw.
- Close the fastener to cover up the battery compartment.
- For best performance, use only alkaline batteries.
- Replace batteries if sounds play slowly or distort.

BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

©2011 Mattel. All Rights Reserved.

Mattel, Inc. 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Consumer Relations 1-800-524-8697. Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628 500303. Mattel Australia Pty., Ltd., Richmond, Victoria. 3121. Consumer Advisory Service - 1300 135 312. Mattel East Asia Ltd., Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China. Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, 13th Floor, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410 PJ. Tel:03-78803817, Fax:03-78803867.

service.mattel.com

W8015-0920
W8016-0920
W8017-0920
W8018-0920
Asst. W8014



This is a battery-operated product.
1 flyer (00007-1849G6) is required
to be placed inside the packaging.

BRAWLIN' Buddies™

BRAWLIN' BUDDIES™

INSTRUCTIONS 3+

Please keep these instructions for future reference as they contain important information.

CONTENTS THIS PACK INCLUDES 1 FIGURE.



JOHN CENA®
W8015



REY MYSTERIO®
W8016



RANDY ORTON™
W8017



SHEAMUS™
W8018

All WWE programming, talent names, images, likenesses, slogans, wrestling moves, trademarks, logos and copyrights are the exclusive property of WWE and its subsidiaries. All other trademarks, logos and copyrights are the property of their respective owners. ©2011 WWE. All Rights Reserved.

INSTRUCTION SHEET SPECIFICATIONS

Toy: MONEY IN THE BANK RING
Toy No.: W8014
Part No.: 0920
Trim Size: A5
Folded Size: _____
Type of Fold: _____
colors: One
Colors: Black
Paper Stock: White Offset
Paper Weight: 70 lb.
EDM No.: _____