 


## BATTERY REPLACEMENT

Batteries included are for demonstration purposes only. Requires 4 AAA (LR03) alkaline batteries.

Toy uses 4 replaceable AAA (LR03) alkaline batteries. When "BATTERIES LOW" shows on screen, change batteries

within 3 minutes. To replace batteries, use a Phillips head screwdriver (not included) to open battery door. Remove and set aside. Insert 4 replaceable AAA or LR03 alkaline batteries as shown. Use either AAA or LR03 alkaline batteries or equivalent. Replace battery cover and screw closed.

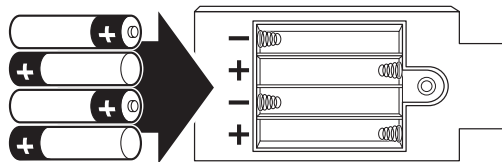

## BATTERY SAFETY INFORMATION

In exceptional circumstances batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before being charged (if designed to be removable).
- Rechargeable batteries are only to be charged under adult supervision (if designed to be removable).
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

- Do not mix old and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of battery(ies) safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by consulting the dealer or an experienced radio/TV technician for help.

Mattel Inc.  
333 Continental Blvd.  
El Segundo, CA  
(310) 252-2400

NOTE: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

THIS CLASS B DIGITAL APPARATUS COMPLIES WITH CANADIAN ICES-003. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.  
CET APPAREIL NUMERIQUE DE LA CLASSE B EST CONFORME A LA NORME NMB-003 DU CANADA. L'utilisation de ce dispositif est autorisée seulement aux conditions suivantes : (1) il ne doit pas produire de brouillage et (2) il doit pouvoir tolérer tout brouillage radioélectrique reçu, même si ce brouillage est susceptible de compromettre son fonctionnement.



Protect the environment by not disposing of this product with household waste (2002/96/EC). Check your local authority for recycling advice and facilities.

We want you to have fun playing with our products, so please give us your feedback by filling out the short on-line survey. Go to [service.mattel.com/surveys](http://service.mattel.com/surveys)

Thanks for helping us make great toys even better!

English-only site. • Site Web en anglais uniquement.

## CONSUMER INFORMATION

Need Assistance? Visit [service.mattel.com](http://service.mattel.com) or call 1-800-524-8697 (US and Canada only), M-F 9AM - 7PM & SAT 11AM - 5PM, Eastern.

[SERVICE.MATTEL.COM](http://SERVICE.MATTEL.COM)

Mattel Canada Inc., Mississauga, Ontario L5R 3W2. You may call us free at 1-800-524-8697.

Mattel U.K., Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.

Mattel Australia Pty., Ltd., Richmond, Victoria 3121. Consumer Advisory Service 1300 135 312 (valid only in Australia).

Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

Diimport & Diedarkan Oleh: Mattel SEA Ptd Ltd.(993532-P) Lot 13.5, Menara Lien Hoe, Persiaran Tropicana Golf Country Resort, 47410

 


## INSTRUCTIONS




## CONTENTS

K8676\*

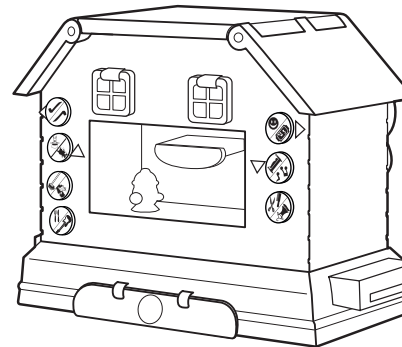

K8678\*

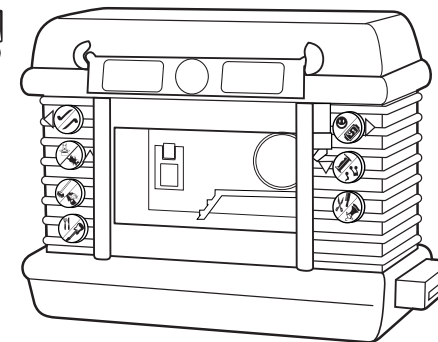 

\*Each sold separately, subject to availability.

Please remove everything from the package and compare to the contents shown here. If any items are missing, please call 1-800-524-8697.

Keep these instructions for future reference as they contain important information.

©2006 Mattel, Inc., El Segundo, CA 90245 U.S.A. All Rights Reserved.


# A PIXILLION things we can do together!™

 There are 4 levels of play with Pixel Pets™.

THE MORE YOU PLAY WITH YOUR PIXEL PETS™, you will move up to higher levels of play. With each new level you get more things to choose and more games to play.

**FLIP THE HOME OF YOUR PET UPSIDE DOWN**, and your pet has a secret life! Practice for a concert, pose for paparazzi, dress in the hottest fashion! Play to see what your pet's secret life is!


IF YOU DON'T REGULARLY **CLEAN** THE HOME OF YOUR PET, you will go down in levels of play (in either mode). Your pet may also pack up and move out if his home isn't kept spiffy!

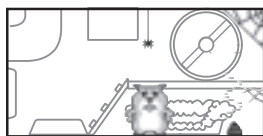

The device counts the number of times any button is pushed. When you flip it over back from secret life mode to normal mode, you may find you are at a different level than the one you were at when you first went to the secret life mode. And if you haven't been cleaning your pet's home, you may find he has moved out!

## GO AHEAD AND PUSH MY BUTTONS!

### NORMAL MODE

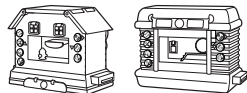

**YES**



**CLEAN UP**

Just like your own home, your pet's home needs to be clean too. Be sure to press the CLEAN button regularly.



**BED TIME**

Press when it's time for your pet to rest. Sometimes your pet will not want to go to bed, and you need to be persistent and keep pressing that button!



**FOOD**

Press to choose a food for your pet. Use this button to scroll through the food items and press YES to choose an item.



**GROOM**

When your pet needs his teeth brushed, his hair cut, or should have a bath, press this button to scroll through different grooming activities. Press YES to choose. Be sure to keep your pet looking spiffy!




**TRICKS**

Your pet does tricks! Press this button to have your pet show you what he can do!




**GAMES**

Pick a game to play! Press GAMES button to choose a game to play. Press YES to accept.

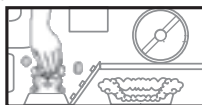

### Flip to ENTER my SECRET WORLD!

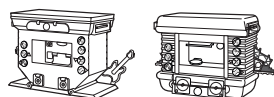

**PHOTO**

Your pet is a superstar! Press and see your pet pose for the paparazzi.



**SING**

Press to have your pet sing. With this button, scroll through different songs, press YES to select. Practice makes perfect!



**INSTRUMENT**

Your pet can play a musical instrument. Use this button to scroll through different instruments, press YES to select one. Practice, practice, practice!



**FASHION**

Help your pet get ready for a big concert! Keep pressing to select a fashion, then press YES to accept.




**DANCE**

Watch your pet strut on the dance floor! Press this button to scroll through different dances, then press YES to select.



**PERFORM**

Has your pet practiced singing, dancing, and playing an musical instrument? Then press this for the performance of a lifetime! The concert performed depends on the fashion your pet is wearing.

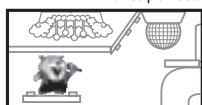

# THE SECRET LIFE OF YOUR PIXEL PETS.™


Get **CODES** from Pixel Pets™ to unlock surprises on **PIXELCHIX.COM!**

You may see a Pixel Chix™ gal walk onto the screen. She'll show symbols that you need to remember. Go to **PIXELCHIX.COM**™\* and enter those symbols for a surprise reward! Follow the directions on the web site for more fun.

\*For the UK, visit **PIXELCHIXPAL.CO.UK**, or for Australia/New Zealand, visit **PIXELCHIX.COM.AU**.

## Your Pixel Pets™ GROOVES to your TUNES! Just plug in a music player!

Plug in your external player, such as a CD or MP3 player. Start to play your music, and turn up the volume. The pet starts to dance to the music! (You may need to adjust the volume on the external player for the toy to detect the music from the player.) You can also continue to play and just listen to your music.

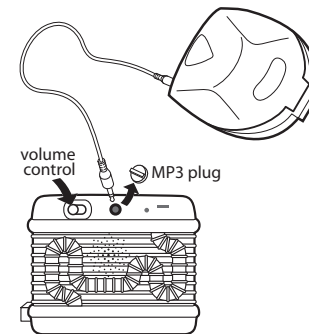

## CONNECT ONE PIXEL PETS™ TO ANOTHER FOR EVEN MORE FUN!

Remove cover first, then connect the pet homes.

Once one Pixel Pets™ is connected to another Pixel Pets™, press **GAMES/PERFORM** button on either device to call over the pet from the other pet home.

Do not put finger into ports as this may reset game.



## CONNECT TO A HOUSE, CAR OR MALL FOR EVEN MORE FUN!

Remove cover first, then connect the devices.

Once a Pixel Pets™ device is connected to another Pixel Chix™ device, press **GAMES/PERFORM** button to activate interaction. The Pixel Chix™ gal will visit your pet in his home.


Do not put finger into ports as this may reset game.



## TROUBLESHOOTING

### TRY ME PULL TAB


The pull tab in the Try Me slot should be automatically removed when toy is taken out of the package. If not, simply remove the pull tab before playing.

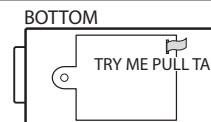

### RESET BUTTON

Reset playhouse if Pixel Pets™ leaves his home, or to start a fresh game. Ask an adult to insert a metal tip, such as a bent paper clip, into the hole.

When exposed to an electrostatic source, the product may malfunction and suffer memory loss. Reset the product if this occurs.

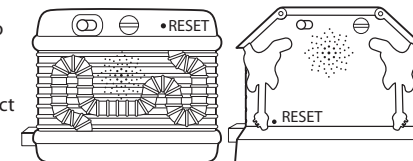

For additional information, please visit **PIXELCHIX.COM**™, **PIXELCHIXPAL.CO.UK**, or **PIXELCHIX.COM.AU**.