

TWO-YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Adjustment Center, 15930 E. Valley Boulevard, City of Industry, California 91744 for replacement or refund at our option. This warranty does not cover damage resulting from accident, misuse or abuse. **VALID ONLY IN U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Send only the product to the address above. Send all correspondence to Consumer Affairs, Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245-5012, U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday through Thursday: 8:00 a.m.-5:00 p.m. PST (11:00 a.m.-8:00 p.m. EST); Friday: 8:00 a.m.-12:30 p.m. PST (11:00 a.m.-3:30 p.m. EST).

WARNING:

CHOKING HAZARD - Small parts.
Not for children under 3 years.

CONSUMER INFORMATION



YOU CAN TELL IT'S MATTEL! CALL us toll-free or write with any comments or questions about our toys or service. Monday-Thursday, 8:00 a.m.-5:00 p.m. PST; Friday, 8:00 a.m.-12:30 p.m. PST; Saturday, 8:00 a.m.-12:30 p.m. PST. Outside U.S.A., see telephone directory for Mattel listing. Consumer Affairs, Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 USA.

1 (800) 524-TOYS



CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.

We are dedicated to quality products.

 


20333-0920-G2B

Giggles 'n Swing™ Barbie® & Kelly® DOLLS


INSTRUCTIONS

Contents:

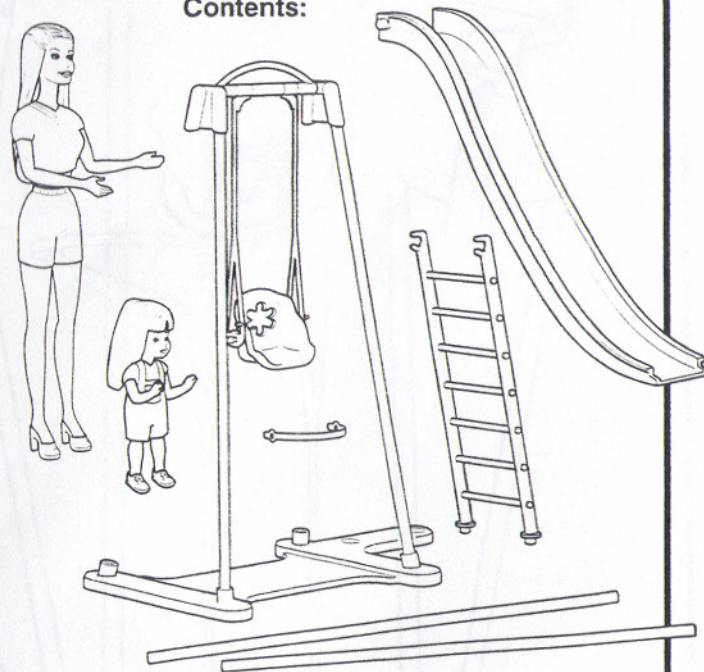

Please remove everything from the package and compare to the contents shown here.

 
If any items are missing, please call: 1-800-524-TOYS.
Keep these instructions for future reference as they contain important information.

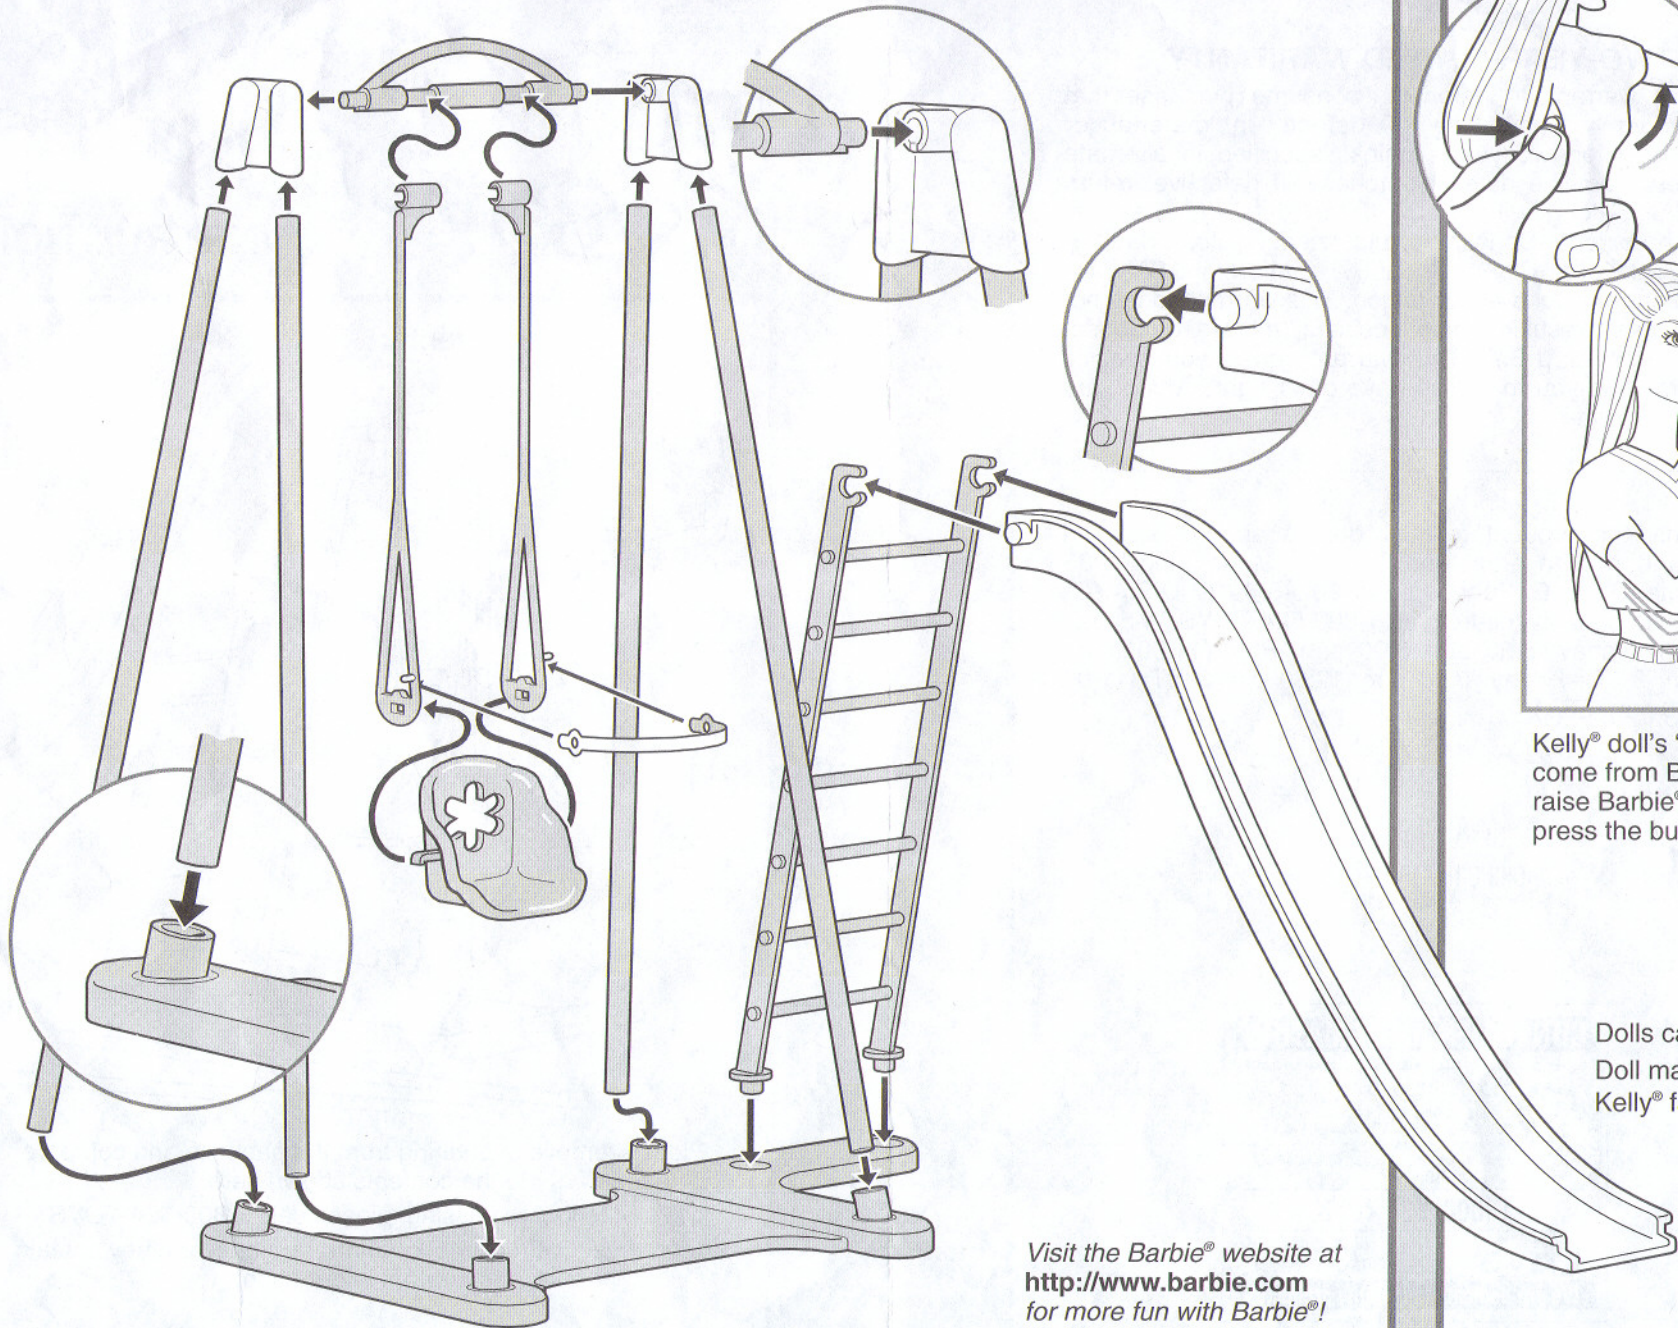

Kelly® doll's "come from Barbie® raise Barbie® press the button"


Dolls can Doll make Kelly® face

 Visit the Barbie® website at <http://www.barbie.com> for more fun with Barbie®!

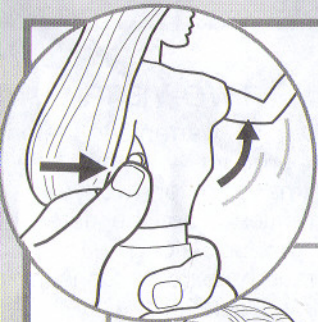


Kelly® doll's "giggles" and "whee" come from Barbie® doll when you raise Barbie® doll's right arm or press the button on her back.

 Dolls cannot stand alone.
Doll may not fit some
Kelly® fashions.

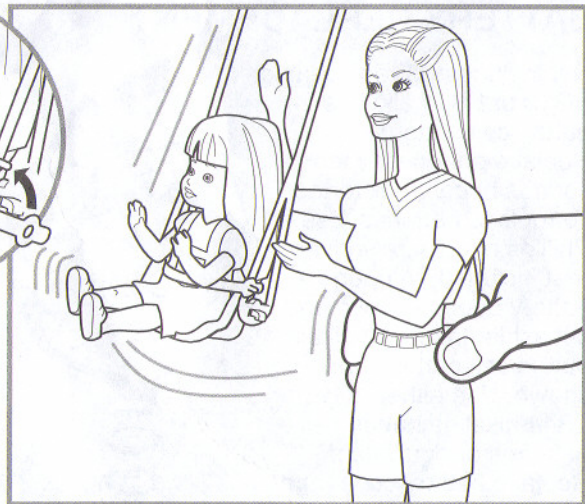

 You can make Barbie® doll "push" Kelly® doll in her swing!

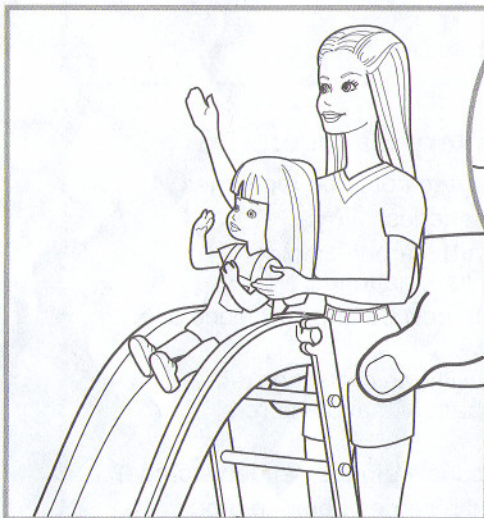


Place Kelly® on slide.



Wiggle the lever on
Kelly® doll's back to
make her play
"peak-a-boo!"

BATTERY REPLACEMENT

 Toy includes (3) replaceable AG13 or LR44 alkaline button cell batteries. Replace batteries when sounds become distorted. To replace batteries, use a Phillips head screwdriver (not included) to open battery door. Remove and set aside. Insert (3) alkaline button cell batteries as shown. Use either AG13 or LR44 alkaline button cell batteries or equivalent. Replace battery cover and screw closed.

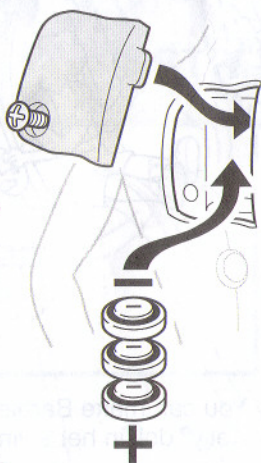

ATTENTION: Non-alkaline batteries may not power this toy. Replace with alkaline batteries for longest life and best performance.

CAUTION: To avoid battery leakage:

1. Non-rechargeable batteries are not to be recharged.
2. Do not use rechargeable batteries.
3. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
4. Never mix old batteries with new batteries (replace all batteries at the same time).
5. Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instruction.
6. Remove batteries from product before extended storage.
7. Always remove old or dead batteries from the product.
8. The supply terminals are not to be short-circuited.
9. Check that the contact surfaces are clean and bright before installing batteries.