

CAUTION:

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the product before they are charged.
3. If removable rechargeable batteries are used, they are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old batteries and new batteries.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instructions.
8. Exhausted batteries are to be removed from the product.
9. The supply terminals are not to be short-circuited.
10. Dispose of batteries safely.

FCC REGULATIONS

THIS DEVICE COMPLIES WITH PART 15 OF FCC RULES. OPERATION OF THIS DEVICE IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:

- (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE.
- (2) THIS DEVICE MUST ACCEPT ANY HARMFUL INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

This device generates and uses radio frequency energy, and if not used properly, may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC, which are designed to provide reasonable protection against such interference.

Caution: FCC Regulations state that changes or modifications to this product not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment."

2 YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Adjustment Center, 15930 E. Valley Boulevard, City of Industry, California 91744 for replacement or refund at our option. This warranty does not cover damage resulting from accident, misuse, or abuse. **Valid only in U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Send only the product to the address above. Send all correspondence to Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245-5012, U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday through Friday: 8:00 a.m.-6:00 p.m. Eastern Time.

CONSUMER INFORMATION



YOU CAN TELL IT'S MATTTEL! CALL us toll-free or write with any comments or questions about our products or service. Monday-Friday, 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing. Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 USA

1 (800) 524-TOYS



CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.

We are dedicated to quality products.



23725-0921



CONTENTS:

1 Figure and 3 "AA" Batteries.

 
This product includes batteries for display use only. Remove batteries for long-term storage. See Battery Caution on this instruction sheet for proper storage directions.

Keep these instructions for future reference, as they contain important information.

**4+
years**

"To Infinity and Beyond!"

Buzz has cool glow-in-the-dark features!

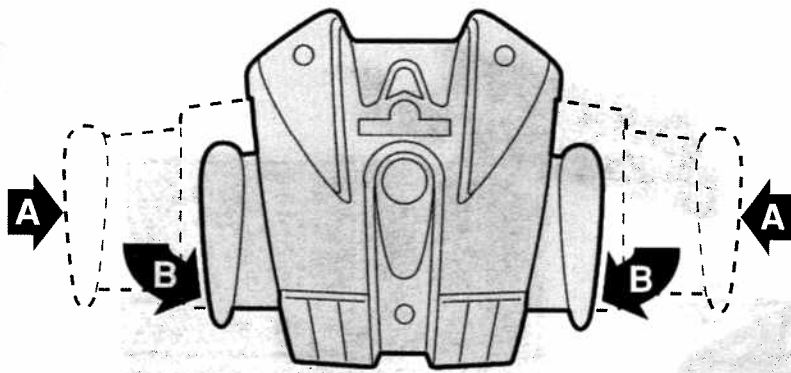

RESET WINGS

- A. Push both wings into backpack.
- B. Push DOWN and IN to 'click' wings into place.

IMPORTANT: Glow-in-the dark feature will last longer if you DO NOT expose this product to intense heat, or direct sunlight for prolonged periods of time.

INTERACTIVE MODE

Press BLUE button and Buzz tells you where to go.

LASER

Press small button to activate 'laser' sounds. LED will flash on forearm.

STEALTH MODE

 
 
Press RED button and Buzz talks and LED lights dim.

HYPERDRIVE MODE

Press GREEN button. Buzz talks and green LED lights up in collar.

HELMET

Open or close Buzz's face shield and he'll say something different each time!

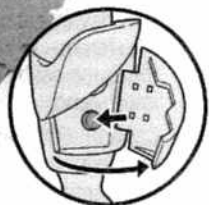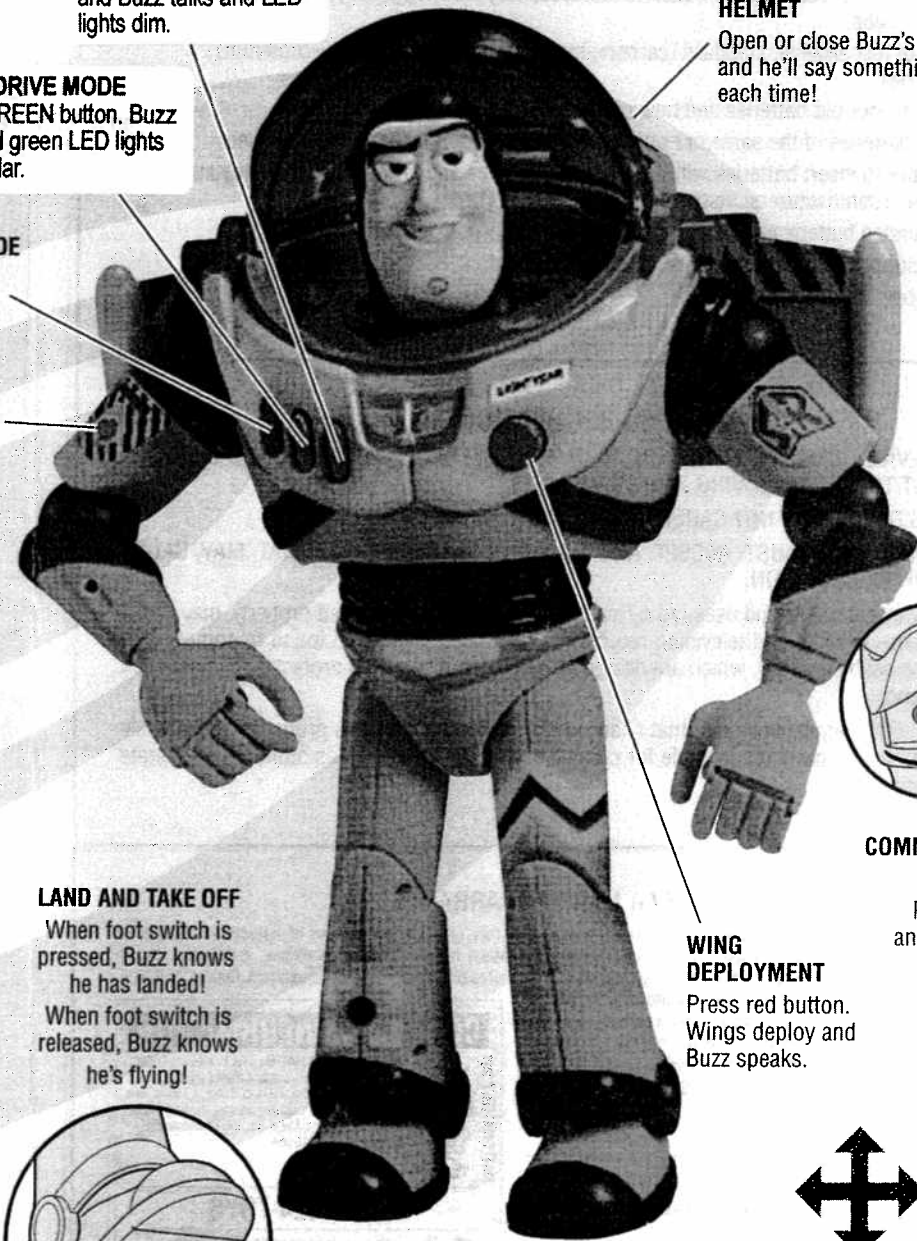


WRIST COMMUNICATOR

Open door. Press button and you'll hear a message.

WING DEPLOYMENT

 Press red button. Wings deploy and Buzz speaks.

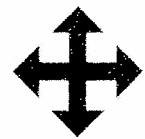

DIRECTION AWARENESS

Tilt Buzz left or right, up or down, on his back or in level flight. He will verbally respond to each move!

TO ACCESS BATTERY COMPARTMENT

Replace batteries if Buzz will not talk, his voice sounds scratchy, or he talks intermittently.

Use a Phillips screwdriver (not included) to unscrew backpack battery cover as shown.

Wings MUST be in extended position when unscrewing backpack.

Install 3 "AA" alkaline batteries. Be sure polarity of batteries is correct as shown.

Replace cover. (See Battery Caution on back).

This toy is not recommended for use on loose dirt or wet surfaces. Do not immerse in water.

If toy malfunctions, reset by turning switch off, then on.

