

Bright Discovery™ Ball

Instructions

 
PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE AS THEY CONTAIN IMPORTANT INFORMATION.

ADULTS NOTE:


- Cut the plastic attachments with scissors and discard the pieces.
- Toy includes 3 "AA" batteries.
- Batteries included are for sales demonstration only, and battery life may be impaired.
- Replace with 3 "AA" or equivalent batteries if sound plays slowly or distorts.
- Non-replaceable light bulbs included.
- This toy is not recommended for use on dirty or wet surfaces.
- Do not immerse in water.

9+
months

BATTERY INSTALLATION:

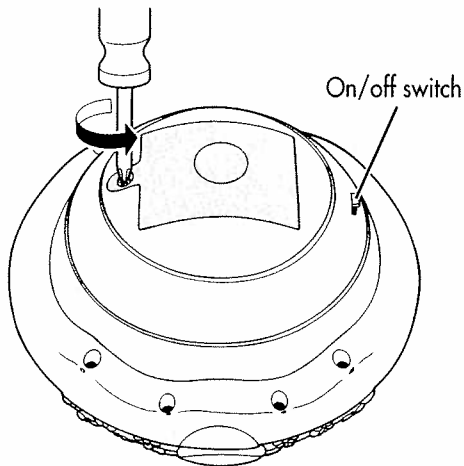

 1. Using Phillips head screwdriver (not included), unscrew door and remove.

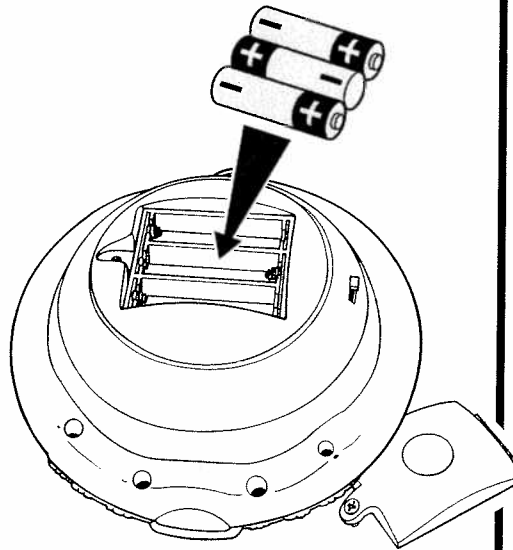

2. Take out the old batteries, replace with 3 "AA" alkaline batteries (not included) as shown. Replace battery cover.

BATTERY SAFETY INFORMATION

 
1. Non-rechargeable batteries are not to be recharged.
2. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
3. Do not mix old and new batteries.
4. Only batteries of the same or equivalent type as recommended are to be used.
5. Batteries are to be inserted with the correct polarity.
6. Exhausted batteries are to be removed from the toy.
7. The supply terminals are not to be short-circuited.
8. Dispose of batteries safely.
9. Rechargeable batteries are to be removed from the toy before being charged.
10. Rechargeable batteries are only to be charged under adult supervision.

Replace batteries when sound distorts or light dim.


TO PLAY:

TRY ME MODE:

1. Slide switch to "TRY ME" position.

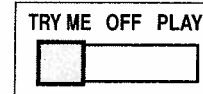


 2. Press the hand-shape button, the ball vibrates with music and whirling beads.

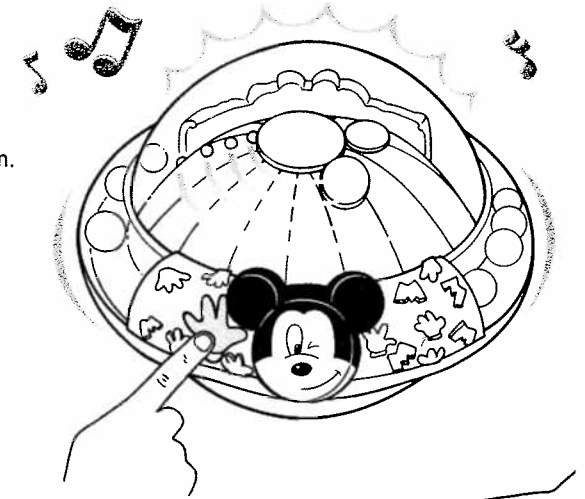

PLAY MODE:

 1. Slide switch to "PLAY" position.

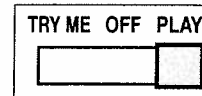

2. Tap the ball and it vibrates with music and whirling beads.



2 YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free from defects in materials or workmanship for 2 years (unless otherwise specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Adjustment Center, 15930 E. Valley Boulevard, City of Industry, CA 91744 for replacement or refund at our option. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. **VALID ONLY IN U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

Fisher-Price, Inc., a subsidiary of Mattel, Inc.,
New York, New York 10010 U.S.A.
Manufactured for Fisher-Price.
© 2000 Mattel, Inc. All Rights Reserved.
Fisher-Price, the Fisher-Price logo are U.S.
trademarks of Mattel, Inc.

Retain this address for future reference:
Mattel U.K., Ltd., Vanwall Business Park, Maidenhead SL6 4UB.
Mattel Australia Pty., Ltd., Richmond, Victoria 3121-
Consumer Advisory Service 1800 800 812 (Valid only in Australia).
Mattel East Asia Limited, 930 Ocean Centre, Harbour City, HK, China.
Hotline 01428500303

27863

Fisher-Price