



SPIDER SLAM™

STARTER SET

 
INSTRUCTIONS

28774-0920-G1

Requires 2 "D" size alkaline batteries (not included).

CONTENTS:

CURVE TRANSITIONS

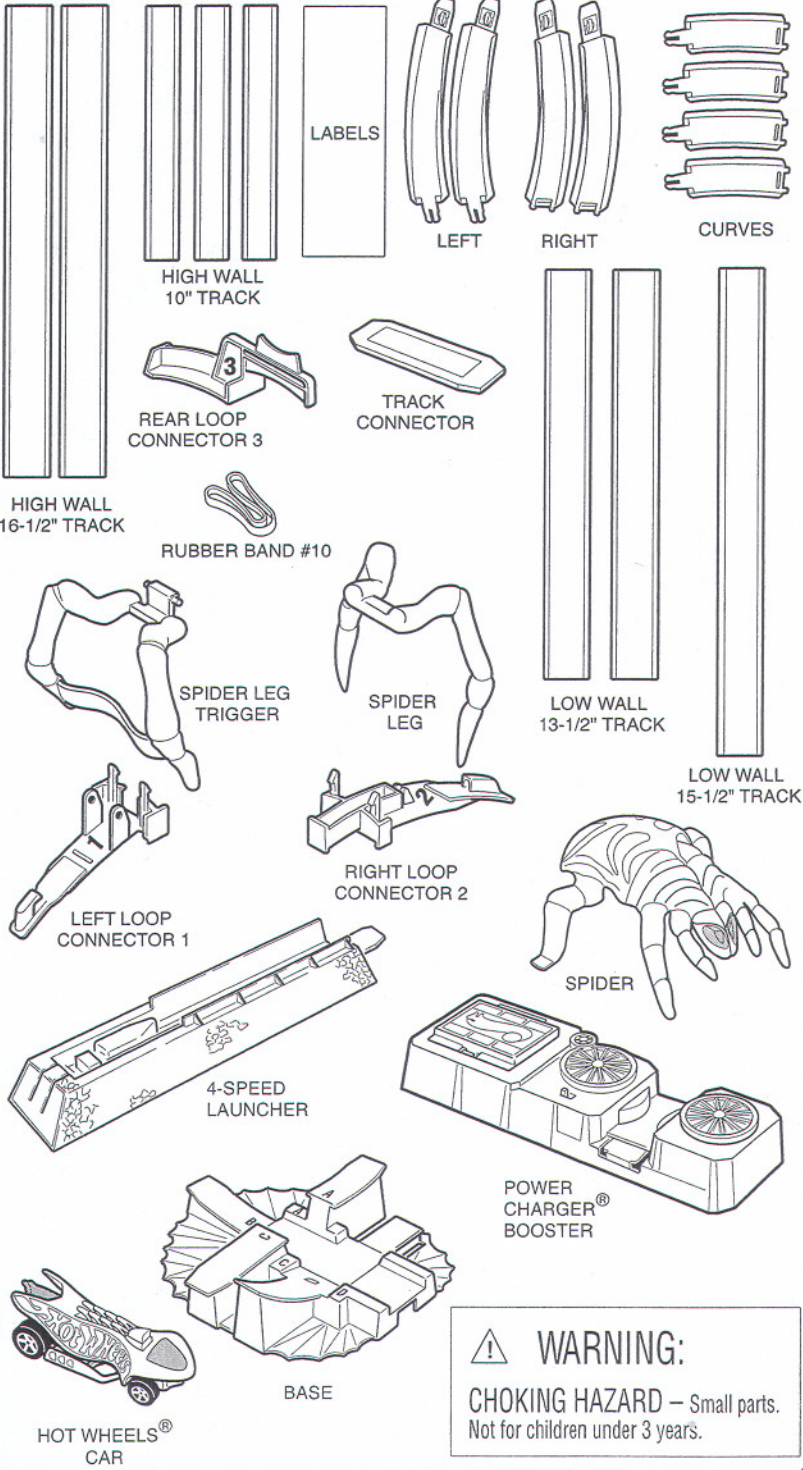


⚠ WARNING:
CHOKING HAZARD – Small parts.
 Not for children under 3 years.

1

INSTALL BATTERIES

 Press in at tab on battery door and pull upward to open front of compartment. Insert two fresh "D" size alkaline batteries (not included) as shown. Close cover.

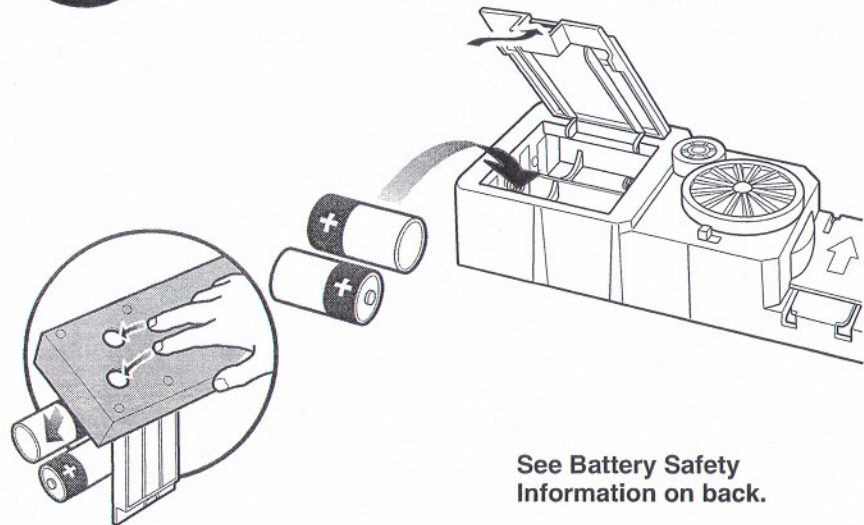


See Battery Safety Information on back.

Push fingers through holes on bottom to remove batteries


2




 
SET UP CURVE SECTIONS

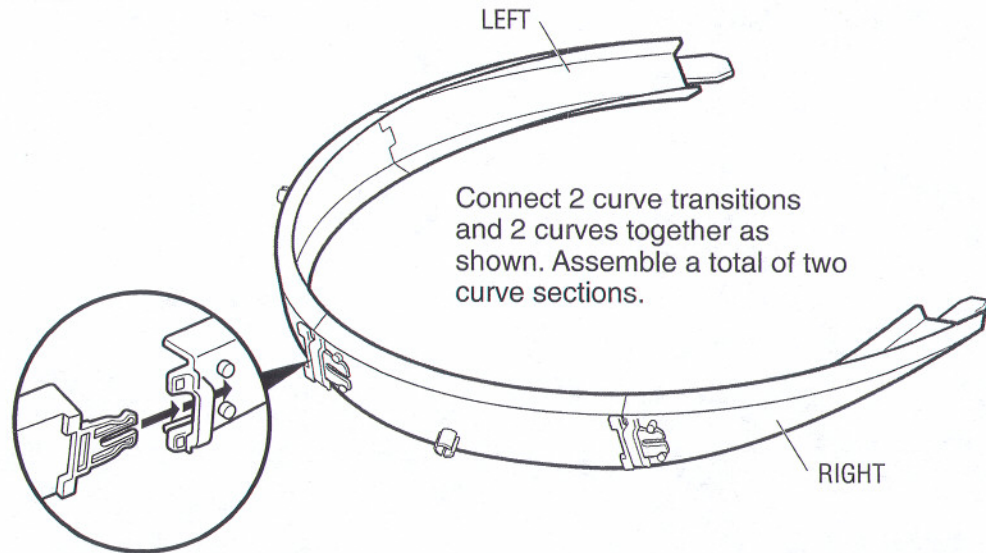

3

     ASSEMBLE BASE

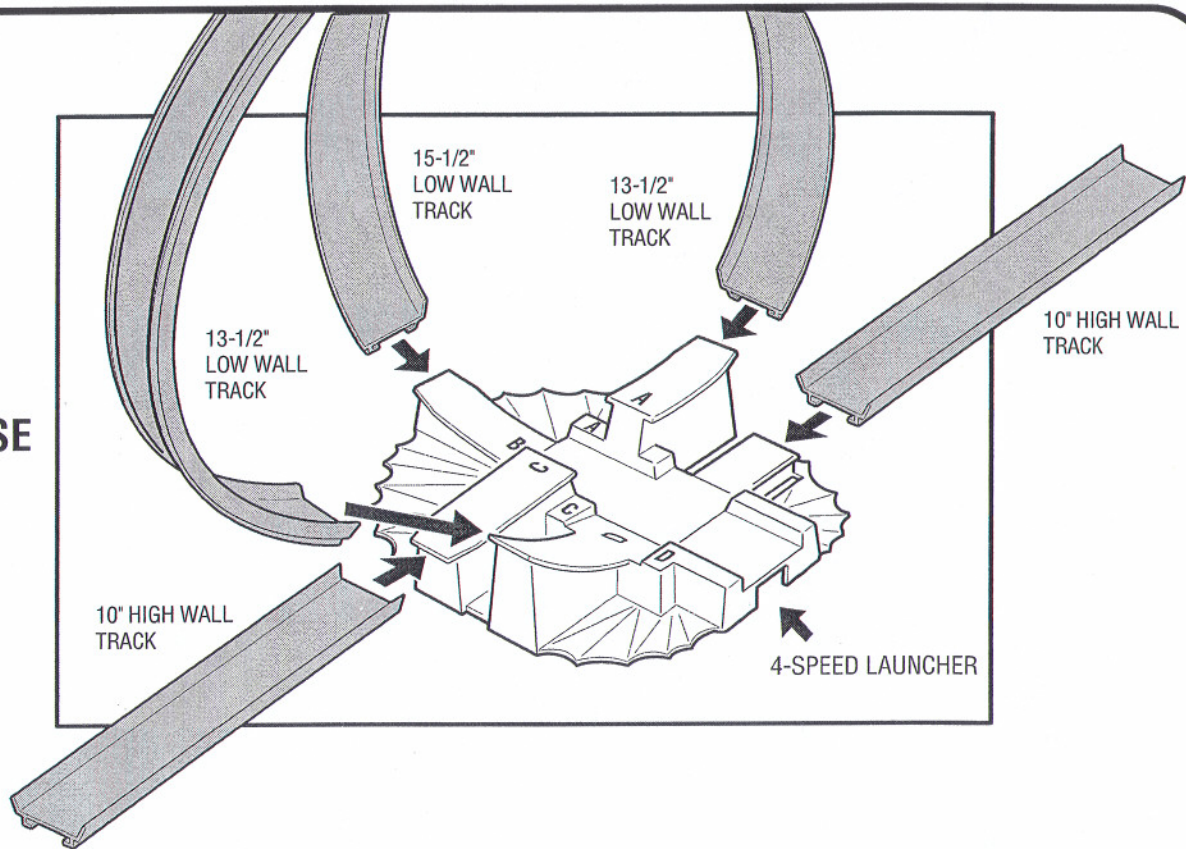


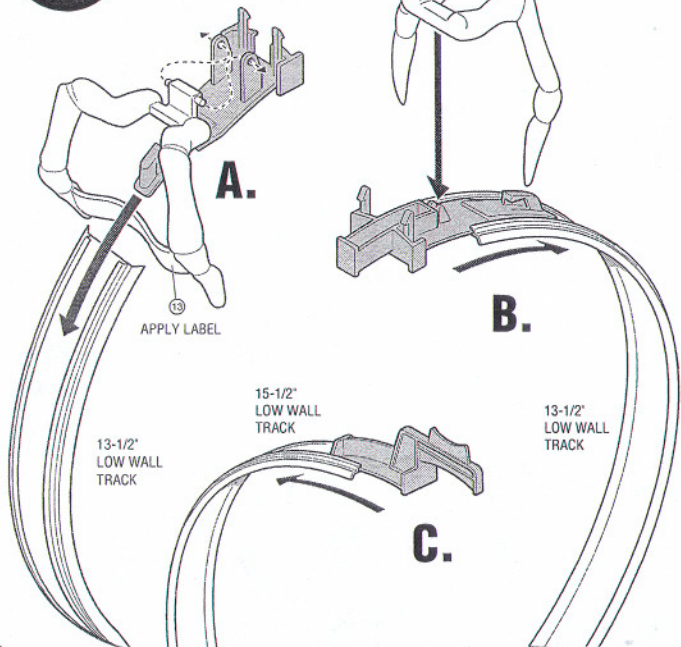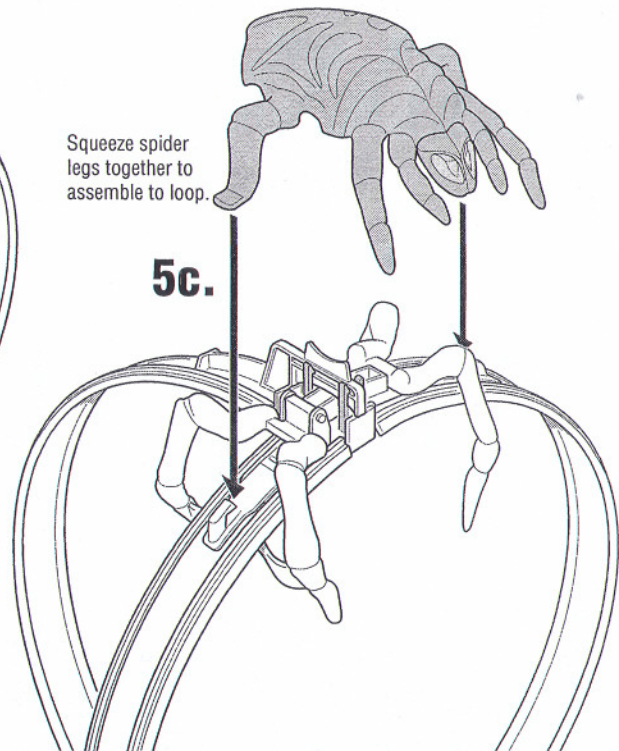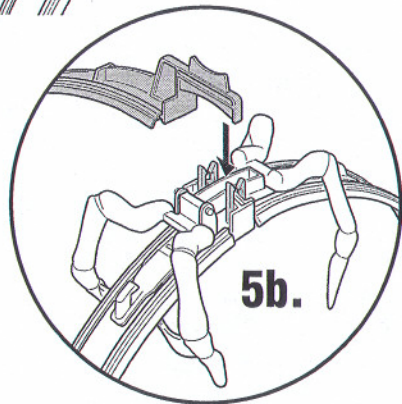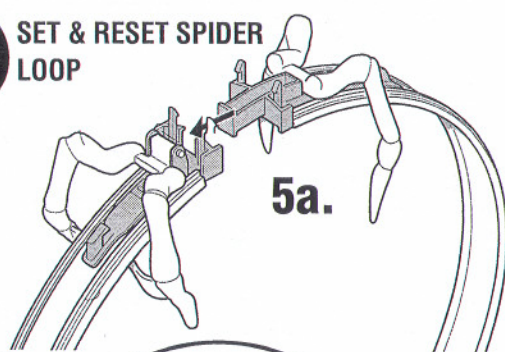4**ASSEMBLE LOOP CONNECTORS****5****SET & RESET SPIDER LOOP**

6

COMPLETED TRACK LAYOUT

 Apply labels as shown.

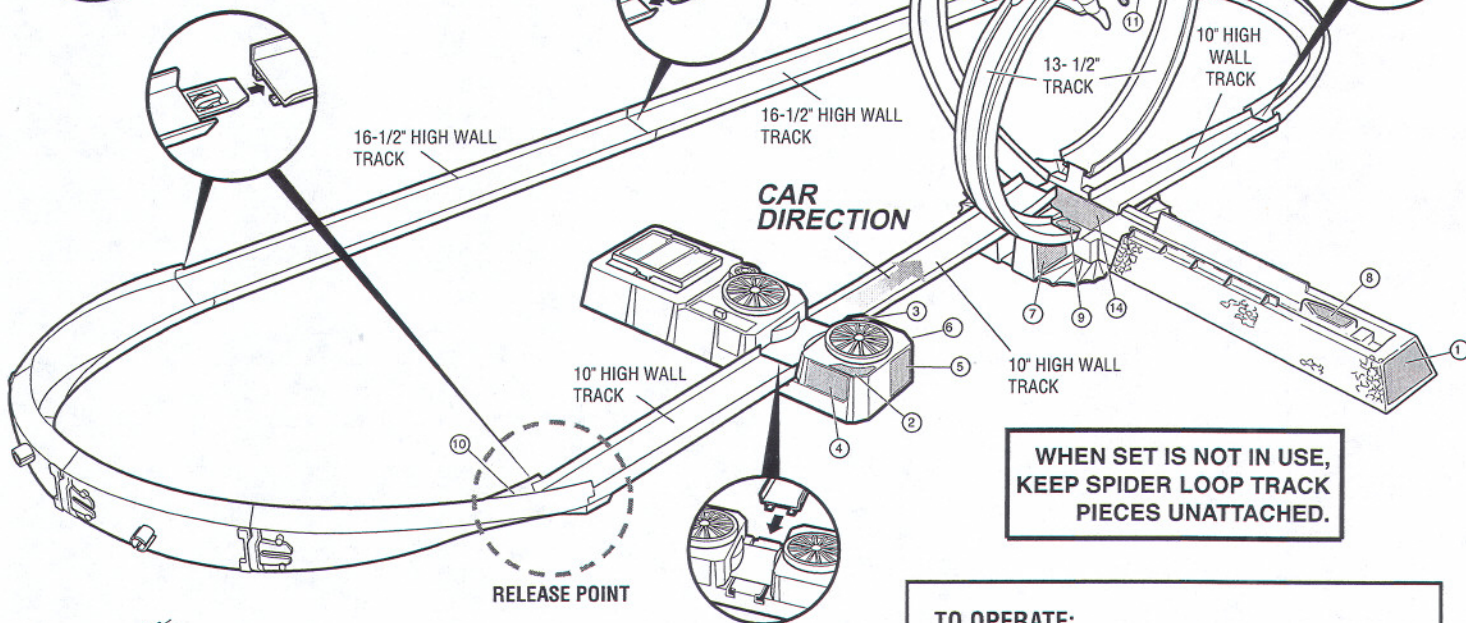


**WHEN SET IS NOT IN USE,
KEEP SPIDER LOOP TRACK
PIECES UNATTACHED.**

TO OPERATE:

Turn POWER CHARGER® booster on.

 - Place a car onto track and push through power booster.
- Load another car (not included) into the 4-speed launcher (see illustration).
- Time the launch so that the 2 cars collide in the intersection under the spider. Watch the spider dome explode, disengaging the intersection.
- Reassemble the spider loop to continue play. Turn off when play is finished.

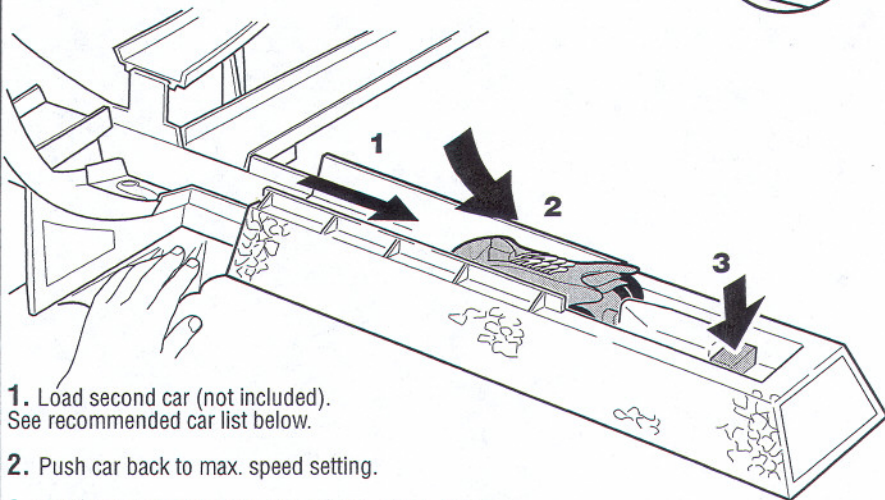

1. Load second car (not included). See recommended car list below.

2. Push car back to max. speed setting.


3. Support base with hand. To cause a crash, press button to release the second car when track car reaches the **RELEASE POINT** (label #10 on track layout).

**For best performance,
use these cars on your Spider Slam set:**


Pontiac® Rageous™	Jeepster
Saltflat Racer®	Ferrari 356
Lakester®	Aeroflash®
Power Pipes®	'63 Corvette® Split Window
Power Pistons®	Shelby Cobra 427 S/C
Ford GT-90	Zender Fact 4

HOW TO REPLACE RUBBER BAND IN LAUNCHER:

 Purchase a #31 rubber band (2 1/2" x 1/8").
Fold open bottom cover as shown.
Fold rubber band in half.
Place center under hook.
Slip ends around launcher hooks.
Close bottom cover.


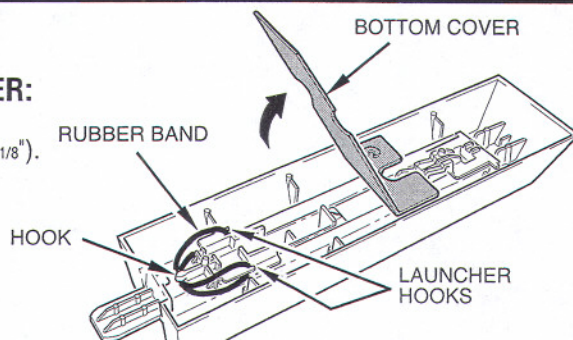


OPERATING TIPS:

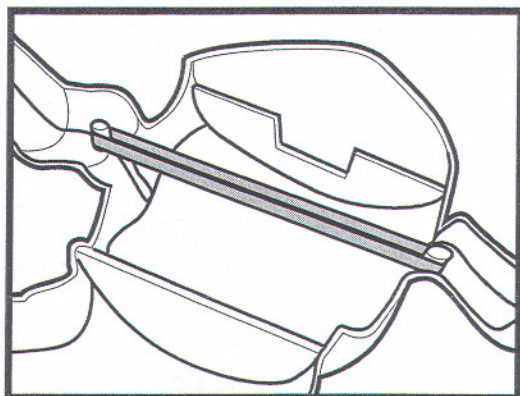 

Attach rubber band around two pins on underside of spider as shown.

  Adjust track side walls at each connection point as shown.

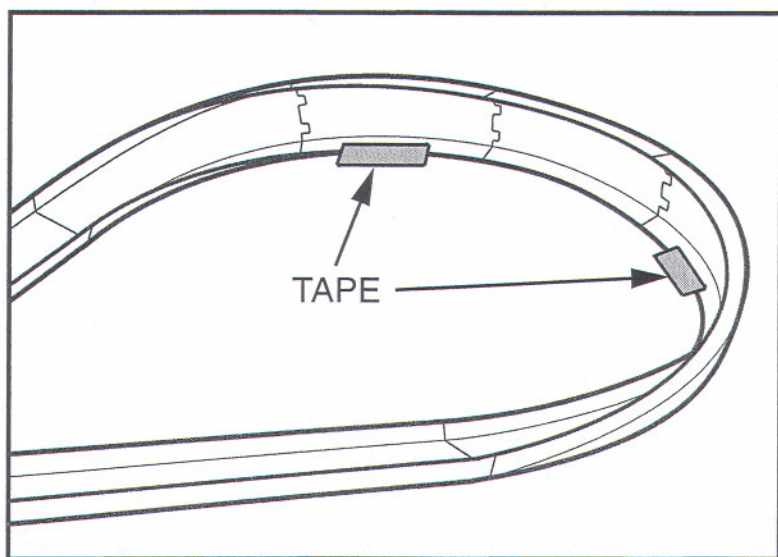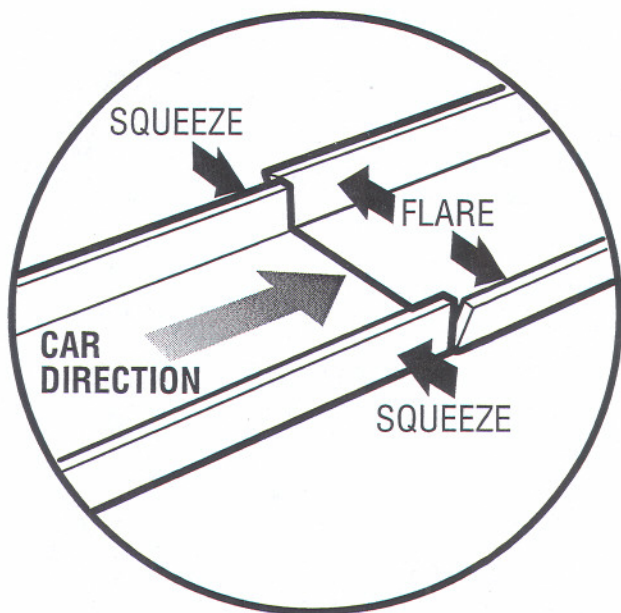

On smooth surfaces tape down curve. On carpeted surfaces use books to hold base.

ALKALINE BATTERIES RECOMMENDED:

Toy may not function or operate with other types of batteries.

BATTERY SAFETY INFORMATION:

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the product before they are charged.
3. If removable rechargeable batteries are used, they are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old batteries and new batteries.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instructions.
8. Exhausted batteries are to be removed from the product.
9. The supply terminals are not to be short-circuited.
10. Dispose of batteries safely.

CONSUMER INFORMATION

MATTY MATTEL™ Toys



YOU CAN TELL IT'S MATTEL!™ Call us toll-free or write with any comments or questions about our products or service. Monday-Friday, 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing. Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A.

1 (800) 524-TOYS

CE



CONFORMS TO THE SAFETY
REQUIREMENTS OF ASTM F963.

We are dedicated to quality products.

Keep these instructions for future reference, as they contain important information.

2-YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052 for replacement or refund at our option. This warranty does not cover damage resulting from unauthorized modification, accident, misuse, or abuse. In no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). **Valid only in U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Send only the product to the address above. Send all correspondence to Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, California 90245-5012, U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday-Friday, 8:00 a.m.-6:00 p.m. Eastern Time. See telephone directory for Mattel listing.