


# Musical Mobile

## INSTRUCTION SHEET


Please read the following instructions below very carefully, step by step, before attaching the Musical Mobile to your child's crib.

**Note:** We recommend attaching the Mobile to the foot end of the crib.

### Step ① HOW TO ASSEMBLE MUSICAL MOBILE

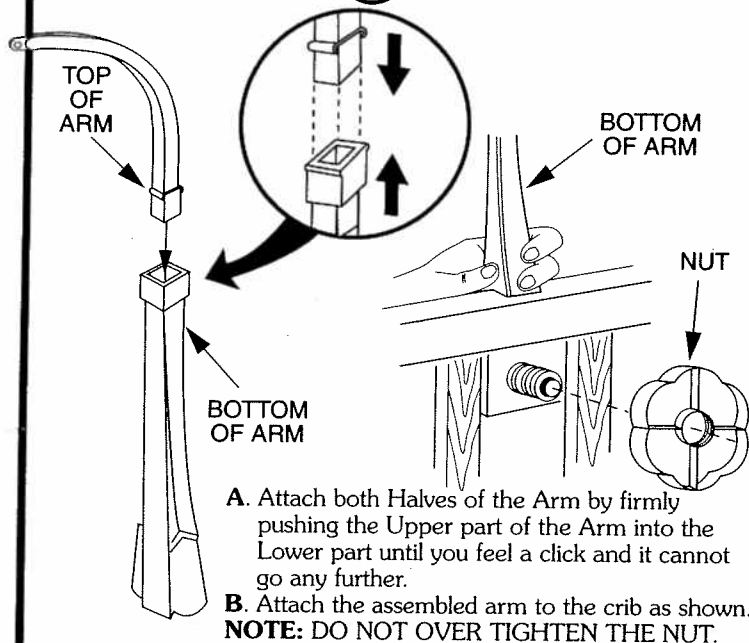


### Step ② HOW TO ATTACH CHARACTERS

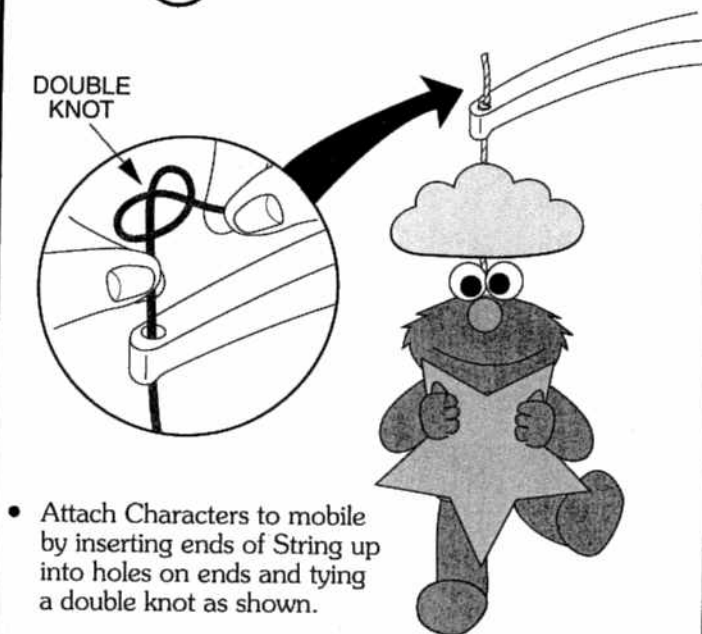

### Step ③

- Hang the Music Box and the Mobile on the Arm as shown.

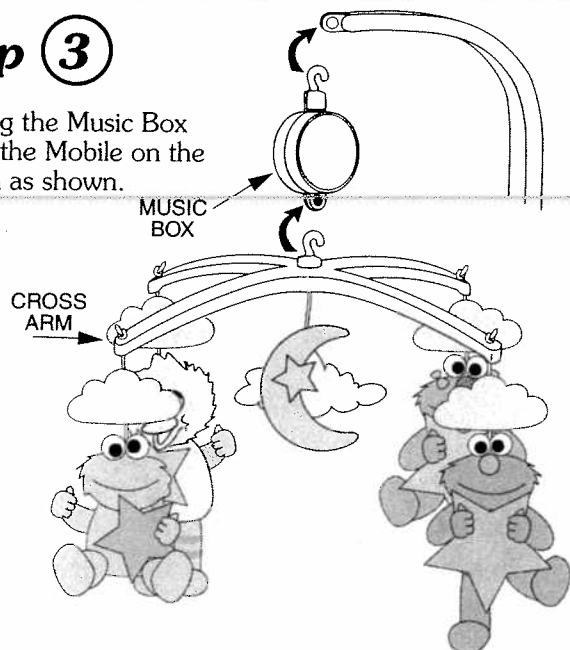


- Open the cross arm and snap it in place and THEN attach it to the music box and the main arm.

### ● IMPORTANT NOTE ●

When your child is older (5 months or older), you may choose to clip the four characters from the cord and use them as plush dolls.

- To remove characters an adult should cut the cord as close to the characters as possible, using a pair of household scissors.

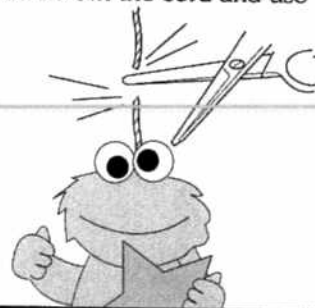

### WARNING

1. A crib mobile is intended for visual stimulation and is not intended to be grasped by the child.
2. If attached to the crib or playpen, remove when baby begins to push up on hands and knees.
3. Always attach all provided fasteners (strings, straps, clamps, etc.) tightly to a crib or playpen according to the instructions. Check frequently.
4. Do not add additional strings or straps to attach to a crib or playpen.

