

 


All Ears Blue™

INSTRUCTION SHEET

Watch Blue come to life with fun sounds and ear movements when she's kissed, tickled, and you use the 3 play pieces (included).

1 Pull out Tag & Press Blue's Paw

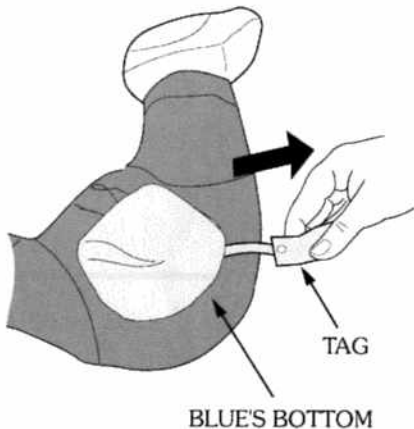

Squeeze Blue's
LEFT paw

- To make Blue do all the things she can do, first turn her upside down.
- Pull off and throw away the TAG attached to Blue's bottom.
- Press Blue's Left Paw and her ears will dance (up and down) to the Blue Clues Theme Song.

2 How to use Trumpet



- Locate the toy Trumpet play piece.
- Place the mouthpiece of the trumpet to Blue's mouth.
- Blue will play the *Blue Clues Theme Song* on her trumpet as her ears move up and down, to the music

OR

Blue will make a party horn sound as her ears will shoot straight up and drop down.

3 How to use Ice Pop and Juice Box play pieces

- Locate the toy Juice Box and Ice Pop play pieces.
- Place either play piece to Blue's mouth.
- Anytime either of these objects are placed in Blue's mouth she will make one of two *slurping* sounds, (long or short, alternating) and her ears will fly back.
 - For "Long Slurp" sound, ears move back and stay back for the length of the sound.
 - For "Short Slurp" sound, ears move backward and return to their normal position three times quickly, in sync with the sound.



Slurp!
Slurp-p-p!



BLUE'S TOY
ICE POP

4

Tickle Blue's Tummy



- A. When you tickle Blue's tummy she will bark excitedly and her ears will go up and down in an excited manner.

5

 
Kiss Blue's nose



- A. When Blue is kissed on her nose or you press on her nose, Blue will say "I love you" and bark excitedly. At the same time, her ears will come forward to hug your face (if you are kissing Blue's nose) and then return to their normal position.
- B. Her ears will then move up and down 3 times as she barks.


How to Replace Batteries

A

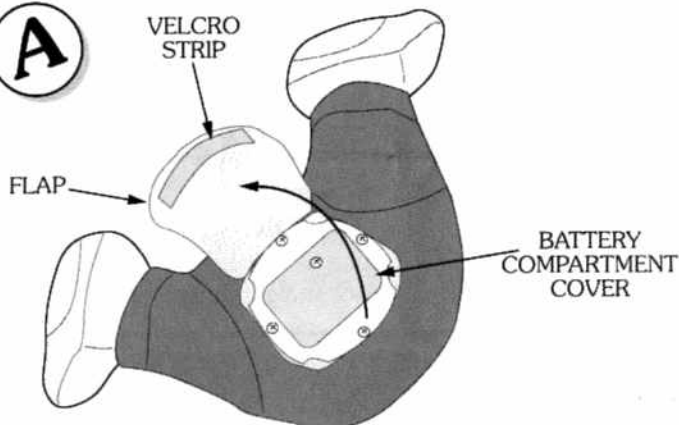

- A. Turn Blue upside down and lift up the Flap with the velcro strip, to expose the battery compartment, as shown above.
- B. Unscrew the battery cover using a Phillips screwdriver (not included) and remove.

 - A. Insert 4 new "AA" LR6 size alkaline type batteries into the battery compartment as shown, carefully noting the direction of the (+) and (-) symbols.
- B. Replace the cover, tighten the screw and fold the Flap back down into position.

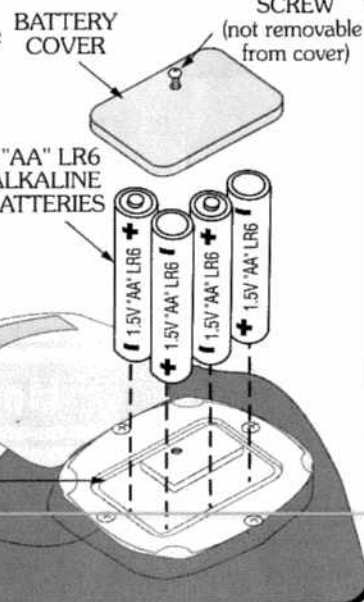

CAUTION

- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the product before they are charged.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- Do not mix old batteries and new batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instructions.
- Exhausted batteries are to be removed from the product.
- The supply terminals are not to be short-circuited.
- Dispose of batteries safely.

©2000 Viacom International Inc.
All Rights Reserved. Nickelodeon,
Nick Jr., Blue's Clues and all related titles,
logos and characters are trademarks
of Viacom International Inc.
Fisher-Price, Inc., a subsidiary of Mattel, Inc.,
New York, New York 10010 U.S.A.
MADE IN CHINA.
Manufactured for Fisher-Price.
©2000 Mattel, Inc. All Rights Reserved.

Fisher-Price and the Fisher-Price logo
are U.S. trademarks of Mattel, Inc.
CONFORMS TO ASTM F963 AT DATE
OF MANUFACTURE.
Distributed by:
MATTEL AUSTRALIA PTY., LTD.,
Richmond, Victoria 3121-
Consumer Advisory Service 1800 800 812
(valid only in Australia).
MATTEL EAST ASIA LIMITED.
930 Ocean Centre, Harbour City, HK, China.

PACKING AND ADDRESS SHOULD BE
RETAINED FOR FUTURE REFERENCE.
SPECIFICATIONS AND COLORS
SUBJECT TO AMENDMENT.

Should this product cause local electrical interference
we recommend moving it away from other equipment.



Questions or Comments?

1-888-892-6123

Fisher-Price

ITEM NO. 39131