



REMOTE CONTROL

MAX AIR ARENA™ Set

50784-0920

8+

 


INSTRUCTIONS

CONTENTS:


Requires 4 "C" Alkaline batteries (not included).

4 CONNECTORS


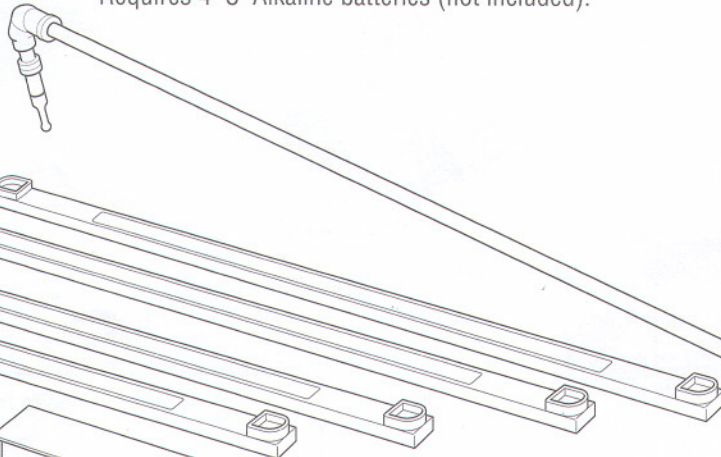


ROTATING ARM

 
2 RAMPS

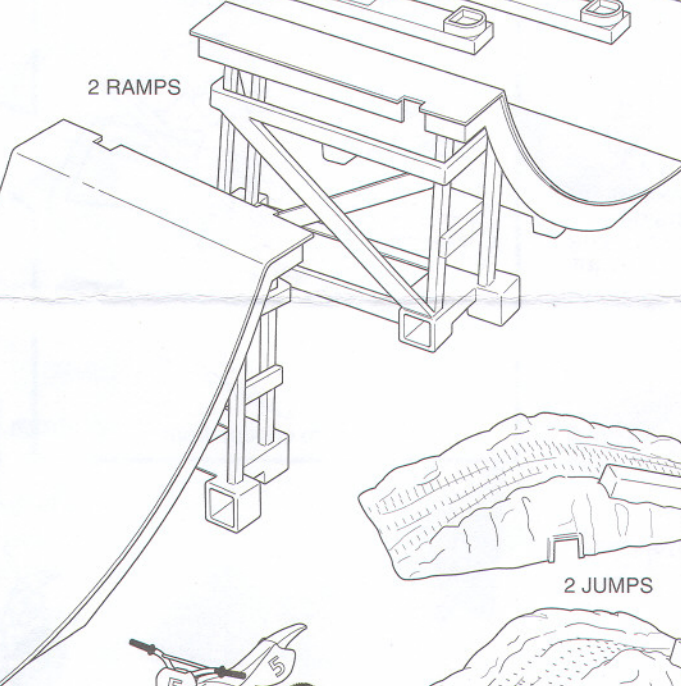


REMOTE CONTROL

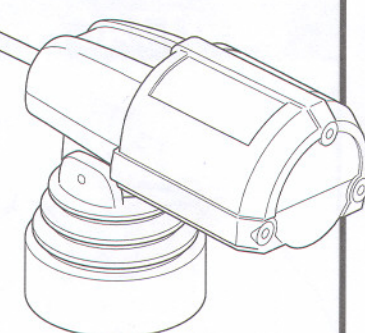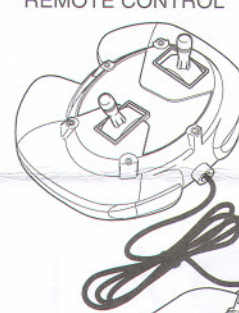  

BASE

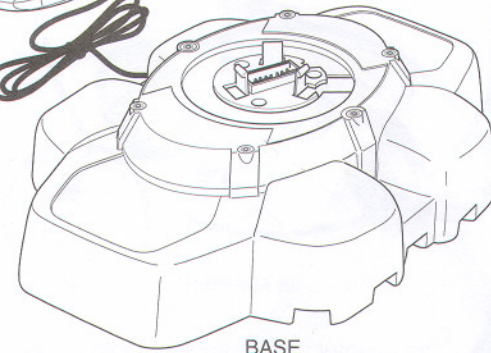 


2 JUMPS

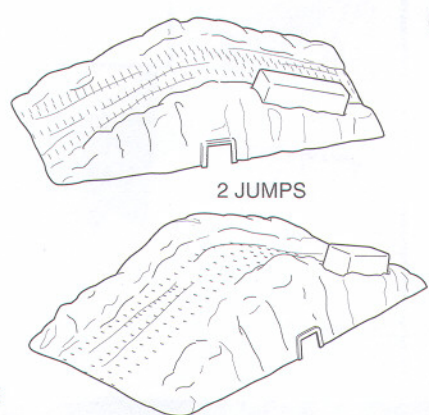 

MOTO-X BIKE

 SKATEBOARD ADAPTER



MOTO-X BIKE ADAPTER



SCOOTER ADAPTER



 
BIKE ADAPTERS



BIKE RIDER FIGURE



SKATER FIGURE

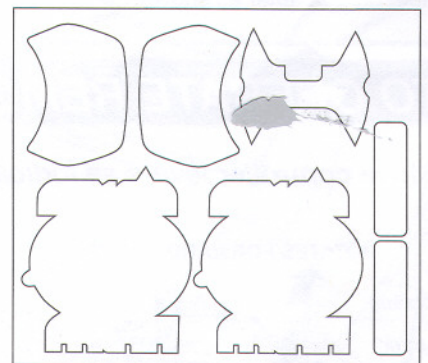

LABELS

Keep these instructions for future reference as they contain important information.

ASSEMBLY/LABEL PLACEMENT

 
- 1.** Install batteries in bottom of base. Refer to back page.

- 4.** To assemble rotating arm: Match notch on arm with cut-out on base and snap into place.

- 3.** Turn base right side up. Attach other end of connectors to jumps or ramps as shown.


- 2.** Attach 4 connectors to underside of base to create desired layout. Remote cord fits under connector.

Note: Flip open balance weight when using motorcycle only. Flip to close for other vehicles.

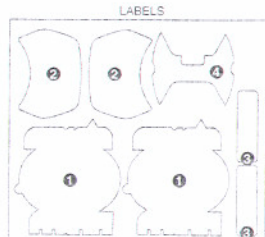


TO ATTACH RIDER:

 Snap tip of rotating arm in hole on back of figure.

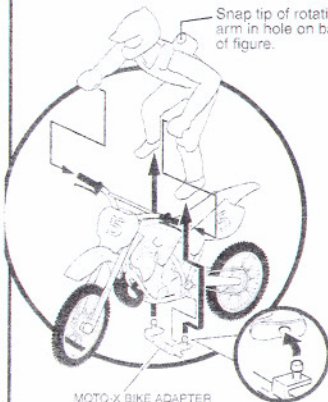

MOTO-X BIKE ADAPTER

 Snap adapter onto footrest of Moto-X bike. Then slide hands onto handlebars and snap feet onto adapter as shown.

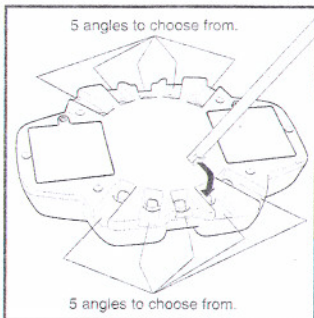

Note: If necessary adjust rider / vehicle to center position after heavy impact.

TO PLAY



1. Attach rider and bike to rotating arm (see illustration).
2. Flip open balance weight when using motorcycle. Flip closed for other vehicles.
3. Operate remote control to start play (refer to illustration below).

SPIN 180° or SPIN 360°

Alternate ramp assemblies.

TO OPERATE REMOTE CONTROL:

  Move controller levers as indicated to make the movements shown.

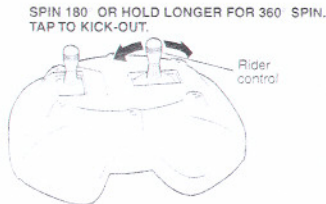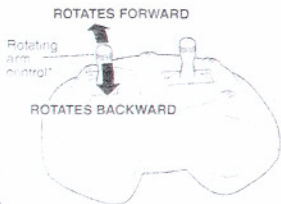


ACCESSORIES:


Hot Wheels® blade, board and bike sold separately. Adapters and figures included.

Bike rider fits on bike and Moto-X bike.

 
Attach specified adapters as shown.

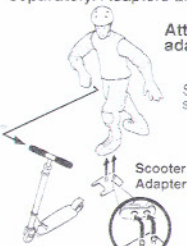

 Skater figure fits on skateboard and scooter.

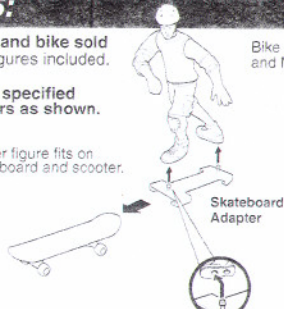


Bike Adapters

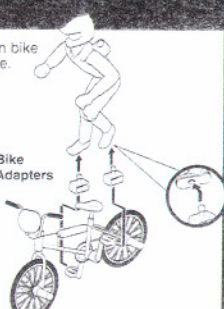 

INSTALL BATTERIES

To open, use Phillips head screwdriver (not included) to remove screws of battery door. Remove cover and set aside. Insert four fresh "C" size batteries (not included). Replace cover and screws.

 Alkaline batteries recommended.

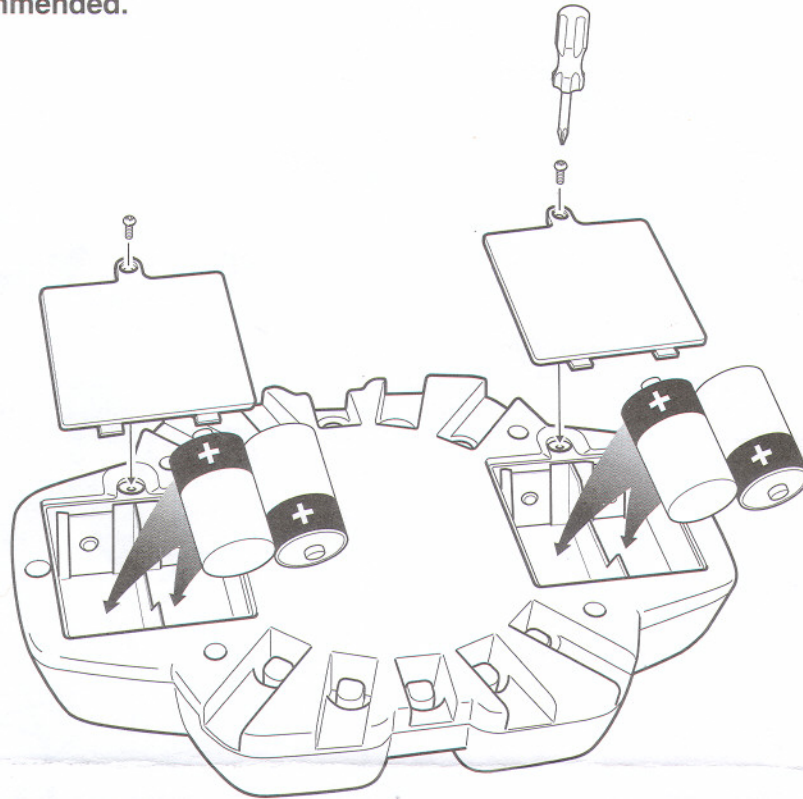

ALKALINE BATTERIES RECOMMENDED:

Toy may not function or operate with other types of batteries.

BATTERY SAFETY INFORMATION:

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the toy before being charged.
3. Rechargeable batteries are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old and new batteries.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Batteries are to be inserted with the correct polarity.
8. Exhausted batteries are to be removed from the toy.
9. The supply terminals are not to be short-circuited.
10. Dispose of batteries safely. Do not dispose of in a fire as the batteries may explode or leak.

TWO-YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052 for replacement or refund at our option. This warranty does not cover damage resulting from unauthorized modification, accident, misuse, or abuse. In no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). Valid only in U.S.A. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Send only the product to the address above. Send all correspondence to Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, California 90245-5012, U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday-Friday, 8:00 a.m.-6:00 p.m. Eastern Time. See telephone directory for Mattel listing.

CONSUMER INFORMATION

MATTEL TOYS



YOU CAN TELL IT'S MATTEL! Call us toll-free or write with any comments or questions about our products or service. Monday-Friday, 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing. Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A.

1 (800) 524-TOYS



CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.

We are dedicated to quality products.