




MOTORIZED KART MANIAX

Stunt Pit™ INSTRUCTIONS

CONTENTS:

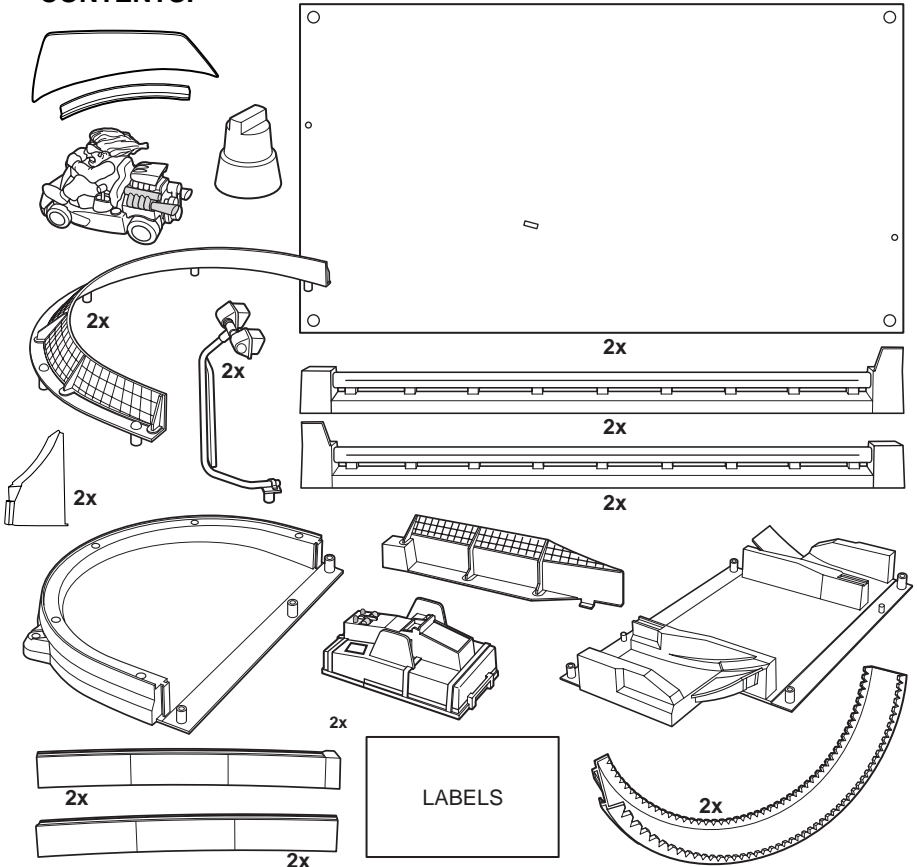

⚠ WARNING:

CHOKING HAZARD – small parts.
Not for children under 3 years.


Requires 3 “AA” batteries (*not included*).
For best performance, use alkaline batteries.
*Keep these instructions for future reference
as they contain important information.*



53350-0920

ASSEMBLE PLAYSET & APPLY LABELS




Apply labels before assembling.
(Set comes with one vehicle and charger. Other vehicles and chargers not included.)

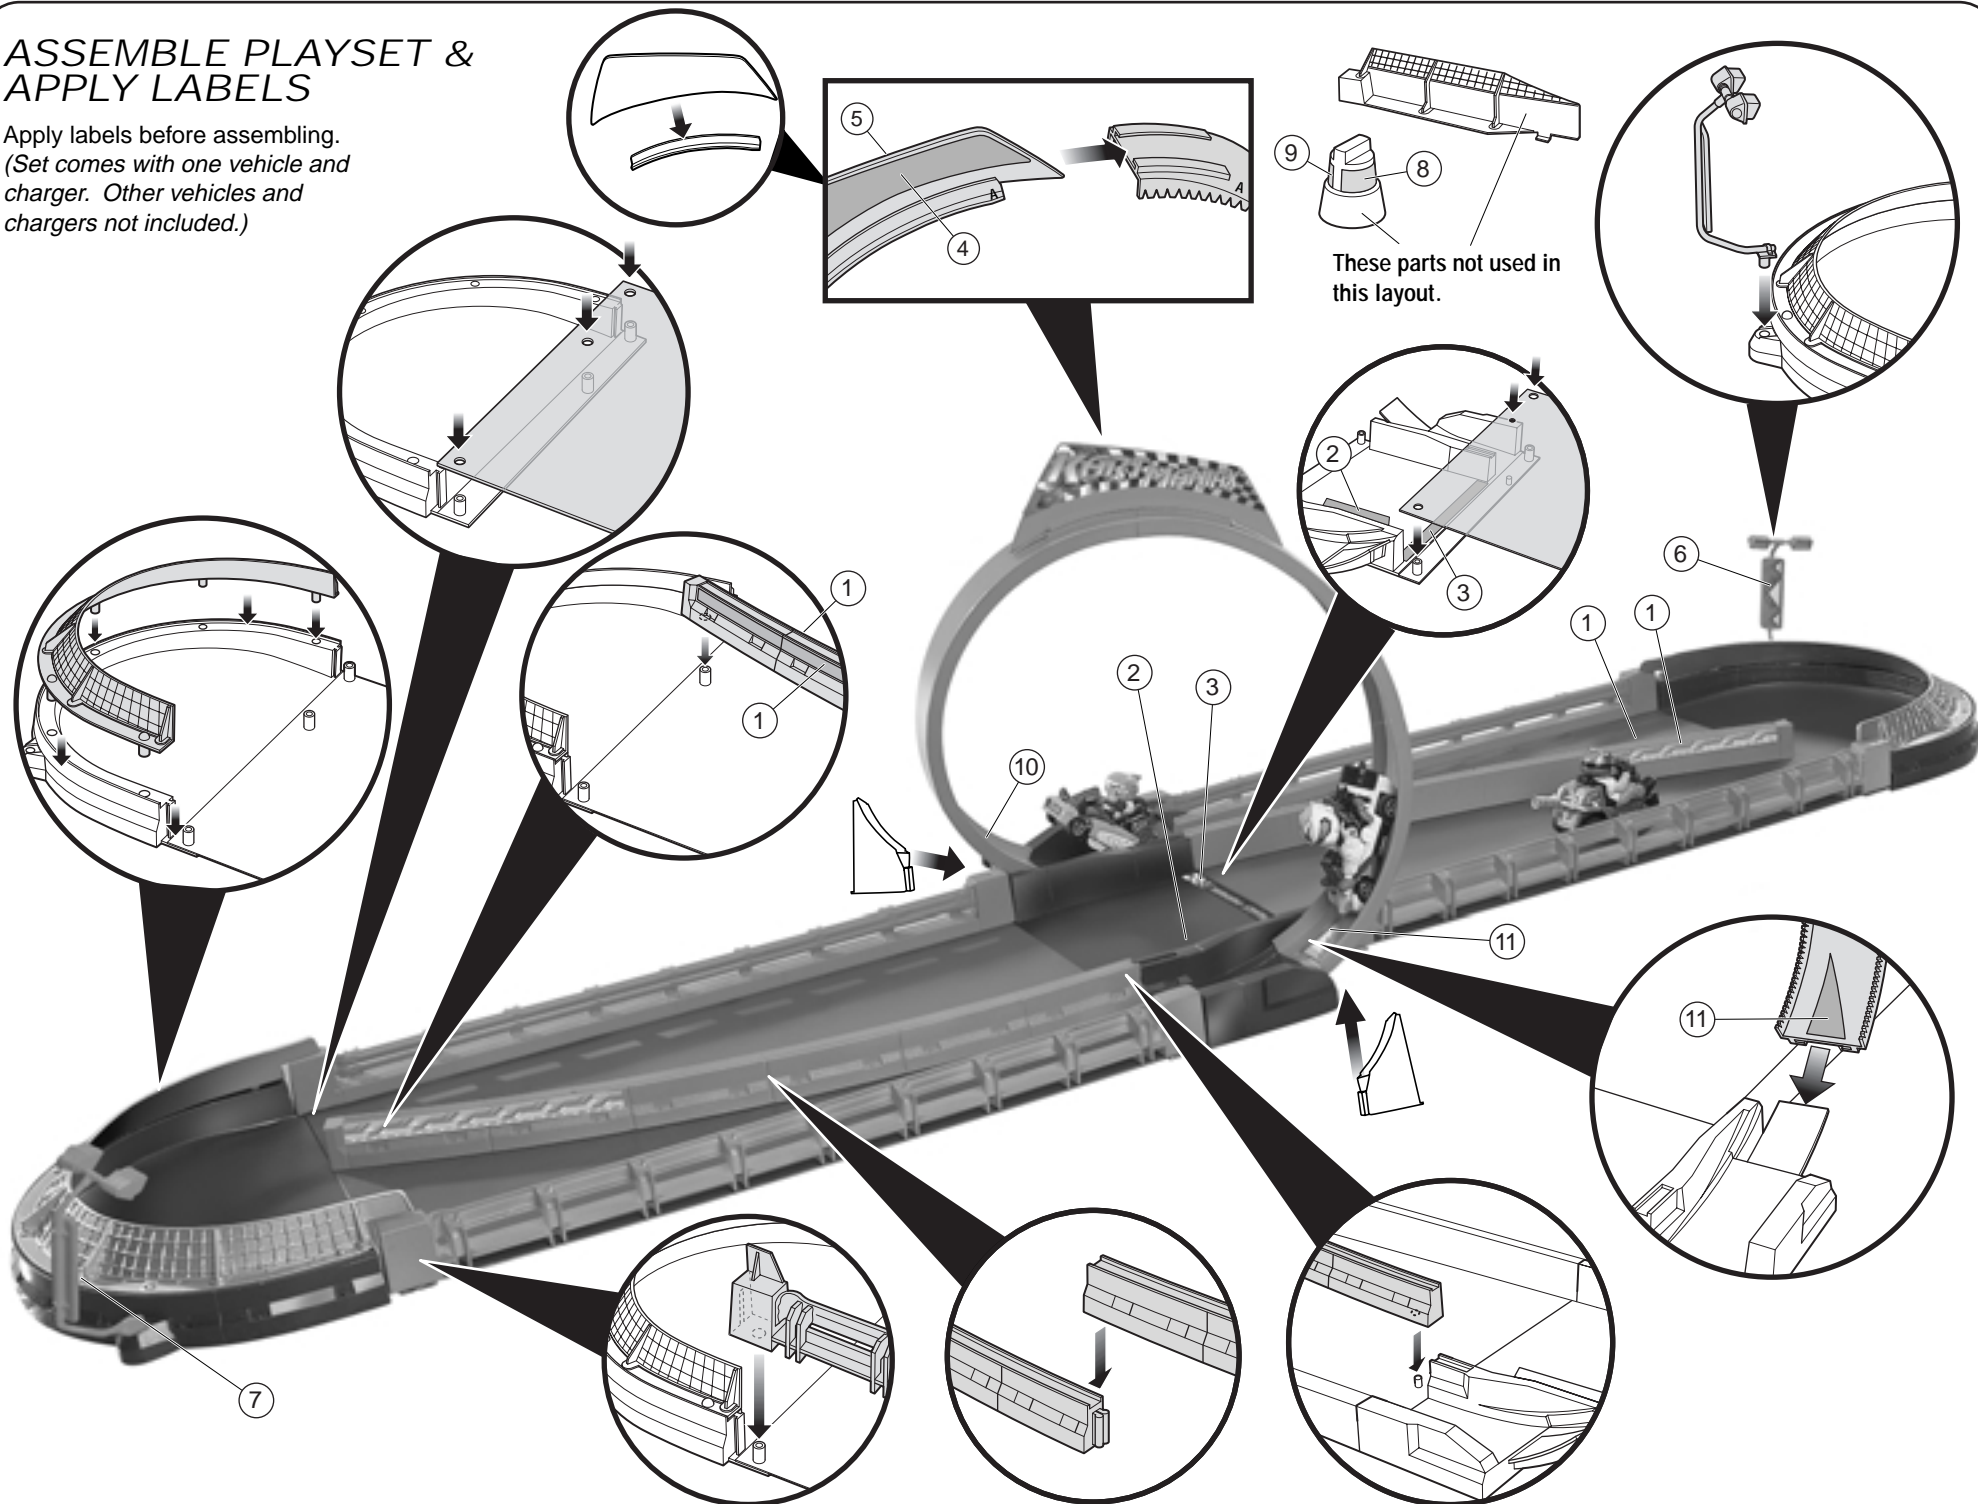


CHARGE VEHICLE FOR PLAYSET (speed mode)

1. Move charger switch to position 1 and place vehicle action lever in "normal" mode (back position).

- Line up holes on bottom of kart with pins as shown.
- Contact points on bottom of kart must line up with contact points on charger.
- Push down on top of kart to engage.

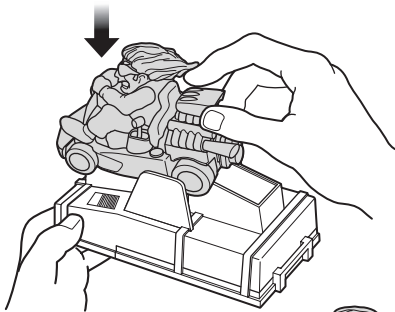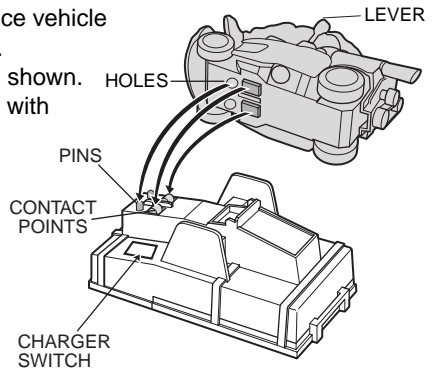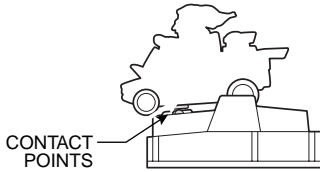

2. Hold charger with one hand and then press down on top of kart as shown, with the other. Rear wheels will start to spin. **DO NOT** hold wheels; allow them to spin freely. Press down for 20 seconds to fully charge kart. (*Do not charge kart for more than 25 seconds, as overcharging may reduce the life of your kart.*) Release kart with a forward motion on playset.

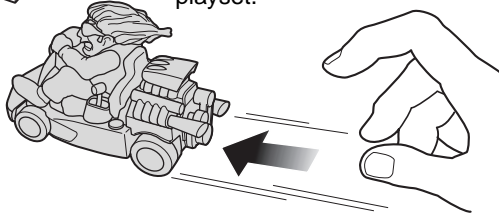

CHARGE VEHICLE FOR FREE PLAY (stunt mode)


Move charger switch to position 2 and place vehicle action lever in "feature" mode (forward position) before charging. Charge for 5 to 10 seconds. Place kart on a hard, smooth surface and release with a forward motion (*Kart will run for approximately 15 seconds each time it is fully charged*).

INSTALL BATTERIES

Using screwdriver (*not included*), remove center screw to open battery door as shown. Insert 3 "AA" batteries (*not included*).

Be sure to insert batteries as indicated. Replace and refasten battery door. If kart does not fully charge in 20 seconds, replace batteries.



For best performance, use alkaline batteries.

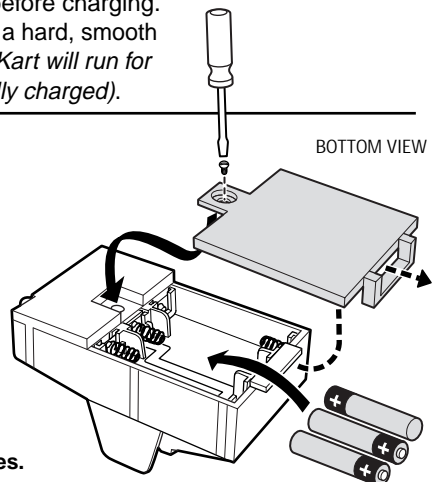


ALTERNATE LAYOUT

Try this alternate track layout for more Kart Maniax™ fun!


1. Remove loop and loop connector.

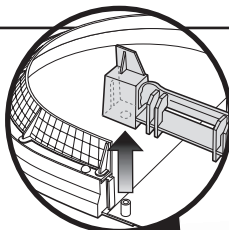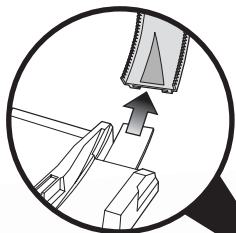


2. Remove two side rails as shown.

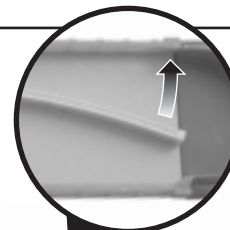


3. Move both center curved rails as shown.

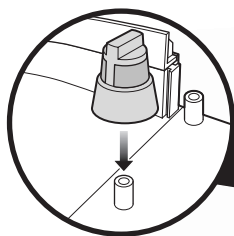

5. Insert drum as shown.

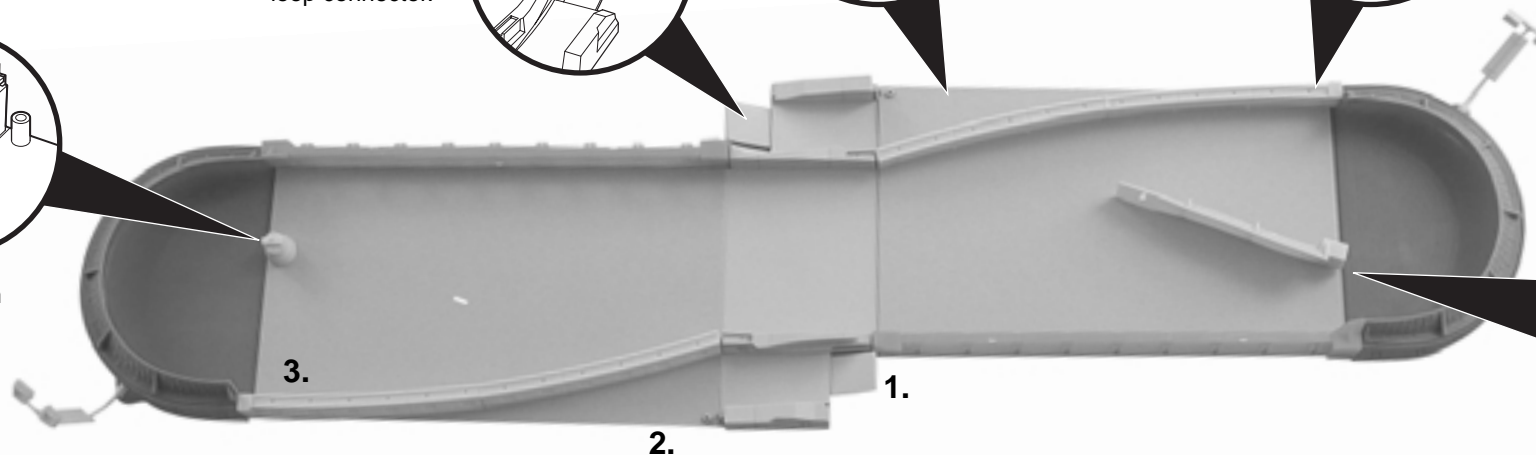

4. Insert diverter rail as shown.

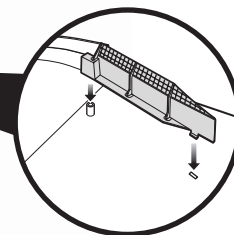

ACTION FEATURE

Push lever forward to activate "FEATURE" mode. Push lever backward to return to "NORMAL" mode.



Kart works best in "NORMAL" mode when used with set.

MODE LEVER

NOTE:

- VEHICLE CONTAINS A RECHARGEABLE CELL. IF FLUID LEAKS, AVOID CONTACT WITH EYES, AND DISCARD VEHICLE.
- ONLY USE CHARGER SUPPLIED WITH THIS TOY.
- DO NOT USE ANY OTHER CHARGING SOURCE.
- DO NOT IMMERSE IN WATER.
- THIS PRODUCT IS NOT RECOMMENDED FOR USE ON LOOSE DIRT OR WET SURFACES.

ALKALINE BATTERIES RECOMMENDED:

Toy may not function or operate with other types of batteries.

BATTERY SAFETY INFORMATION:

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the toy before being charged.
3. Rechargeable batteries are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old and new batteries.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Batteries are to be inserted with the correct polarity.
8. Exhausted batteries are to be removed from the toy.
9. The supply terminals are not to be short-circuited.
10. Dispose of batteries safely. Do not dispose of in a fire as the batteries may explode or leak.
11. Products with rechargeable cells are not to be disposed of in a fire as they may explode or leak. Dispose of safely.

2-YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052 for replacement or refund at our option. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. In no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). Valid only in U.S.A. This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you. Send only the product to the address above.

Send all correspondence to Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, California 90245-5012 U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday-Friday, 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing. Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A.

CONSUMER INFORMATION

YOU CAN TELL IT'S MATTEL! Call us toll-free or write with any comments or questions about our products or service. Monday-Friday, 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing. Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, CA 90245 U.S.A.

1 (800) 524-TOYS

CE CONFORMS TO THE SAFETY REQUIREMENTS OF ASTM F963.

We are dedicated to quality products.

© 2001 Mattel, Inc., El Segundo, CA 90245 U.S.A. All Rights Reserved.

Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.

Mattel Australia Pty Ltd., Richmond, Victoria, 3121. Consumer Advisory Service 1 800 800 812 (valid only in Australia)

Mattel East Asia Limited, 930 Ocean Centre, Harbour City, HK, China.