


Requires three "C" cell alkaline batteries (not included). **Contents:** 

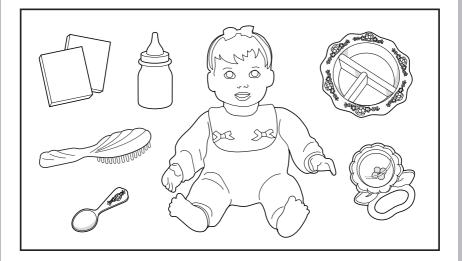


ADULTS NOTE: Cut the plastic attachments with scissors and discard pieces. Please remove everything from the package and compare to the contents shown here. If any items are missing, please call 1-800-524-TOYS. Keep these instructions for future reference as they contain important information.

© 2001 Mattel, Inc., El Segundo, CA 90245 U.S.A. All Rights Reserved. <u>Mattel U.K. Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.</u> <u>Mattel Australia Pty. Ltd., Richmond, Victoria 3121.</u> Consumer Advisory Service 1800 800 812 (valid only in Australia).

## **1**. INSTALL BATTERIES:

Open both sets of fabric fasteners on back of doll. Unscrew battery cover and set aside. Insert three "C" cell alkaline batteries as shown. Replace cover.

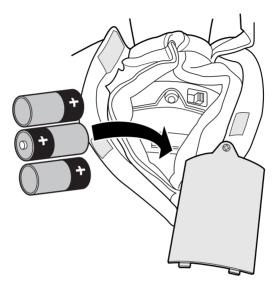

### FOR LONGER LIFE USE ONLY ALKALINE BATTERIES: Toy may not function or operate with other types of batteries.

### **BATTERY SAFETY INFORMATION** :

- 1. Non-rechargeable batteries are not to be recharged.
- 2. Rechargeable batteries are to be removed from the toy before being charged.
- 3. Rechargeable batteries are only to be charged under adult supervision.
- 4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
- 5. Do not mix old and new batteries.
- 6. Only batteries of the same or equivalent type as recommended are to be used.
- 7. Batteries are to be inserted with the correct polarity.
- 8. Exhausted batteries are to be removed from the toy.
- 9. The supply terminals are not to be short-circuited.
- 10. Dispose of batteries safely.

# **2.** TO PLAY:

Turn power switch on.

Insert bottle or baby's right thumb all the way into mouth at an upward angle in such a way that tip of object makes contact with "roof" of doll's mouth. This will activate sucking motion.

"Feed" your doll with her bottle, and watch as the "milk disappears."

Lay your doll down or rock her gently forth and back. She'll drift off to sleep!

Place your doll upright to wake her.

Doll will make random motions and sounds without any physical interaction for approximately 6 minutes. After this, it will go into mechanical sleep mode. Any physical movement of the doll or "feeding" the doll will bring it out of sleep mode.

When play is finished, it is important that you turn off power switch while doll's eyes are still open.

### **3.** SKIN CARE HINTS:

- If skin is dirty, clean with warm (85-100° F / 29°-37° C) water and dish washing detergent or with household alcohol.
- After cleaning, allow to dry at least 2-5 minutes before use.
- Talc can be applied to smooth the surface. (Use only a very small portion.)

### DO NOT do the following:

- Longtime exposure to direct sunlight.
- Apply excessive water to skin.
- Apply any type of ink.
- Apply nail polish.
- Clean with ammonia or any ammonia based detergents.
- Expose to high heat.
- Expose to sucrose-based or greasy food.





#### **2 YEAR LIMITED WARRANTY**

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052 for replacement or refund at our option. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. In no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). **Valid only in U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

Send only the product to the address above. Send all correspondence to Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, California 90245-5012 U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday – Friday, 8:00 a.m. – 6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.



