

Sparkle Style™ House

INSTRUCTIONS

CONTENTS




Requires 2 "AA" batteries (not included). For best performance use alkaline batteries.

Please remove everything from the package and compare to the contents shown here.


If any items are missing, please call 1-800-524-TOYS.

Keep these instructions for future reference as they contain important information.



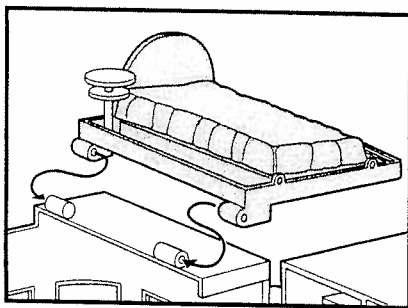

Snap bed onto roof.

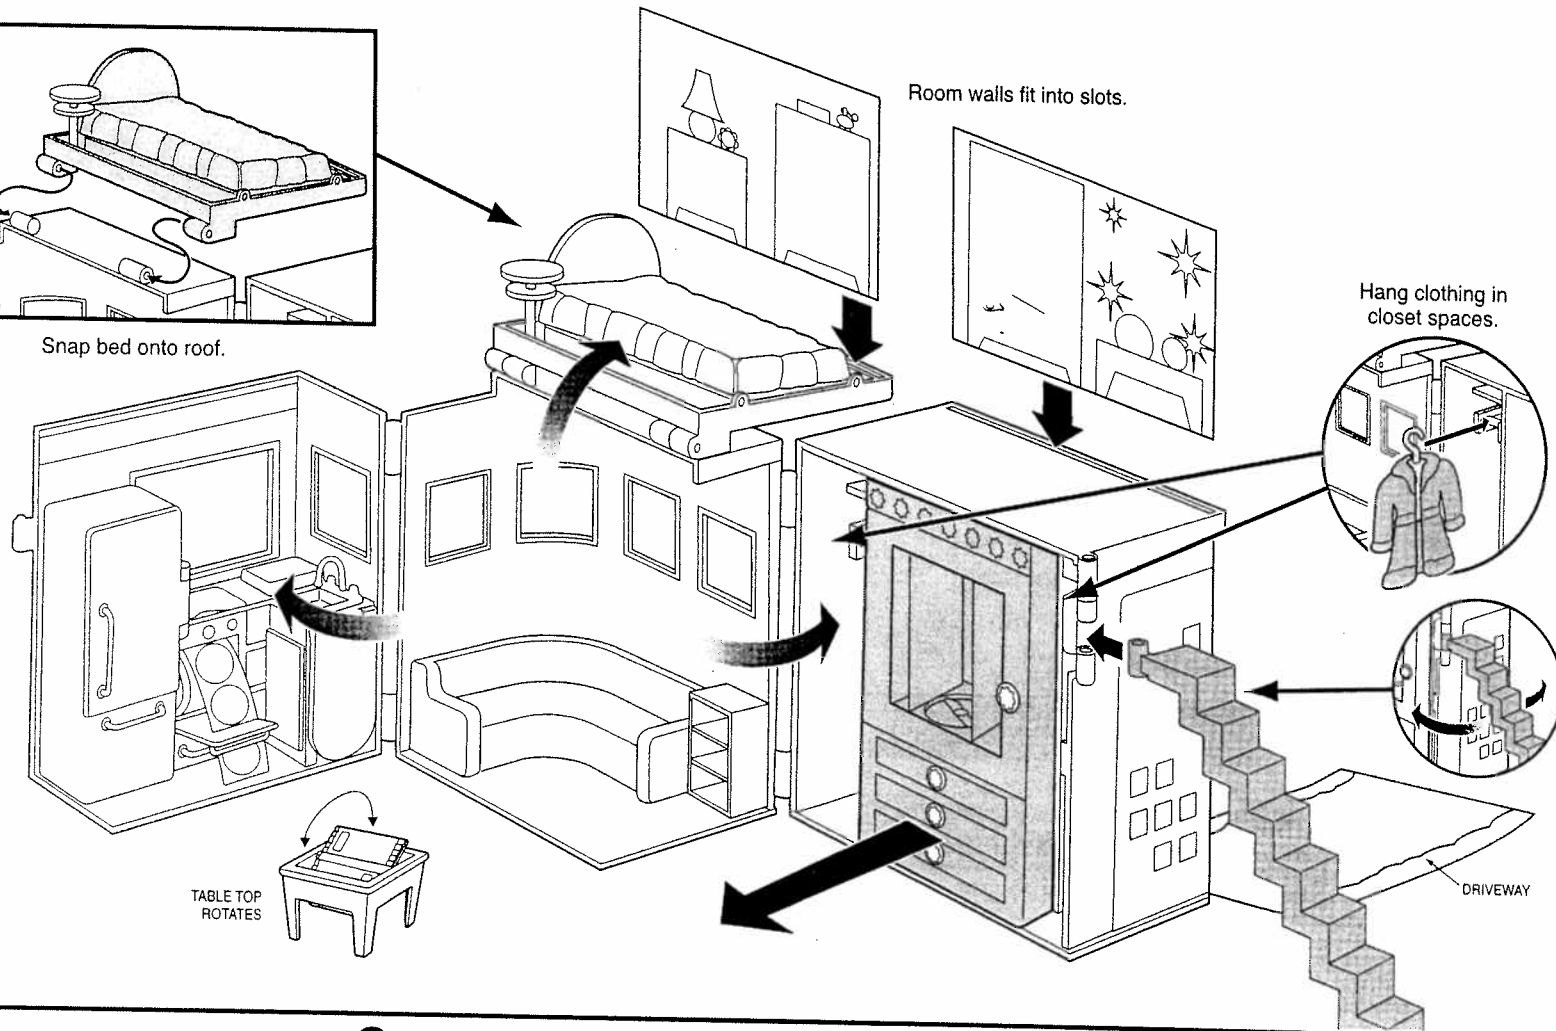

Room walls fit into slots.


Hang clothing in closet spaces.

Use refrigerator for storage.


TABLE TOP ROTATES

DRIVEWAY

1.

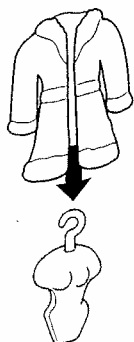


Attach clothing to the body form.

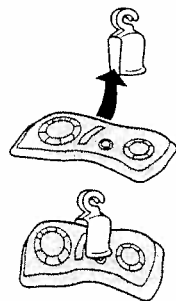

Use clip to hold pillows, lamps, etc.


To add glitter, follow steps 2 through 5.

2.

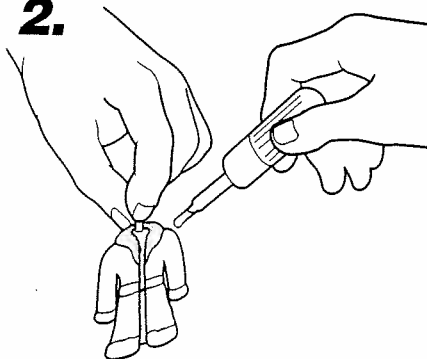


Apply glue where you want to apply glitter.

3.

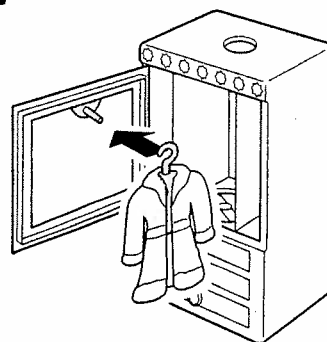

Hang onto holder in Glitter Closet.

4.

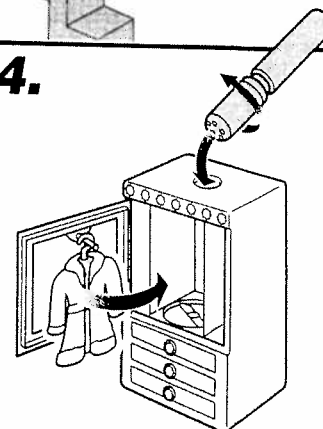


Close closet door. Twist cap clockwise to open then press glitter container into top slot to activate the fan.

5.



Push and containe


Room walls fit into slots.

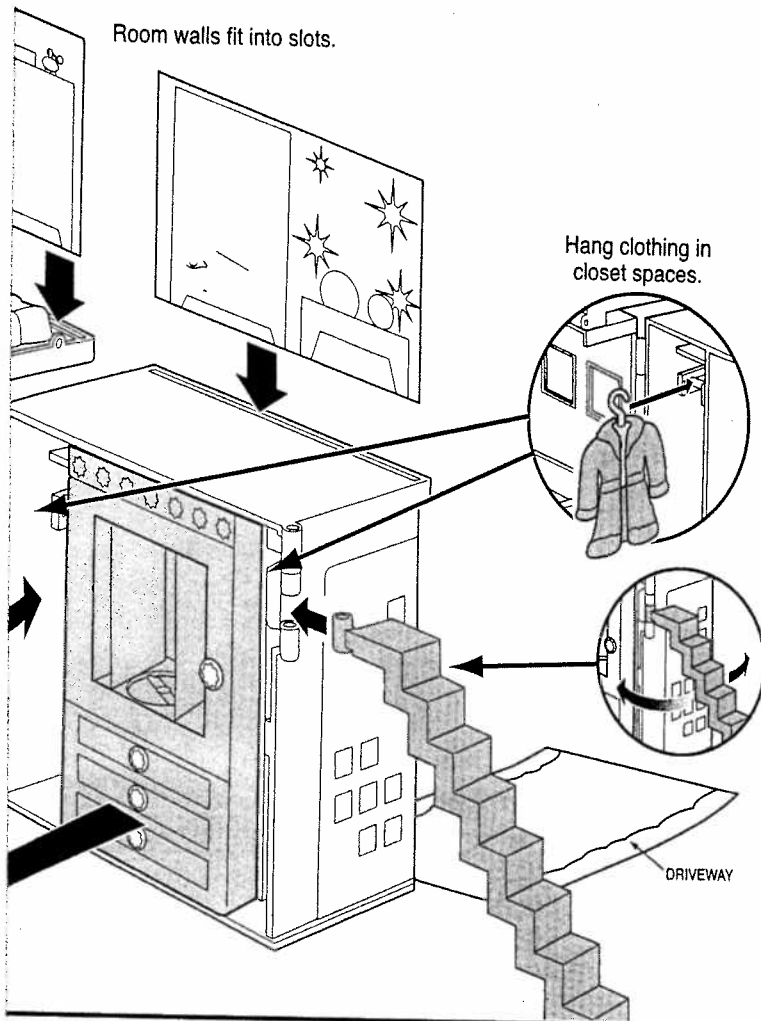

Hang clothing in closet spaces.

Use refrigerator for storage.

DRIVEWAY

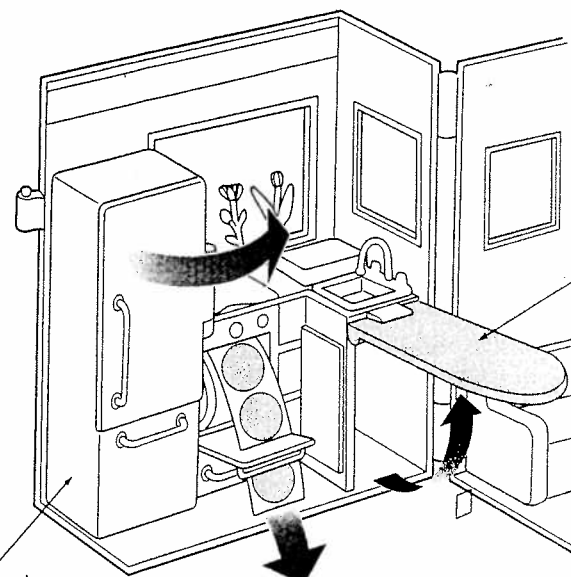


Place food label roll inside oven. Feed leading edge through slot in oven door.

Lift counter top to horizontal position.

NOTES:


- Glue may stain or stick to some surfaces. Avoid contact with carpet, clothing, walls and furniture. Protect play area before use.
- You may use your own glitter with this toy.
- After adding glitter, allow 10-15 minutes for glue to dry completely.
- Product colors and decorations may vary.

3.

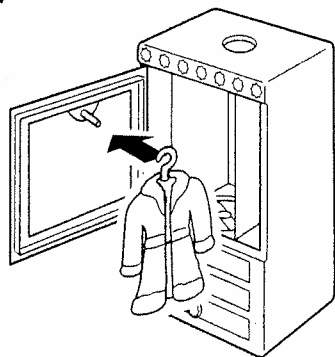


Hang onto holder in Glitter Closet.

4.

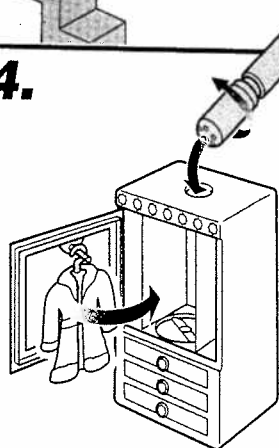

Close closet door. Twist cap clockwise to open then press glitter container into top slot to activate the fan.

5.

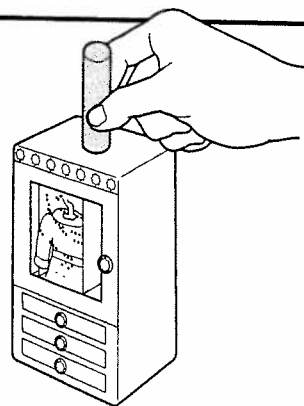

Push and squeeze glitter container as fan whirls.

Recycle excess glitter.

Remove plug from bottom of glitter closet. Twist sparkle container cap and insert container into bottom of closet. Shake closet vigorously to empty excess glitter back into container.


GLITTER CONTAINER CAP



INSERT BATTERIES


Battery door is located in bottom of Glitter Closet

Unscrew battery door with Phillips screwdriver (not included). Remove door and insert 2 "AA" batteries (not included) as shown. Replace door.

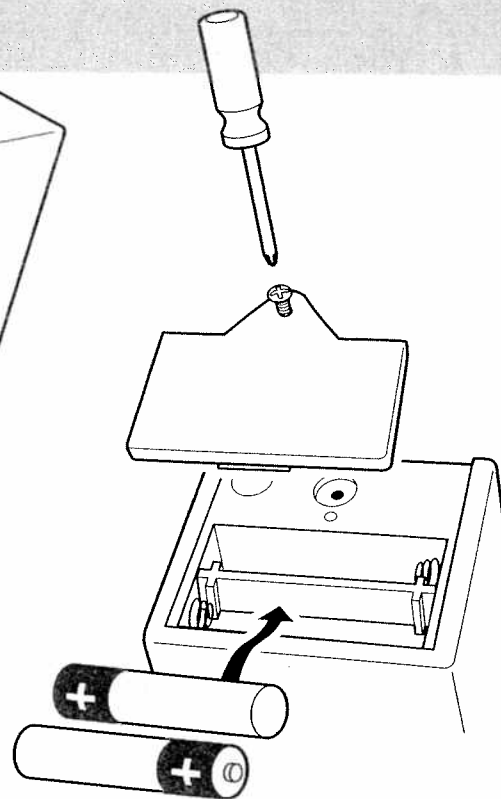


BATTERY SAFETY INFORMATION:


1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the product before they are charged.
3. If removable rechargeable batteries are used, they are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old batteries and new batteries.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instructions.
8. Exhausted batteries are to be removed from the product.
9. The supply terminals are not to be short-circuited.
10. Dispose of batteries safely. Do not dispose of in a fire as the batteries may explode or leak.
11. Products with non-replaceable batteries are not to be disposed of in a fire as the batteries inside may explode or leak.

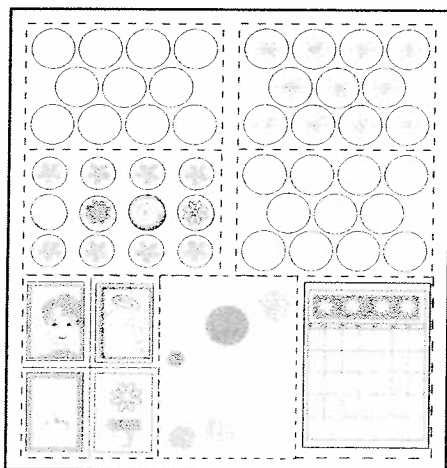

Use labels to decorate your Sparkle Style™ House and furniture.

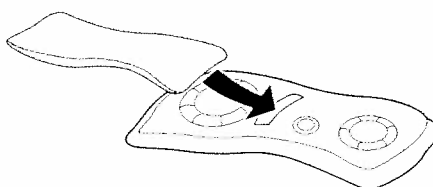


Insert cushion as shown.

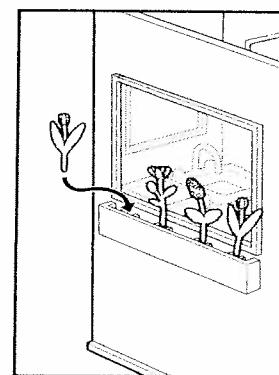


Press flowers into kitchen window box.

STORAGE

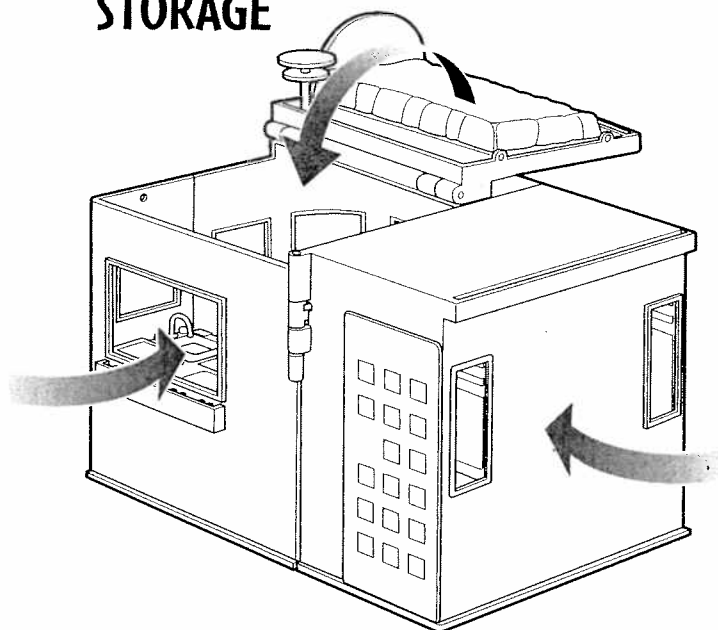

Store fashions and accessories inside house then fold to close.

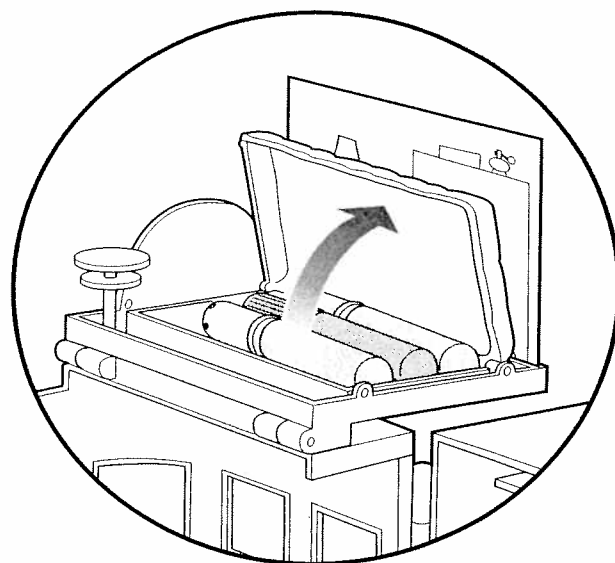

Store glitter & glue tubes under the bed!

2 YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052 for replacement or refund at our option. This warranty does not cover damage resulting from unauthorized modification, accident, misuse, or abuse. In no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). **Valid only in U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above limitations may not apply to you.

Send only the product to the address above. Send all correspondence to Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, California 90245-5012, U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday-Friday, 8:00 a.m.-6:00 p.m. Eastern Time. See telephone directory for Mattel listing.



CONFORMS TO THE SAFETY
REQUIREMENTS OF ASTM F963.



WARNING:

CHOKING HAZARD - Small parts.
Not for children under 3 years.

CONSUMER INFORMATION

MATTY MATTEL™ toys



YOU CAN TELL IT'S MATTEL!™ CALL us toll-free or write with any comments or questions about our products or service. Monday-Friday 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.

Consumer Relations, Mattel, Inc.
333 Continental Blvd.
El Segundo, CA 90245 USA

1(800)524-TOYS

WE ARE DEDICATED TO QUALITY PRODUCTS.