



3+

INSTRUCTIONS CONTENTS



ADULT NOTE: Cut the plastic attachments with scissors and discard the pieces. Please remove everything from the package and compare to the contents shown here. Keep these instructions for future reference as they contain important information.

Requires three "C" cell alkaline batteries (not included).

Fashions and decorations may vary from those shown.

Please remove everything from the package and compare to the contents shown here.

If any items are missing, please call 1-800-524-TOYS.



56056-0920

Keep these instructions for future reference as they contain important information.

©2002 Mattel, Inc. El Segundo, CA 90245 U.S.A. All Rights Reserved.

Mattel U.K., Ltd., Vanwall Business Park, Maidenhead SL6 4UB. Helpline 01628500303.


Mattel Australia Pty., Ltd., Richmond, Victoria 3121. Consumer Advisory Service 1800 800 812 (valid only in Australia).

Mattel East Asia Ltd., World Finance Centre, Harbour City, Tsimshatsui, HK, China.



1. INSTALL BATTERIES:

Open both sets of fabric fasteners on back of doll. Unscrew battery cover and set aside. Insert three "C" cell alkaline batteries as shown. Replace cover. **FOR LONGER LIFE USE ONLY ALKALINE BATTERIES:** Toy may not function or operate with other types of batteries.

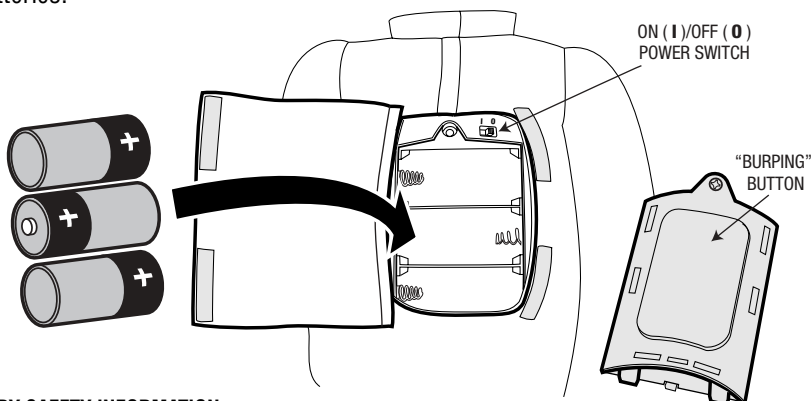

BATTERY SAFETY INFORMATION

1. Non-rechargeable batteries are not to be recharged.
2. Rechargeable batteries are to be removed from the product before they are charged.
3. If removable rechargeable batteries are used, they are only to be charged under adult supervision.
4. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
5. Do not mix old batteries and new batteries.
6. Only batteries of the same or equivalent type as recommended are to be used.
7. Be sure to insert batteries with the correct polarities and always follow the toy and battery manufacturers' instructions.
8. Exhausted batteries are to be removed from the product.
9. The supply terminals are not to be short-circuited.
10. Dispose of batteries safely.
11. Do not dispose of in a fire as batteries may explode or leak.
12. Products with non-replaceable batteries are not to be disposed of in a fire as the batteries may explode or leak.

If the doll is left on for a period of time without play, the doll will "power down" to conserve battery life. The doll's eyes reopening slightly indicate this "power down" mode.

2. SKIN CARE HINTS:


- If skin is dirty, clean with warm (85°-100° F / 29°-37° C) water and dish washing detergent or with household alcohol.
- After cleaning, allow to dry at least 2-5 minutes before use.
- Talc can be applied to smooth the surface. (Use only a very small portion.)

DO NOT do the following:

- Longtime exposure to direct sunlight.
- Apply excessive water to skin.
- Apply any type of ink.
- Apply nail polish.
- Clean with ammonia or any ammonia based detergents.
- Expose to high heat.
- Expose to sucrose-based or greasy food.

IMPORTANT NOTE: Please protect your baby's delicate skin from indentations, punctures or wrinkles. Keep her away from sharp objects, irregular surfaces and excessive heat. For instance, do not leave her out in the hot sun or inside a car on a hot day, and do not stuff her in a toy box.

3. TO PLAY:

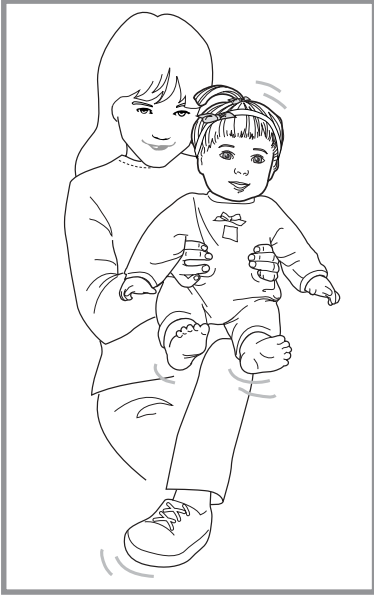

Turn power switch to ON (I).

Play with your doll by bouncing her several times up and down on your knee. Your doll will “giggle” and “squeal” with delight.

Insert bottle or doll’s thumb all the way into mouth at an upward angle in such a way that the tip of the object makes contact with roof of doll’s mouth. This will activate a “sucking” motion.



“Feed” your doll with her bottle. If you take the bottle away, your doll may make fussing sounds or say “Ba” if she is still “hungry” and wants the bottle back.

When feeding time is over, “burp” the baby by holding the doll in an upright position and patting her on the back. If you do not hear a “burp” after patting the doll more than 6 times, try patting another area on her back.

NOTE: You can press the BURPING BUTTON on the doll’s back 6 times to manually activate the “burping” sound.



Lay your doll down or rock her gently back and forth. She’ll drift off to “sleep”! Place your doll upright to “wake” her. Doll will make random motions and sounds without any physical interaction for approximately 6 minutes. After this, it will go into a “sleep” mode. During the “sleep” mode, the doll may open her eyes partially. This is normal. Tipping the doll forward to a sitting position or “feeding” the doll will bring it out of “sleep” mode.

When play is finished, it is important that you turn off power switch while the doll’s eyes are still open.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Mattel Inc.
333 Continental Blvd.
El Segundo, CA
(310) 252-2400"

TWO YEAR LIMITED WARRANTY

Mattel, Inc. warrants to the original consumer purchaser that this product will be free of defects in material or workmanship for two years (unless specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date of purchase, postage prepaid, to Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052 for replacement or refund at our option. This warranty does not cover damage resulting from unauthorized modification, accident, misuse or abuse. In no event shall we be responsible for incidental, consequential, or contingent damages (except in those states that do not allow this exclusion or limitation). **VALID ONLY IN U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state. Some states do not allow the exclusion of incidental or consequential damages, so the above exclusions or limitations may not apply to you.

Send only the product to the address above. Send all correspondence to Consumer Relations, Mattel, Inc., 333 Continental Blvd., El Segundo, California 90245-5012 U.S.A. Or you may phone us toll-free at 1-800-524-TOYS, Monday – Friday, 8:00 a.m. – 6:00 p.m. EST. Outside U.S.A., see telephone directory for Mattel listing.

CONSUMER INFORMATION

MATTEL™ TOYS



YOU CAN TELL IT'S MATTEL!™ CALL us toll-free or write with any comments or questions about our products or service. Monday-Friday 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.

Consumer Relations, Mattel, Inc.
333 Continental Blvd.
El Segundo, CA 90245 USA

1 (800) 524-TOYS

WE ARE DEDICATED TO QUALITY PRODUCTS.
