



Barbie®





Doll

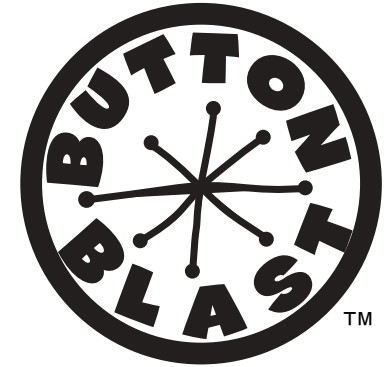

INSTRUCTIONS

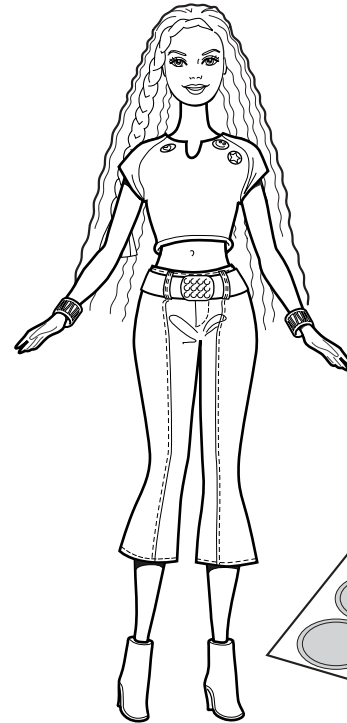

CONTENTS

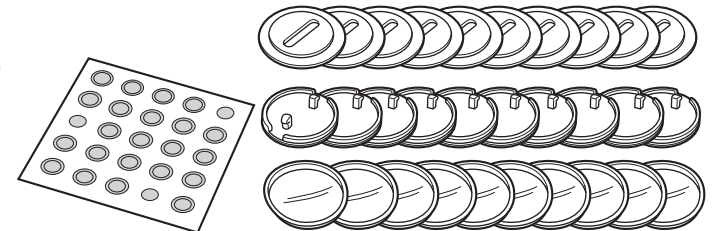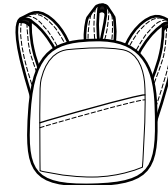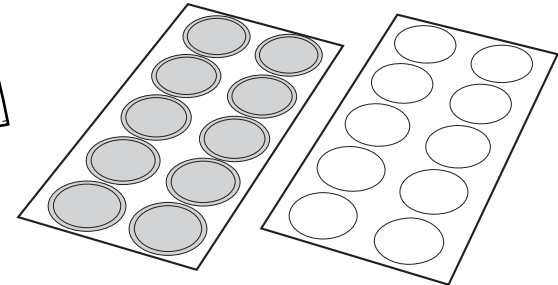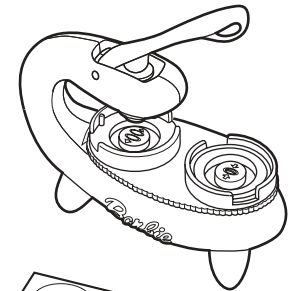

CONSUMER INFORMATION

MATTY MATTEL™ toys



YOU CAN TELL IT'S MATTEL!™ CALL us toll-free or write with any comments or questions about our products or service. Monday-Friday 8:00 a.m.-6:00 p.m. Eastern Time. Outside U.S.A., see telephone directory for Mattel listing.

Consumer Relations, Mattel, Inc.
333 Continental Blvd.
El Segundo, CA 90245 USA

1(800) 524-TOYS

WE ARE DEDICATED TO QUALITY PRODUCTS.

WARNING:
CHOKING HAZARD - Small parts.
Not for children under 3 years.

Colors and decorations may vary from those shown.

Please remove everything from the package and compare to the contents shown here. If any items are missing, please call 1-800-524-TOYS.






56946-0920


Keep these instructions for future reference as they contain important information.


HOW TO ASSEMBLE BUTTONS

- 1 Choose button artwork or create your own on the blank button sheet.

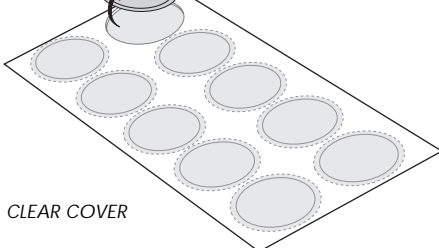

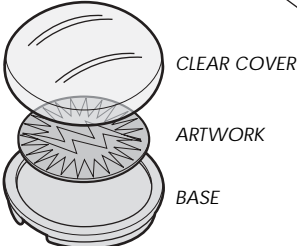- 2 Place the pieces on the tray in this order.

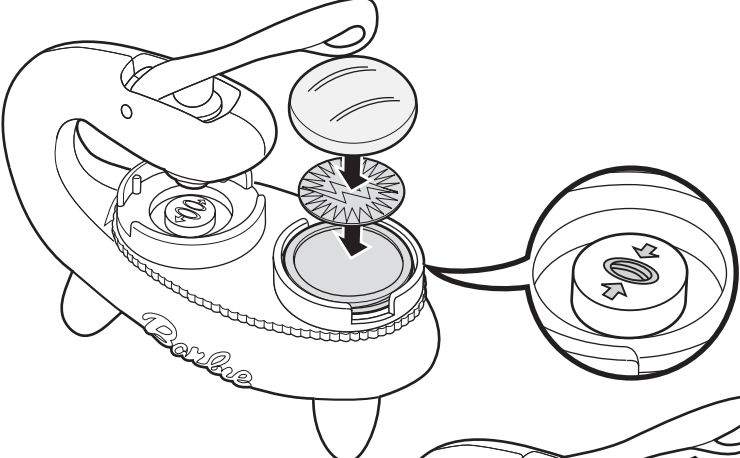

- 3 Place each piece in the order shown in step 2 on the ASSEMBLE  position of button maker tray.

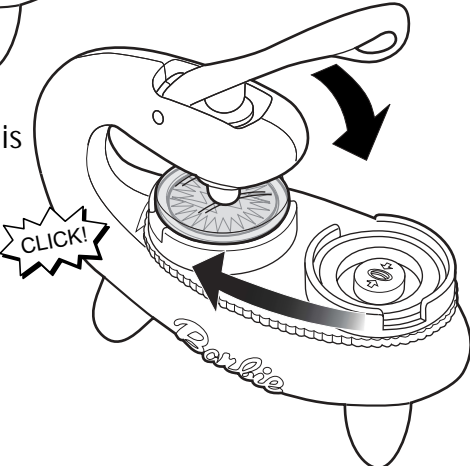

- 4 TURN the tray so that the assemble position is under the lever, as shown. The tray will "click" when in the correct position. PRESS the lever down to make button.



HOW TO TAKE APART BUTTONS TO USE AGAIN AND AGAIN.

- 1 Place the assembled button on the UNASSEMBLE  position on the button maker tray.

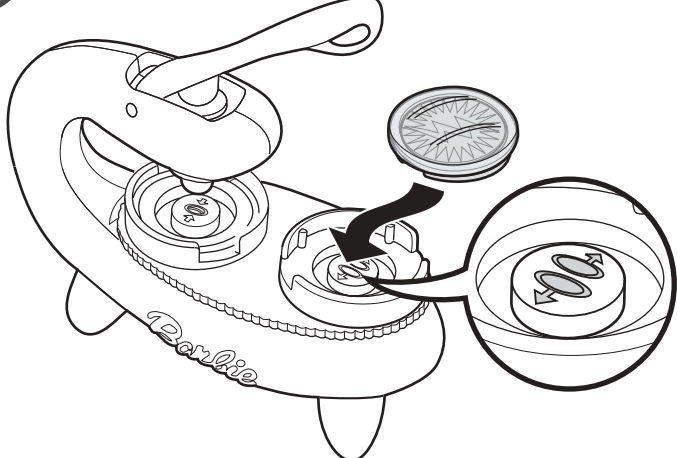
- 2 TURN the tray so that the unassemble position is under the lever, as shown. The tray will "click" when in the correct position. PRESS the lever down for the button pieces to snap apart.

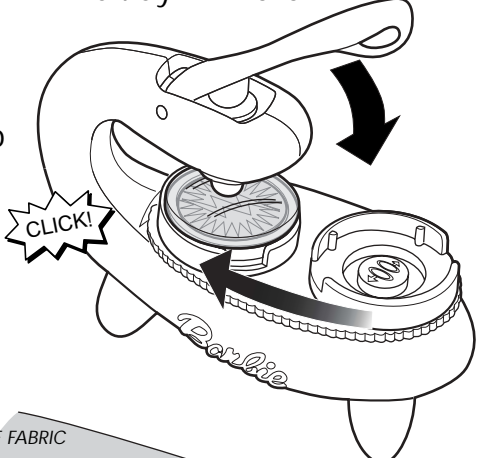

How to Put a Button on Clothing.

Press the completed button into the front side of the fabric, and snap on a button retainer. Be sure to keep the smooth side of the retainer away from the fabric, as shown.

