



 
# POWER EXPRESS TRAIN SET™

**! WARNING:**  
CHOKING HAZARD - Small parts.  
Not for children under 3 years.



PLEASE KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE AS THEY CONTAIN IMPORTANT INFORMATION.

## TO ENJOY ALL FEATURES AVAILABLE IN THE TRAIN SET, FOLLOW THESE GUIDELINES CLOSELY:

- Connect the train as shown, Locomotive - Passenger Car - Flatbed Car - Vehicle Carrier. Once connected, the moveable panel on the FLATBED CAR must be on the left hand side of the connected train.
- Set the train in the direction shown in the TRACK LAYOUTS section, following the rules carefully and you will enjoy all featured functions of this train set.
- Requires 2 "C" size (LR 14) batteries (not included).

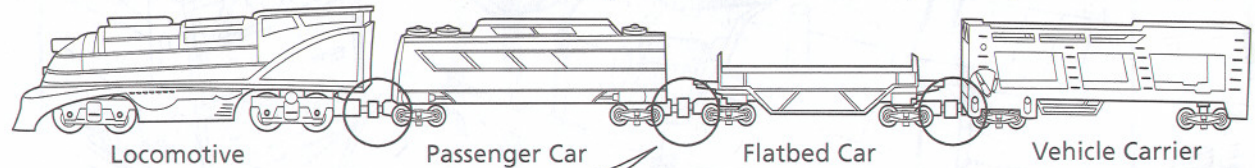

- Use alkaline batteries for longest life and best performance.
- Tool needed for battery installation : Phillips head screwdriver (not included).
- Replace batteries when train motion becomes too slow or cannot go uphill.
- This product is not recommended for use on loose dirt or wet surfaces.
- Train cars have best performance on supplied tracks.
- Do not play train cars on carpet since carpet does not provide suitable traction and lint from carpet may damage cars.
- Do not immerse in water.

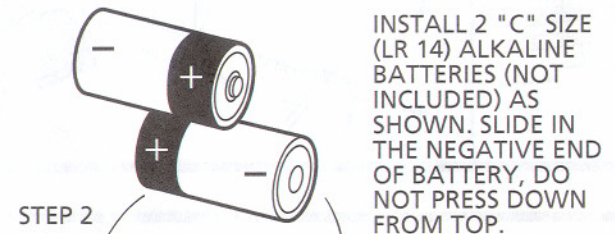
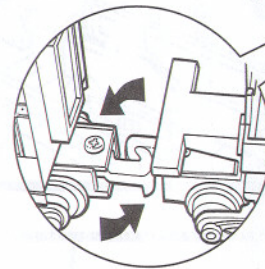


INSTALL 2 "C" SIZE (LR 14) ALKALINE BATTERIES (NOT INCLUDED) AS SHOWN. SLIDE IN THE NEGATIVE END OF BATTERY, DO NOT PRESS DOWN FROM TOP.

### CAUTION: To Avoid Battery Leakage:

1. Non-rechargeable batteries are not to be recharged.
2. Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
3. Do not mix old and new batteries.
4. Only batteries of the same or equivalent type as recommended are to be used.
5. Batteries are to be inserted with the correct polarity.
6. Exhausted batteries are to be removed from the toy.
7. The supply terminals are not to be short-circuited.
8. Remove batteries from product before extended storage.
9. Rechargeable batteries are to be removed from the toy before being charged.
10. Rechargeable batteries are only to be charged under adult supervision.

**CAUTION:**  
Do not stall the motor during use.

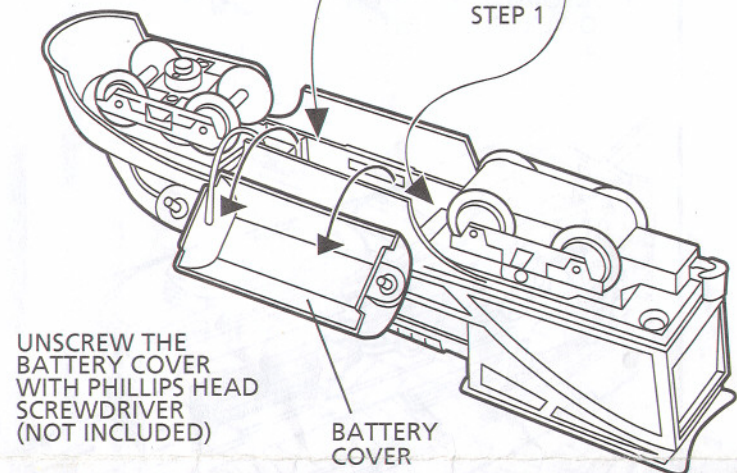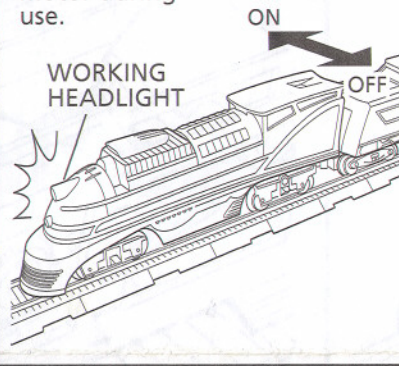



UNSCREW THE BATTERY COVER WITH PHILLIPS HEAD SCREWDRIVER (NOT INCLUDED)

# GETTING STARTED


The track layout provided below is an elementary track layout. It is for easy assembly and quick enjoyment of this train set.

For the elementary track layout, assemble the **CARGO LOADING DOCK** as shown in **DIAGRAM 1** and the **GATED CROSS-JUNCTION** as shown in **DIAGRAM 2**. Connect the tracks and parts as indicated in the layout below. Enjoy!


For advanced enthusiasts, follow directions shown in the **TRACK LAYOUTS** section for other exciting play patterns.

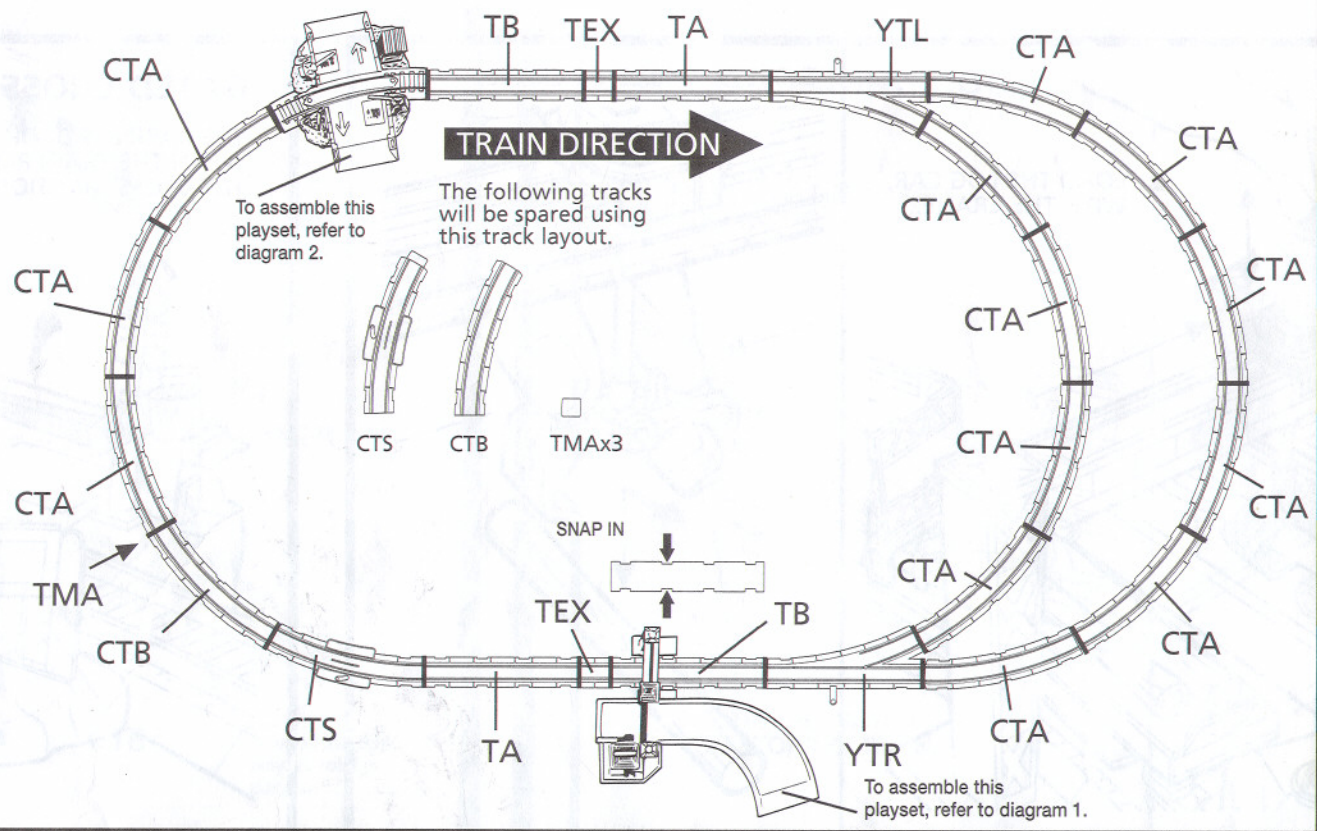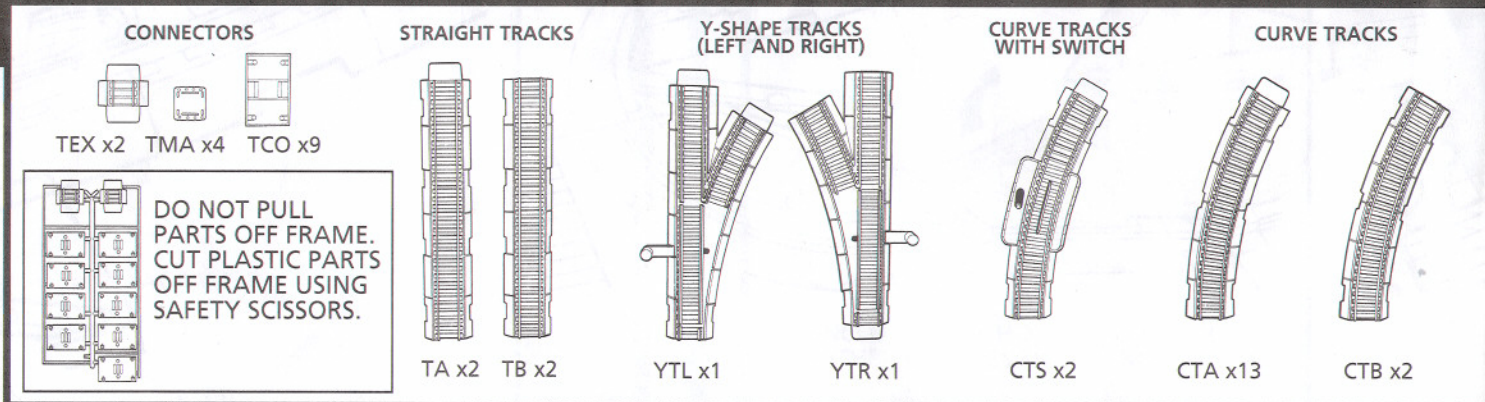



## 1 CARGO LOADING DOCK ASSEMBLY AND LABEL PLACEMENT

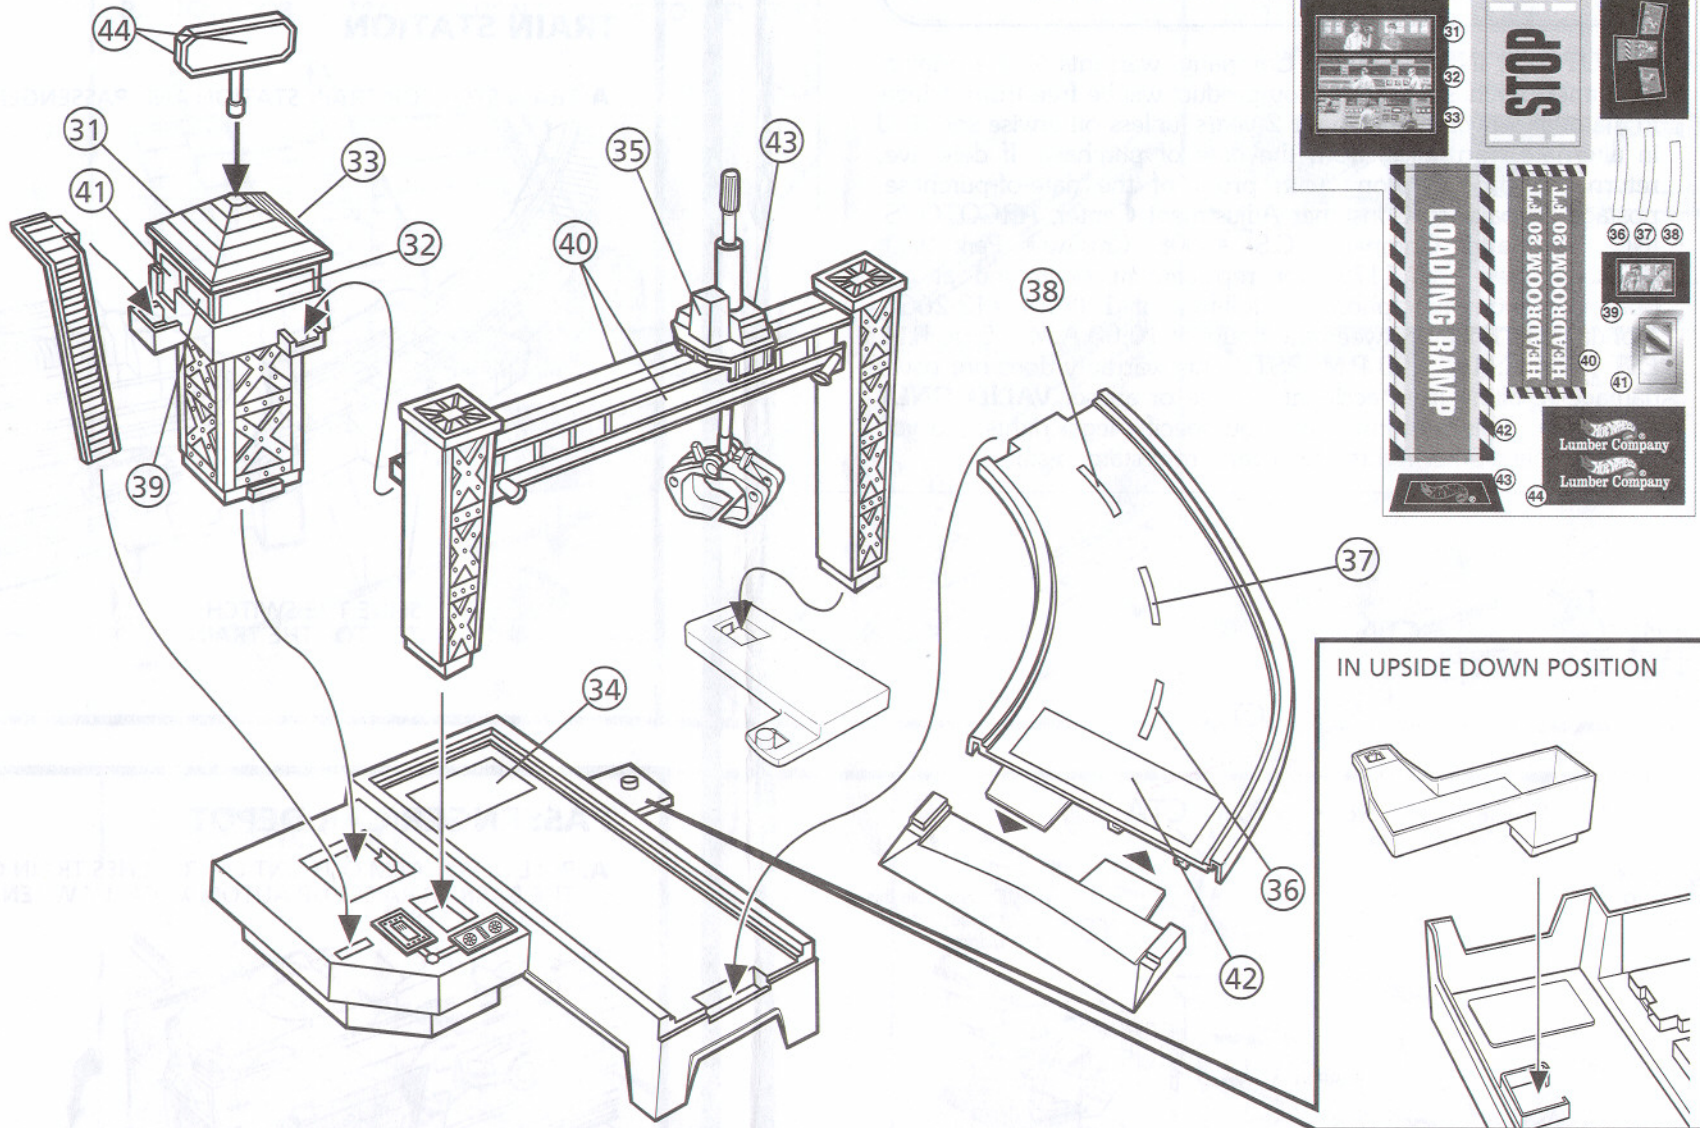

## 2 GATED CROSS JUNCTION ASSEMBLY AND LABEL PLACEMENT

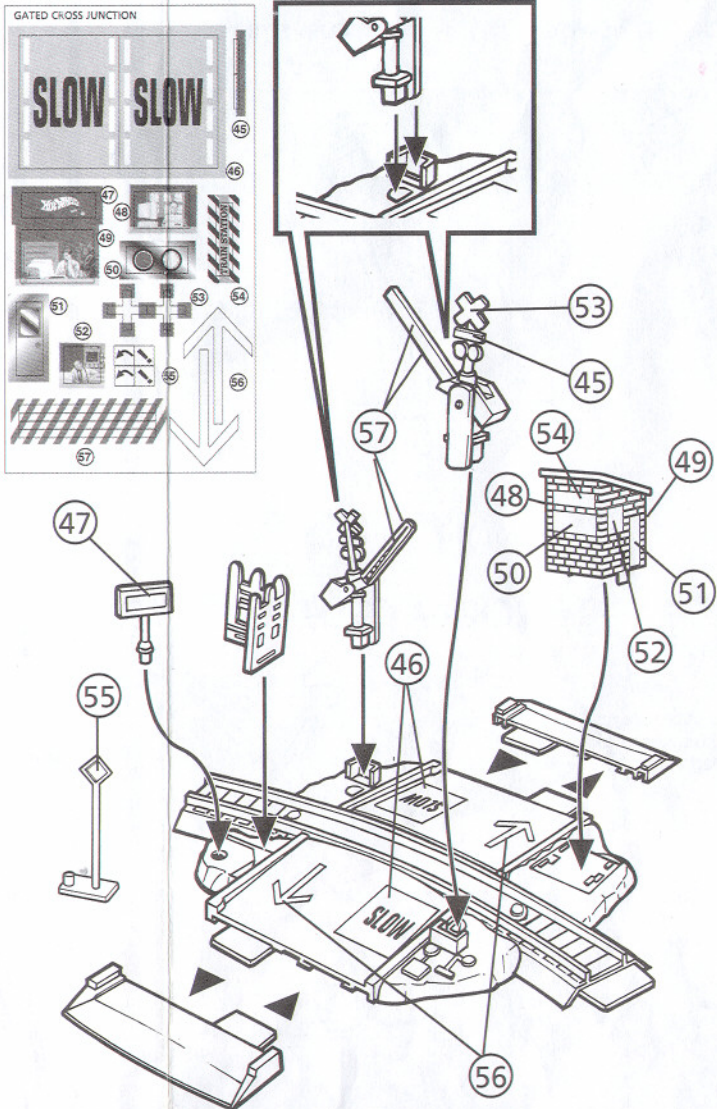


## 3 TRAIN STATION ASSEMBLY AND LABEL PLACEMENT

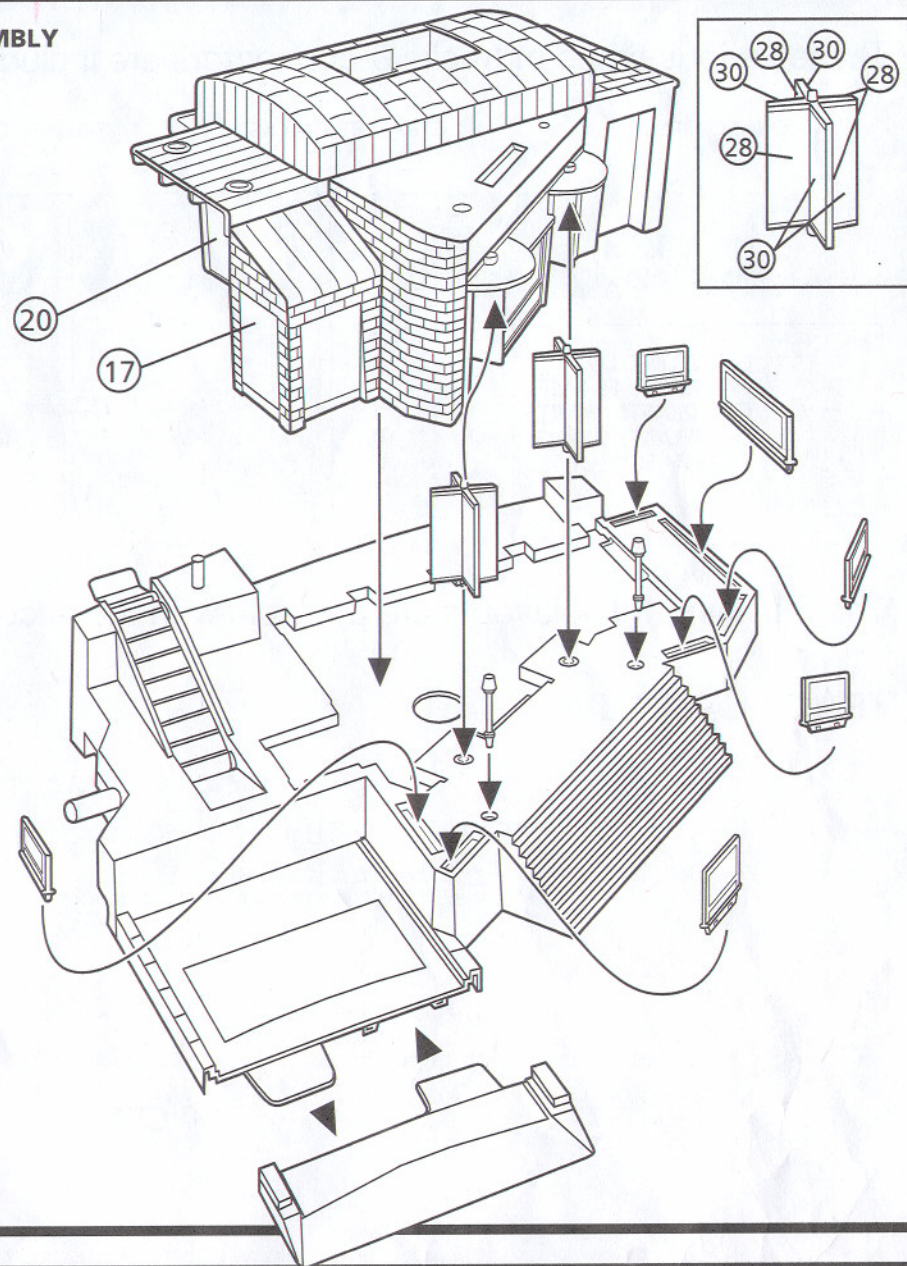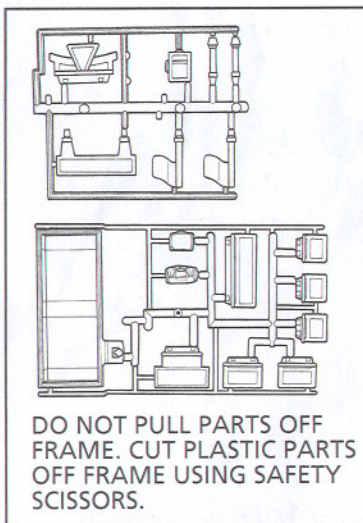  



4

 **TRAIN STATION ASSEMBLY  
AND LABEL PLACEMENT**




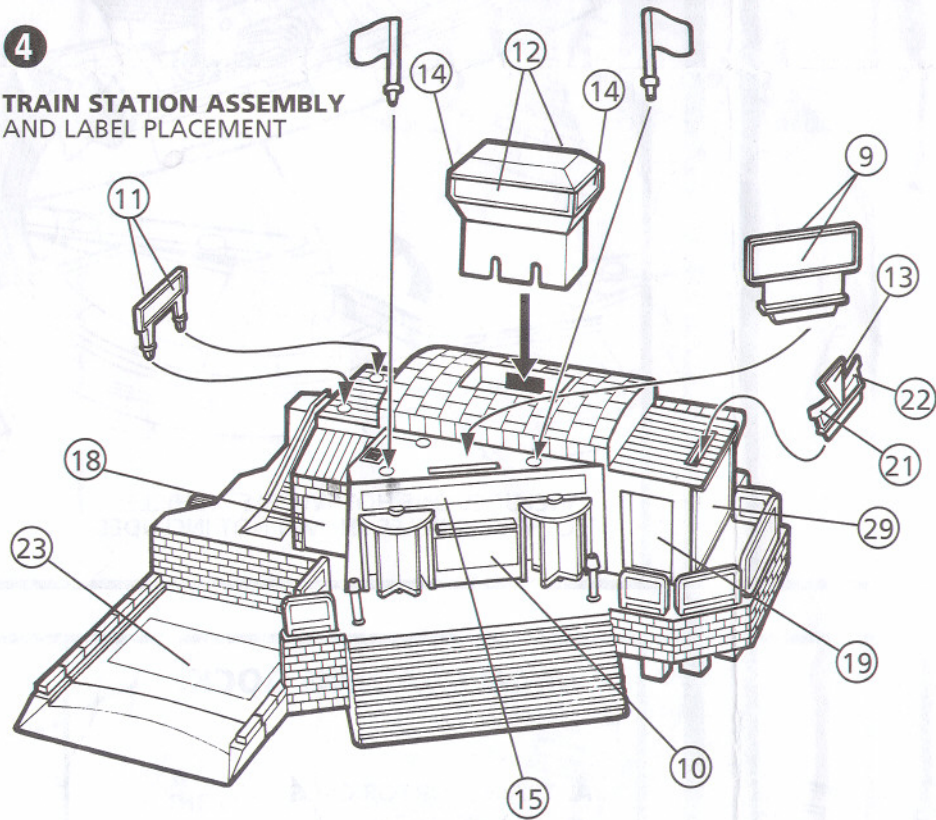


5

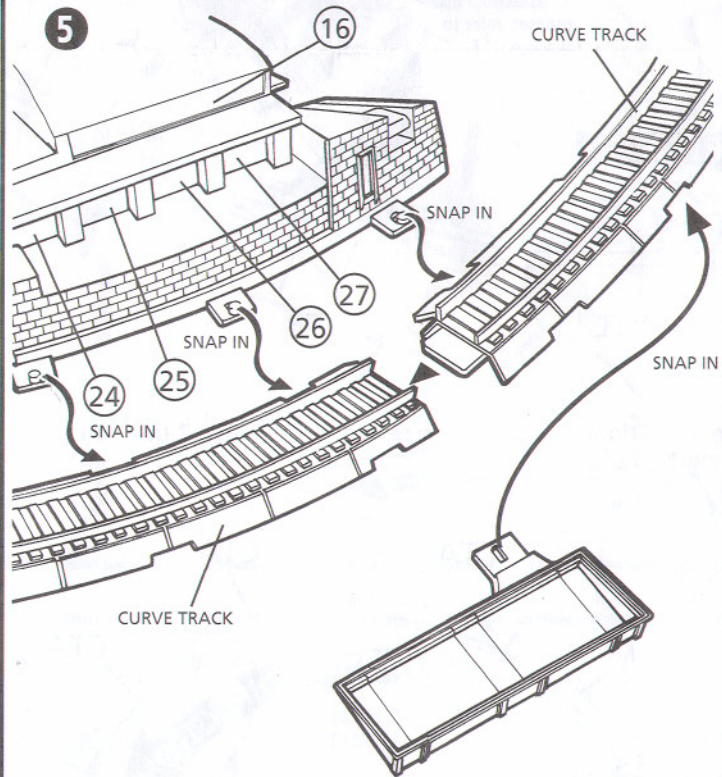 


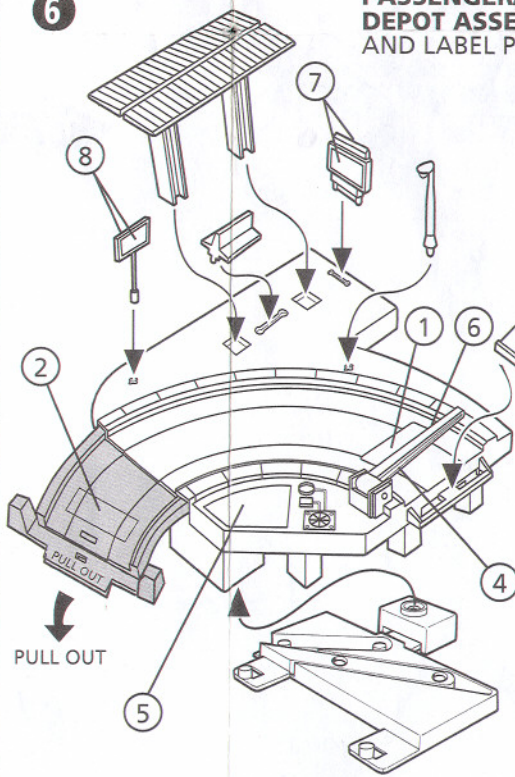 **6****PASSENGER/CAR  
DEPOT ASSEMBLY  
AND LABEL PLACEMENT**


**DO NOT PULL PARTS OFF FRAME. CUT PLASTIC PARTS OFF FRAME USING SAFETY SCISSORS.**

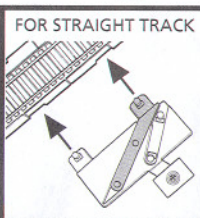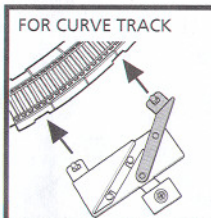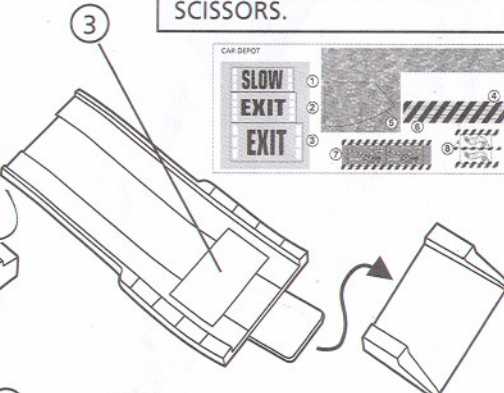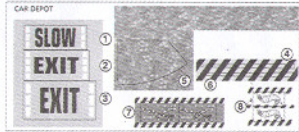    **PULL OUT**

## 7 TRACK TRESTLE ASSEMBLY

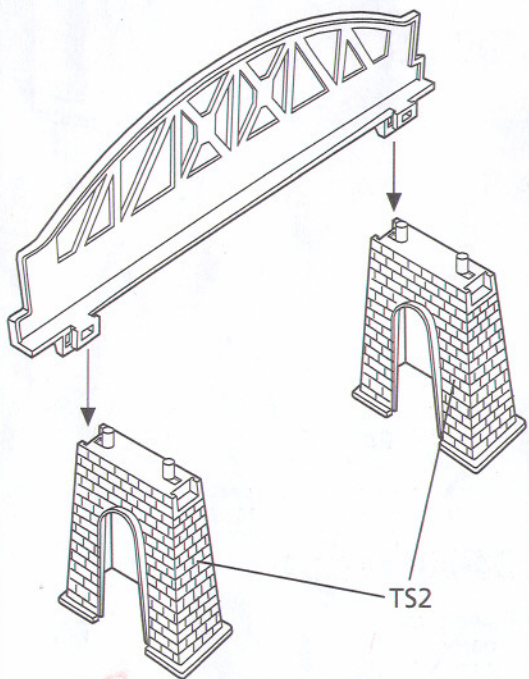 


## 8

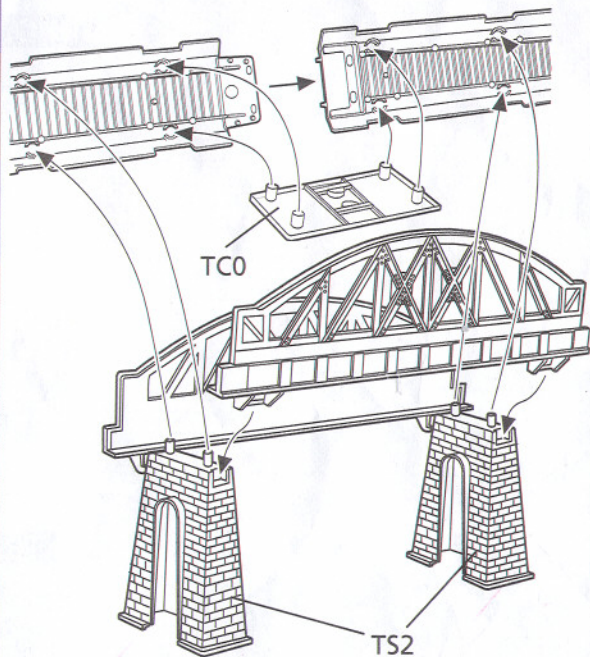 


9



## TRACK SUPPORT ASSEMBLY

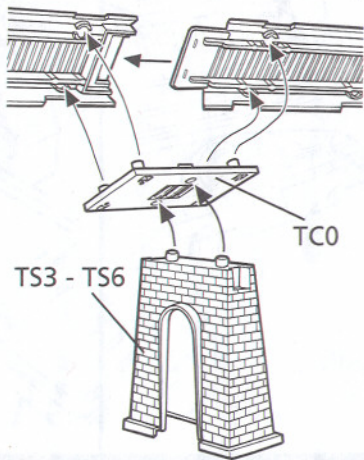 

10

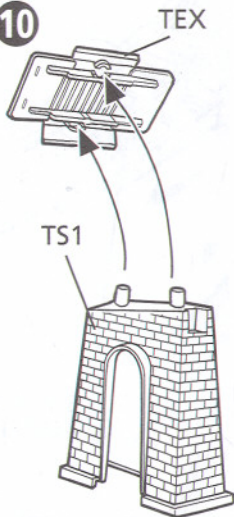 



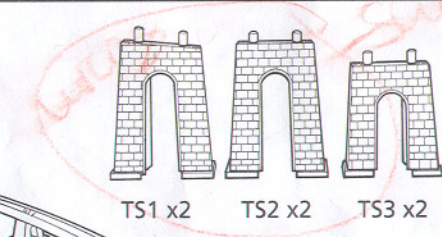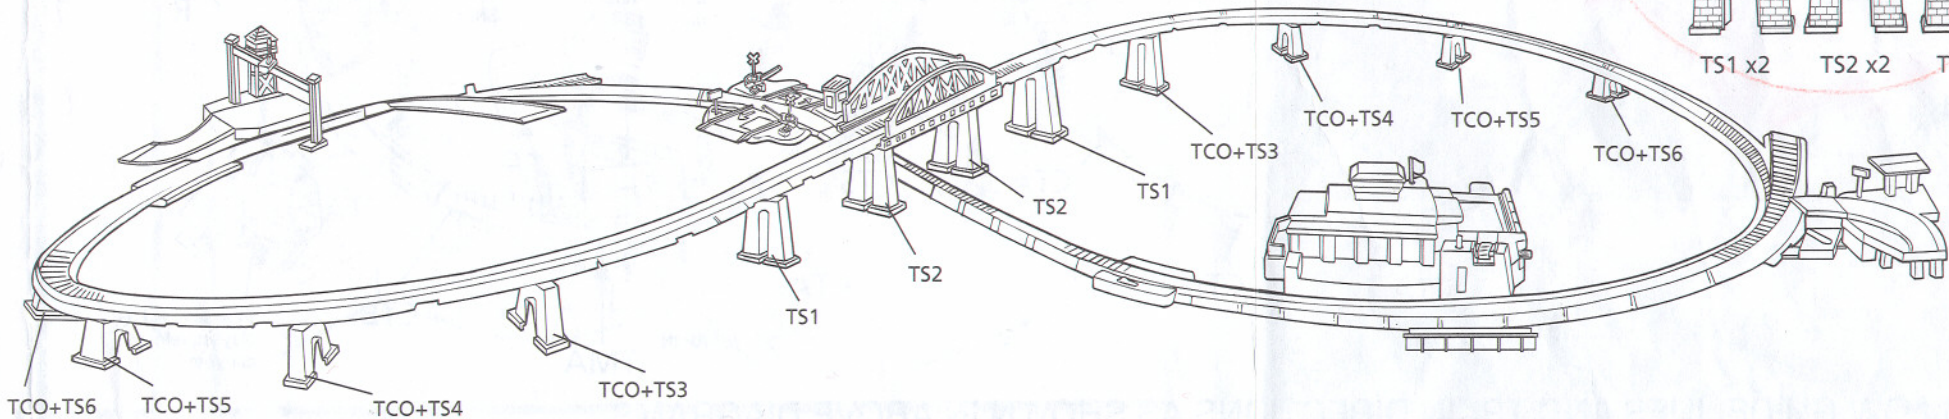  



TS4 x2



TS5 x2



TS6 x2



TEX x2




TMA x4



TCO x9

12

## ACCESSORIES ASSEMBLY

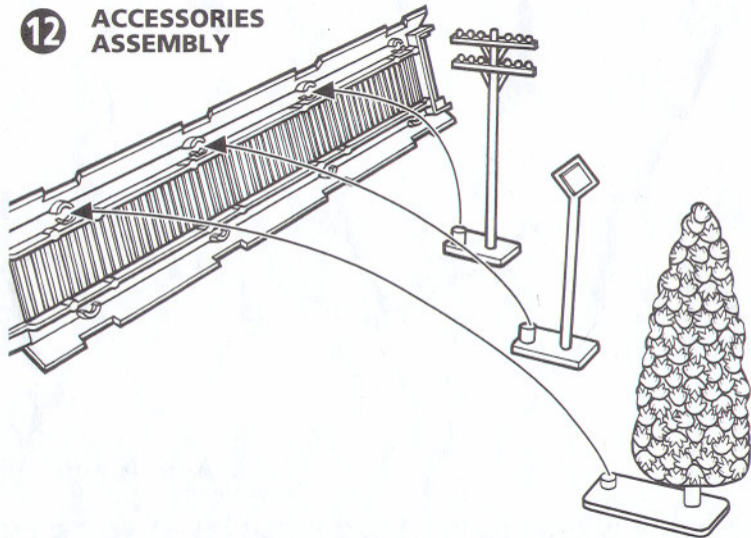 


# TRACK LAYOUTS

These various types of tracks & connectors are included in this set.


## CONNECTORS



 TEX x2 TMA x4 TCO x9

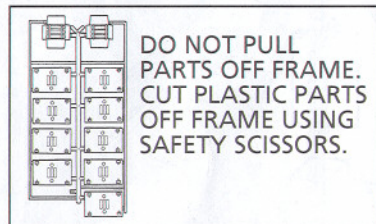


## STRAIGHT TRACKS

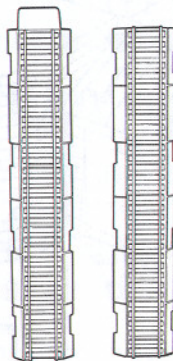 


TA x2 TB x2

## Y-SHAPE TRACKS (LEFT AND RIGHT)

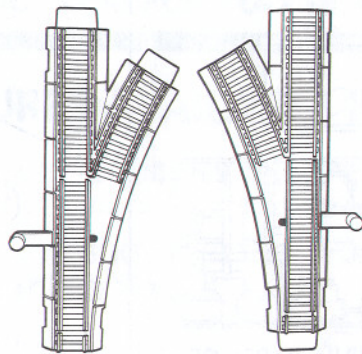 


YTL x1 YTR x1

## CURVE TRACKS WITH SWITCH

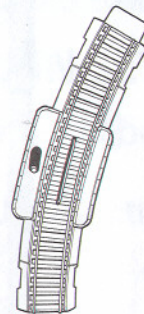 

CTS x2

## CURVE TRACKS

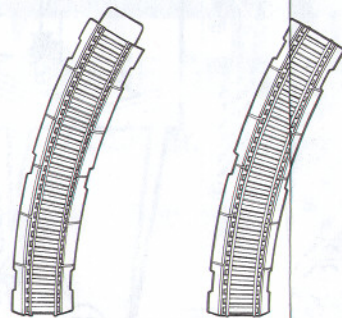 


CTA x13 CTB x2

The following track layouts are possible with these connectors & tracks.




# TRACK LAYOUT 2

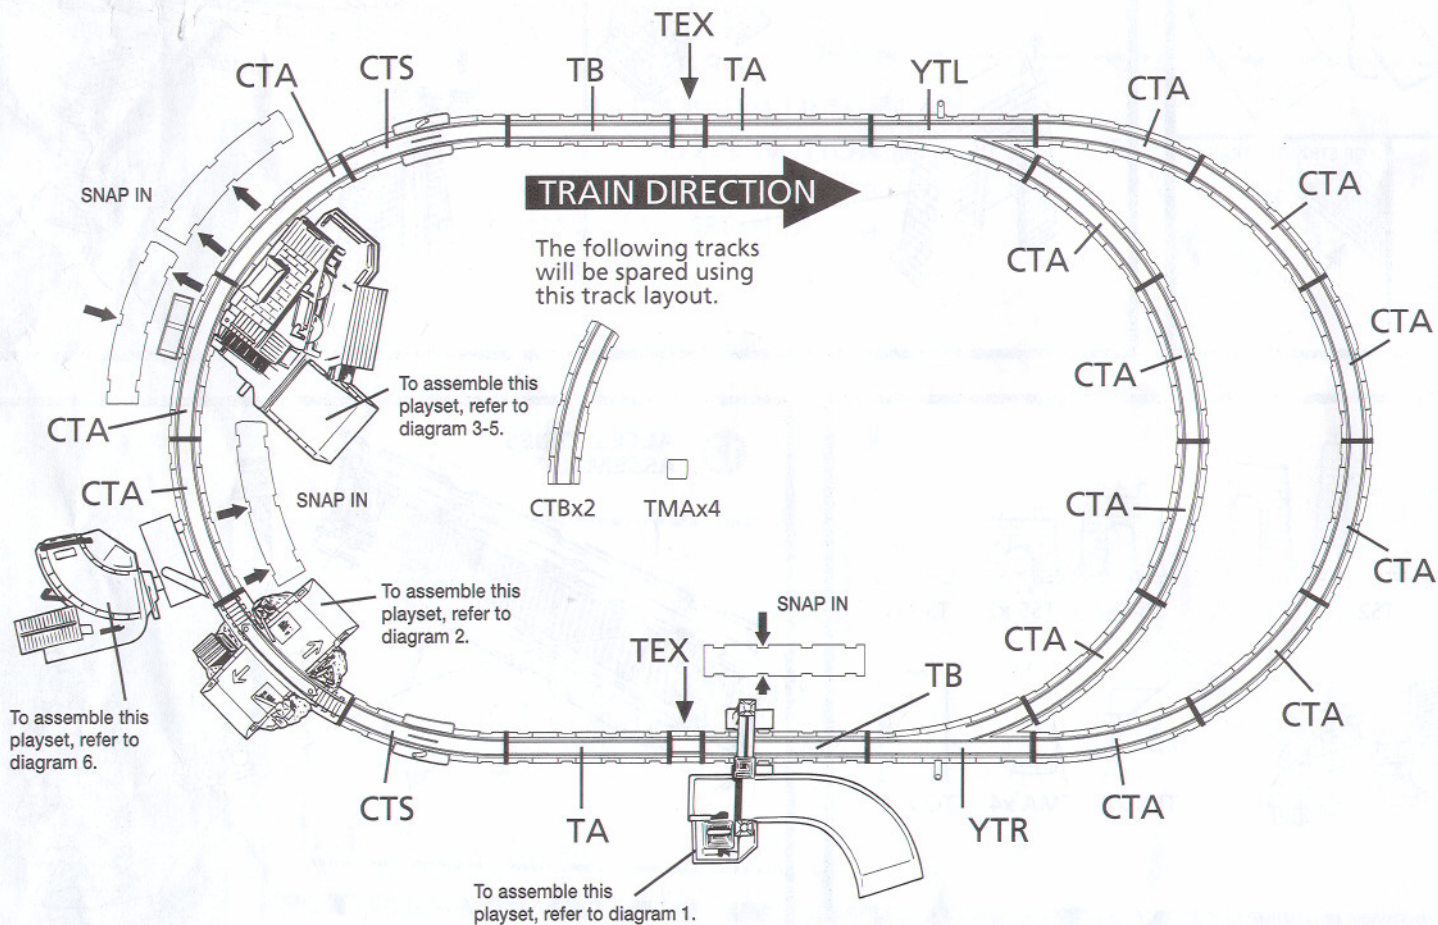 


**NOTE: TO MAXIMIZE THE PERFORMANCE OF THE TRAIN SET, PLEASE FOLLOW GUID**

# TRACK LAYOUT 3

 this  
to

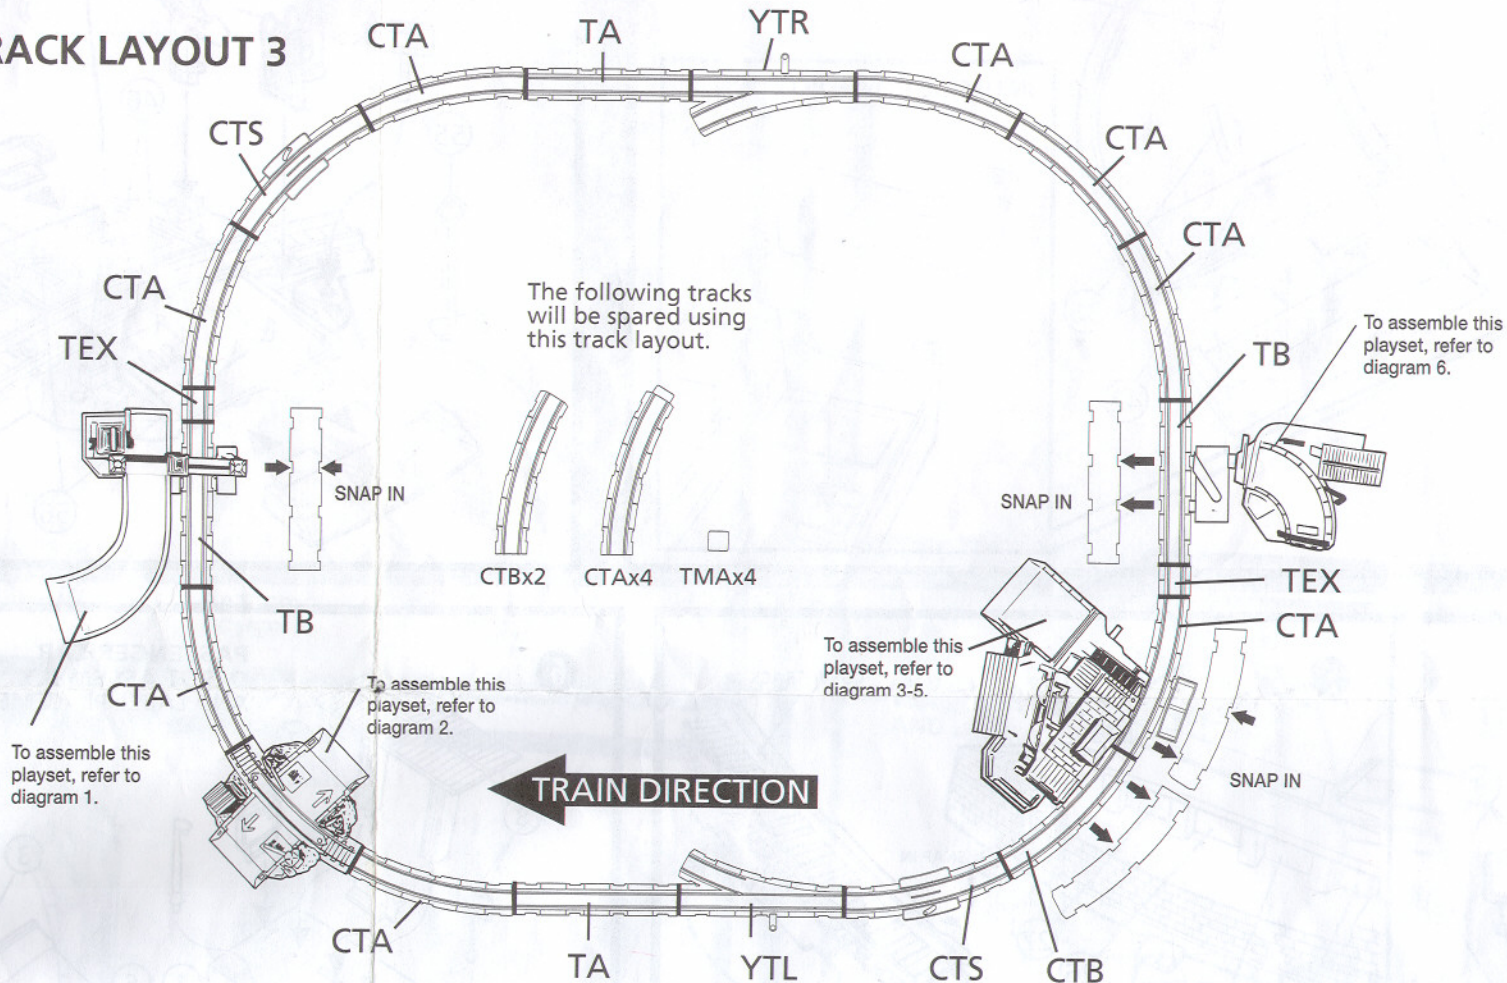

 The following tracks  
will be spared using  
this track layout.

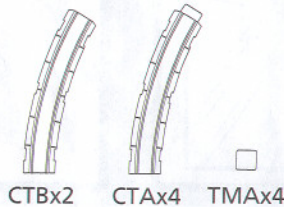

**TRAIN DIRECTION**

To assemble this  
playset, refer to  
diagram 1.

To assemble this  
playset, refer to  
diagram 2.

To assemble this  
playset, refer to  
diagram 3-5.

 
To assemble this  
playset, refer to  
diagram 6.






**TRAIN STATION**

**A.** TRAIN STOP FOR TRAIN STATION AND PASSENGER/CAR DEPOT.

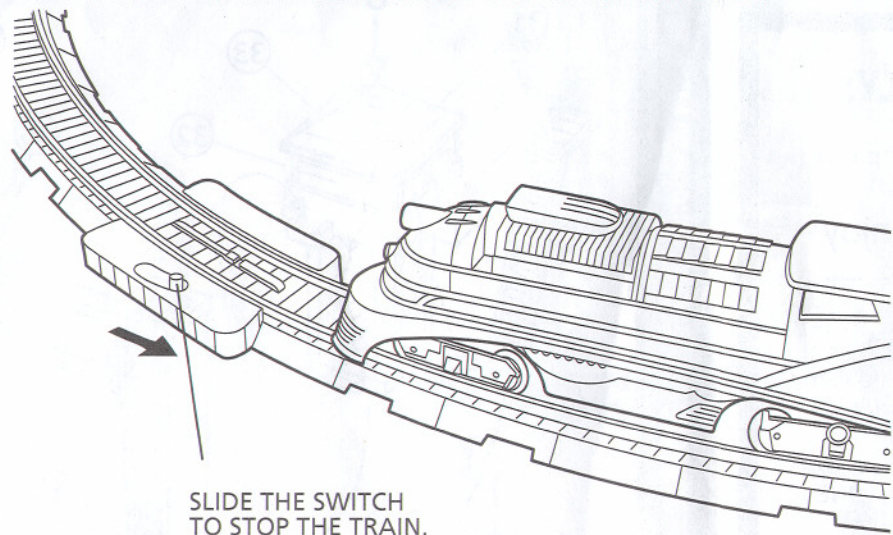


SLIDE THE SWITCH  
TO STOP THE TRAIN.

 **B.** TURN KNOB ON TRAIN STATION TO DRIVE CONVEYOR BELT.

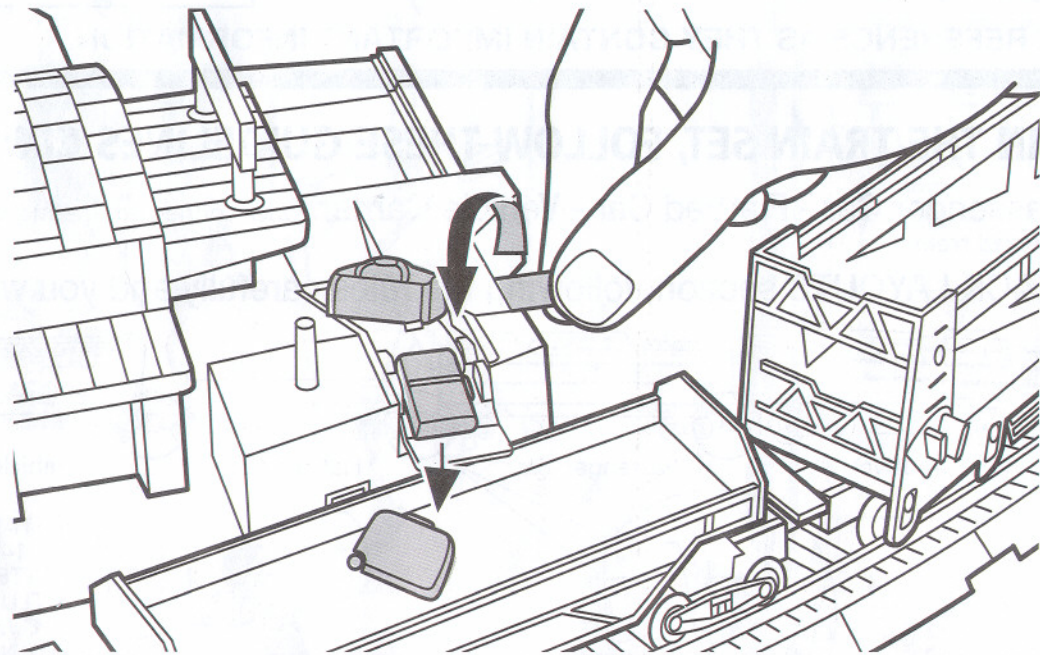


# IES AS SHOWN BELOW.

 **C. TURN THE SWIVEL DOOR.**

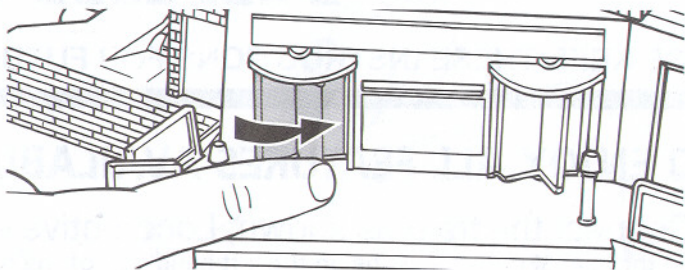

**D. RELEASE  
THE LOG**

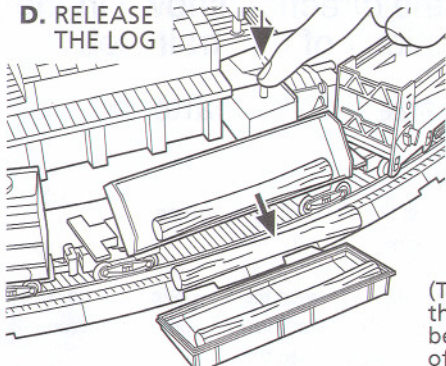 


**PRESS BUTTON ON  
LOG TRAILER TO  
RELEASE LOGS  
TO LOG CONTAINER.**

**(The moveable panel on  
the FLATBED CAR  
must be on the left hand side  
of the connected train.)**


## PASSENGER/CAR DEPOT

 - A.** PULL DEPOT ARM OUT UNTIL IT REACHES TRAIN CAR GATE. THE BARRIER RAISES UP AUTOMATICALLY WHEN DEPOT ARM PULLS OUT.

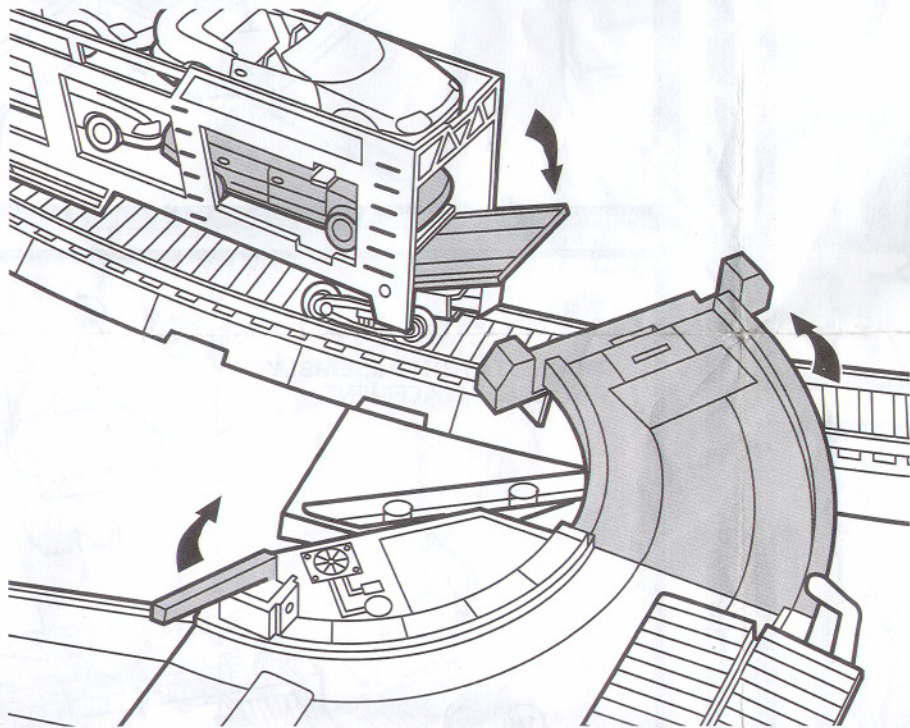


INCLUDES ONE HOT WHEELS® VEHICLE.  
OTHER VEHICLES SHOWN NOT INCLUDED.

 - B.** UNLOAD VEHICLES ON LOWER LEVEL FIRST.

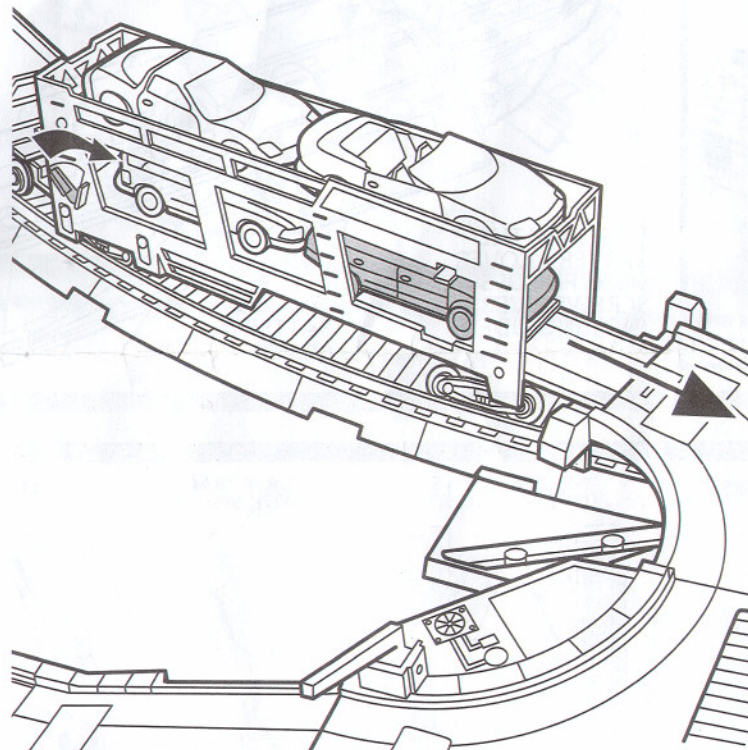


 C. THEN PUSH SIDE TAB DOWN TO  
RELEASE VEHICLES ON UPPER LEVEL.

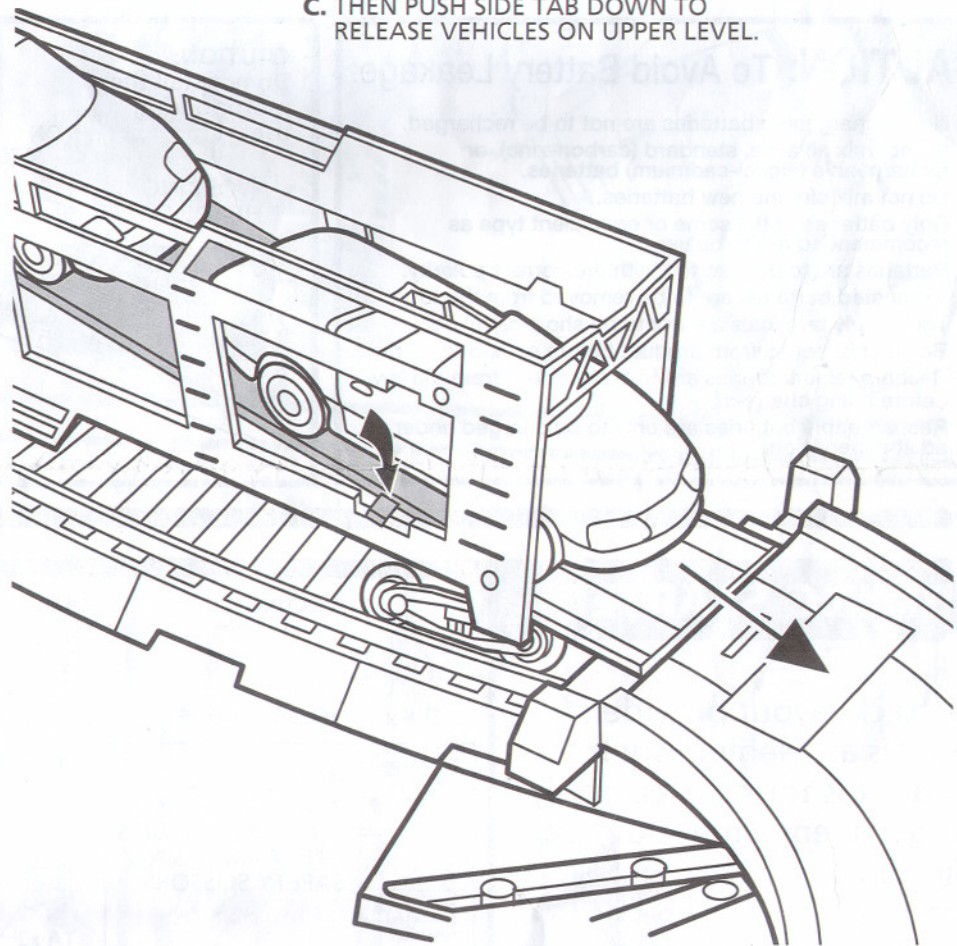


## CARGO LOADING DOCK.

 **A.** TRAIN STOP FOR CARGO LOADING DOCK.

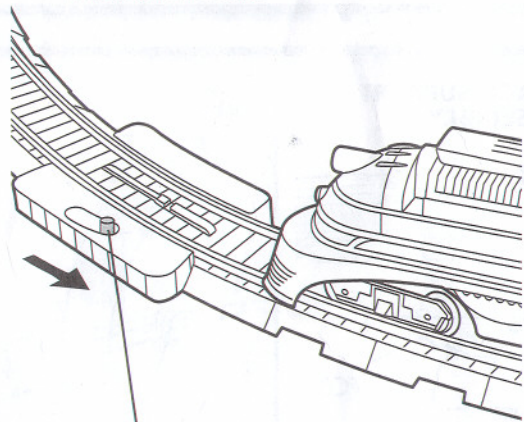


SLIDE THE SWITCH TO STOP THE TRAIN.

 **B.** LOAD THE LOG CAR WITH THE CRANE.

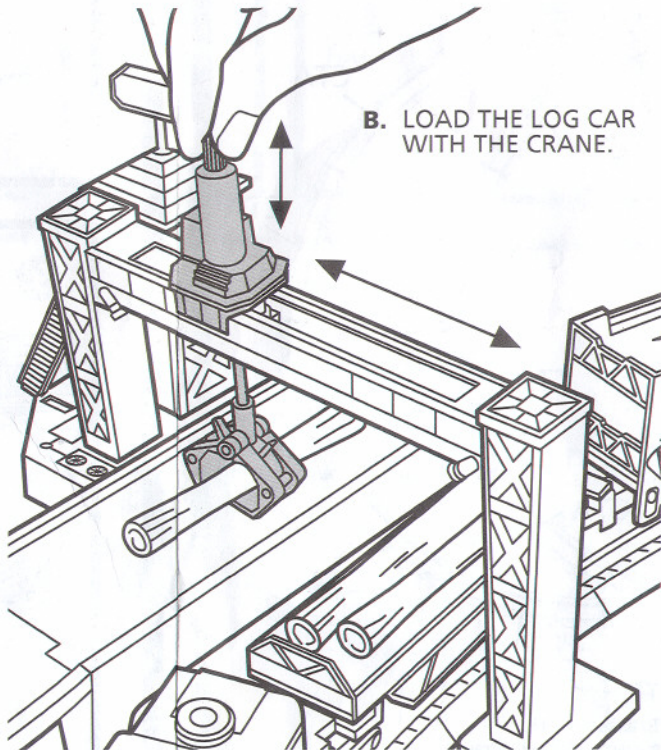


**C.** PRESS TO RELEASE CRANE.

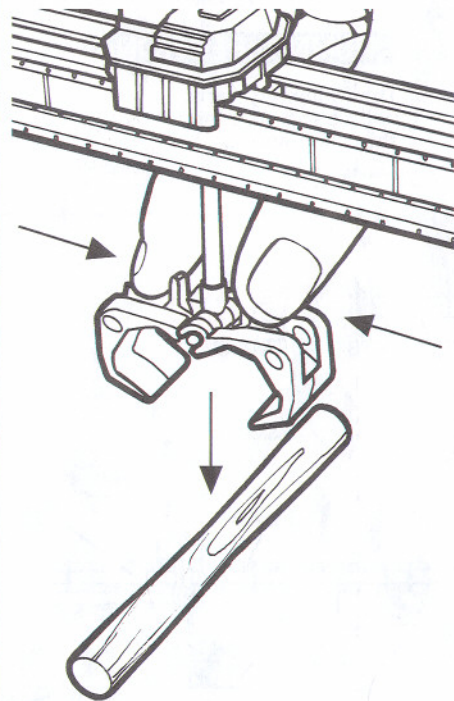 

## GATED CROSS JUNCTION

 THE BARRIERS DROP DOWN AUTOMATICALLY WHEN THE TRAIN PASSES THROUGH THE CROSS JUNCTION.

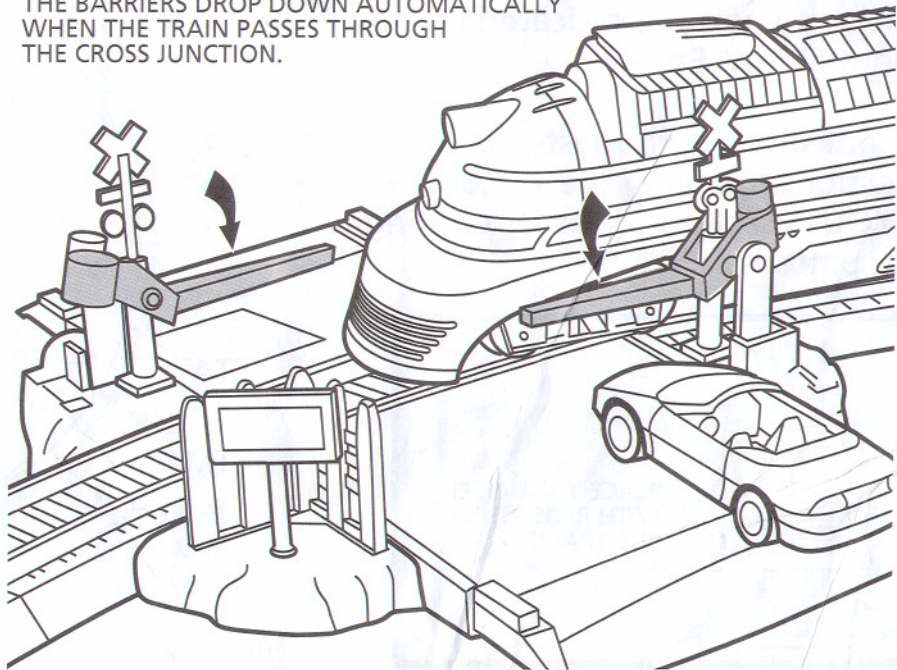

## 2 YEAR LIMITED WARRANTY

ARCOTOYS, INC., A Mattel Company, warrants to the original consumer purchaser that this toy product will be free from defects in material or workmanship for 2 years (unless otherwise specified in alternate warranties) from the date of purchase. If defective, return the product along with proof of the date-of-purchase, postage prepaid, to Consumer Adjustment Center, ARCOTOYS, INC., A Mattel Company, C.S. #9008, Crossways Park West, Woodbury, New York 11797 for replacement or refund at our option, or you may phone us toll-free at 1 (800) 442-2664, Monday thru Friday between the hours of 10:00 A.M. - 5:00 P.M. EST (7:00 A.M. - 2:00 P.M. PST). This warranty does not cover damage resulting from accident, misuse or abuse. **VALID ONLY IN U.S.A.** This warranty gives you specific legal rights and you may also have other rights which vary from state to state.