



Replacement Instructions

Get-Up & Go Walker Steering Wheel and Headlight Replacement Kit


Model Number: 71207

WARNING


- Your child could be injured upon contact with the plastic edges on the front panel of the walker.
- Do not use the walker until you repair the front panel.

Replacement Kit Parts


No tools required for assembly.

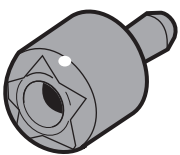

Headlight

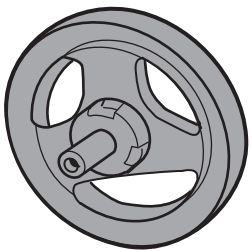


Steering Wheel

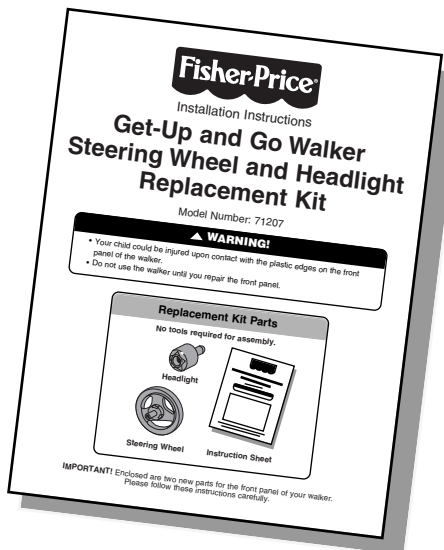


Instruction Sheet

IMPORTANT! Enclosed are two new parts for the front panel of your walker.
Please follow these instructions carefully.

Replacement Instructions

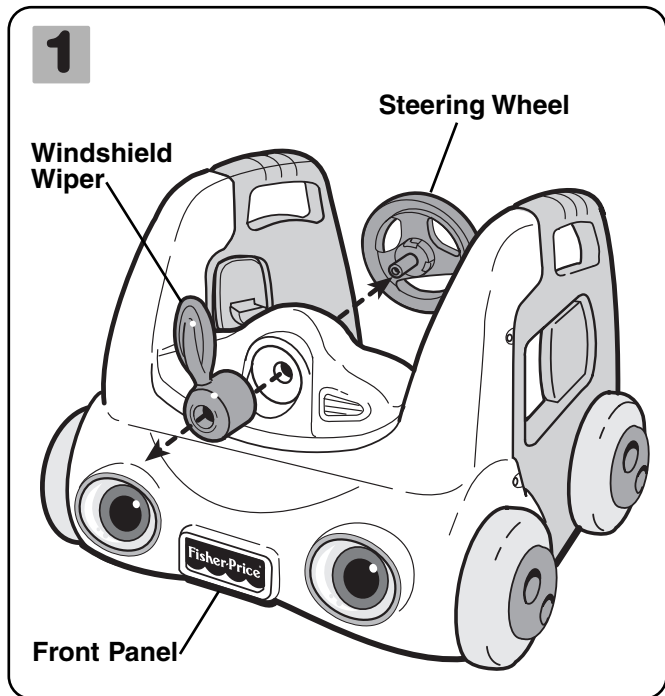

- Pull **firmly** to remove the steering wheel from the front panel.
- Remove the windshield wiper from the front panel.
- Throw away the old steering wheel and windshield wiper.

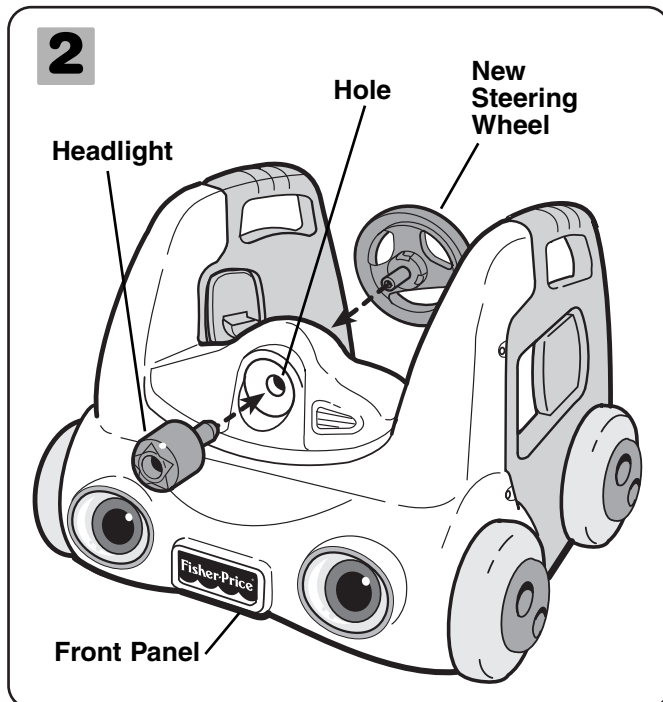

- Insert the headlight into the hole on the outside of the front panel.
- Insert the new steering wheel into the hole on the inside of the front panel.
- Push the pieces together until they “**snap**” into place.

Replacement is now complete.

Fisher-Price®

If you have further questions regarding assembly of the headlight and steering wheel, please call Fisher-Price® Consumer Relations, toll free at **1-800-233-4004**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TTD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.