


# Fisher-Price®

## Super Sensitive Nursery Monitor


### Message to Parents

Thank you for purchasing the Fisher-Price Super Sensitive Nursery Monitor. We believe you will find the unique features and traditionally durable construction of this Fisher-Price product to be a great help in the day-to-day care of your child.

**Note:** Any modification of any transmitter or any receiver will violate FCC compliance and can void the user's authority to operate the equipment.

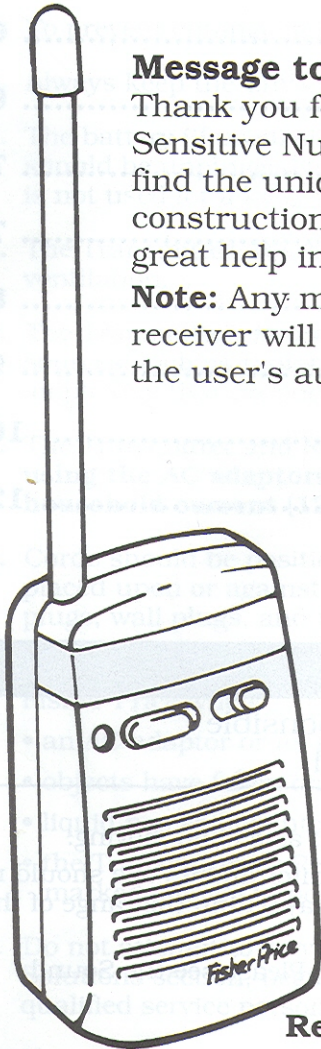

Receiver

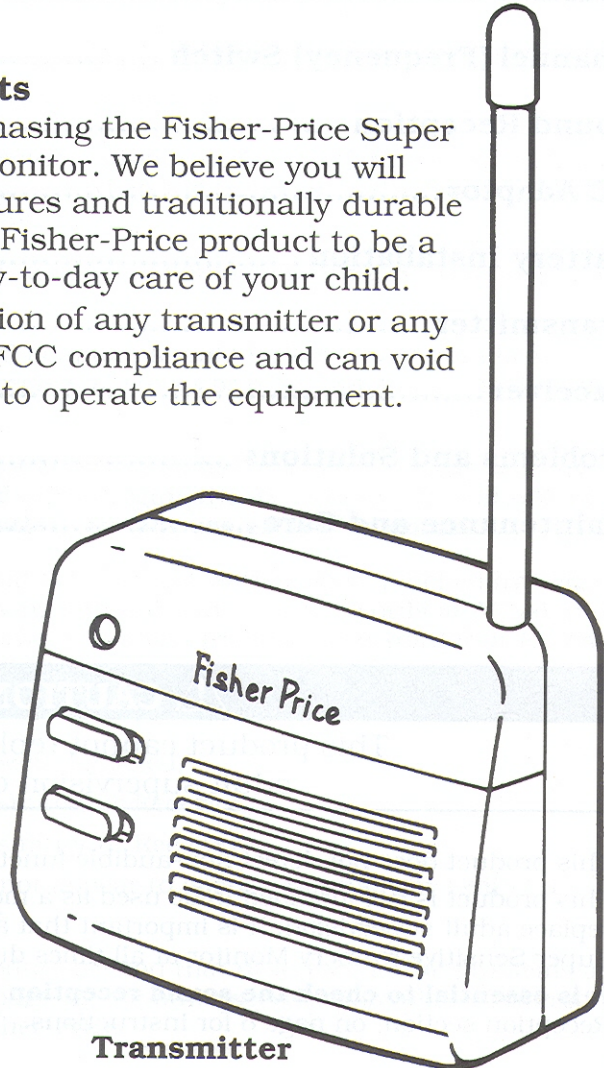

Transmitter

## Instructions

Please read these instructions carefully and keep them for future reference.

# TABLE OF CONTENTS

Important Safety Message .....	3
Features .....	4
Channel (Frequency) Switch .....	6
Sound Reception .....	6
AC Adaptor .....	7
Battery Installation .....	7
Transmitter .....	8
Receiver .....	9
Problems and Solutions .....	10
Maintenance and Care .....	12

## CAUTION


This product cannot replace responsible adult supervision of a child.

- This product does not detect non-audible functions, such as a child moving.
- This product is not intended to be used as a medical monitor and its use should not replace adult supervision. It is important that an adult stay within the range of the Super Sensitive Nursery Monitor at all times during use.
- **It is essential to check the sound reception regularly.** Please see the Sound Reception section, on page 6 for instructions.

## IMPORTANT SAFETY MESSAGE


1. Before using your Fisher-Price Super Sensitive Nursery Monitor:
  - Read and follow all instructions carefully.
  - Read and observe all warnings on the product and in this instruction booklet.
2. To prevent entanglement, never place the Transmitter in a crib or playpen.
3. Always keep the units out of the reach of children.
4. The battery (if used) should be removed (from the Receiver) and the AC adaptors should be unplugged from wall outlets when the Super Sensitive Nursery Monitor is not used for a long period of time.
5. The Transmitter, Receiver and AC adaptors should be positioned to allow proper ventilation.
6. The Transmitter, Receiver and AC adaptors should be kept away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
7. The Transmitter and Receiver should be connected to a power supply **only by using the AC adaptors provided** and plugging the AC adaptors into **standard household current (120V AC outlet)**. **Do not use extension cords.**
8. Cords should be positioned so that they are not walked on or pinched by items placed upon or against them, paying particular attention to cords at AC adaptor plugs, wall plugs, and the point where they exit from the Transmitter or Receiver.
9. This product should be serviced only by qualified service personnel at Fisher-Price when:
  - an AC adaptor or its plug has been damaged,
  - objects have fallen on the Transmitter or Receiver,
  - liquid has spilled into the Transmitter or Receiver,
  - the Transmitter or Receiver do not appear to operate normally or exhibit a marked change in performance.
10. Do not attempt to service the product beyond that described in the Problems and Solutions section, beginning on page 10. All other servicing should be referred to qualified service personnel at Fisher-Price.
11. If you have any questions about this product, please call Fisher-Price Consumer Affairs, toll-free at **1-800-432-KIDS** (1-800-432-5437), Monday through Friday, between 8 AM and 6 PM Eastern time, or write to: Fisher-Price, Inc., Attn: Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052. **Hearing-impaired consumers** using TTY/TDD equipment, please call 1-800-382-7470.

# FEATURES

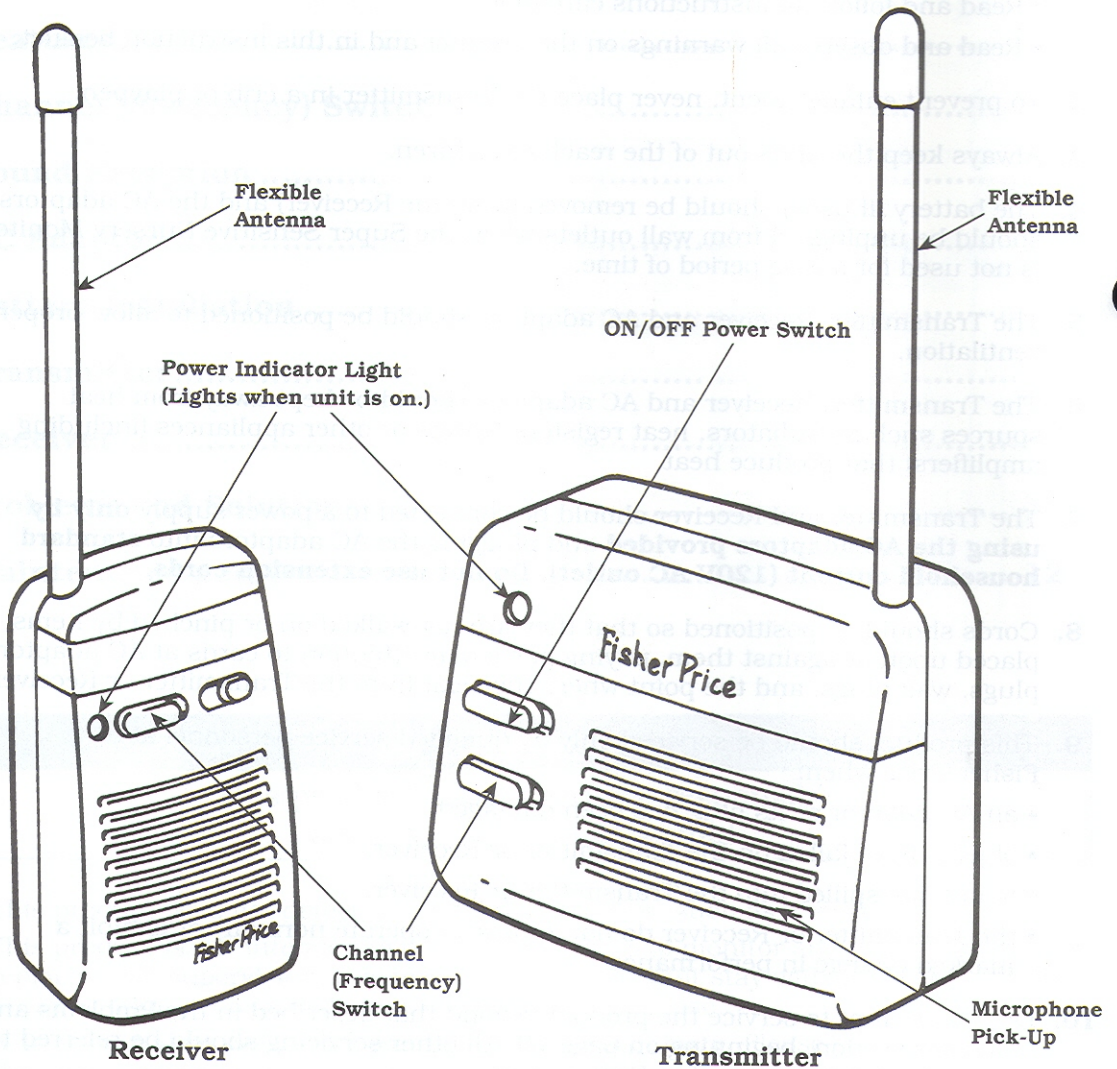

FRONT VIEW

# FEATURES

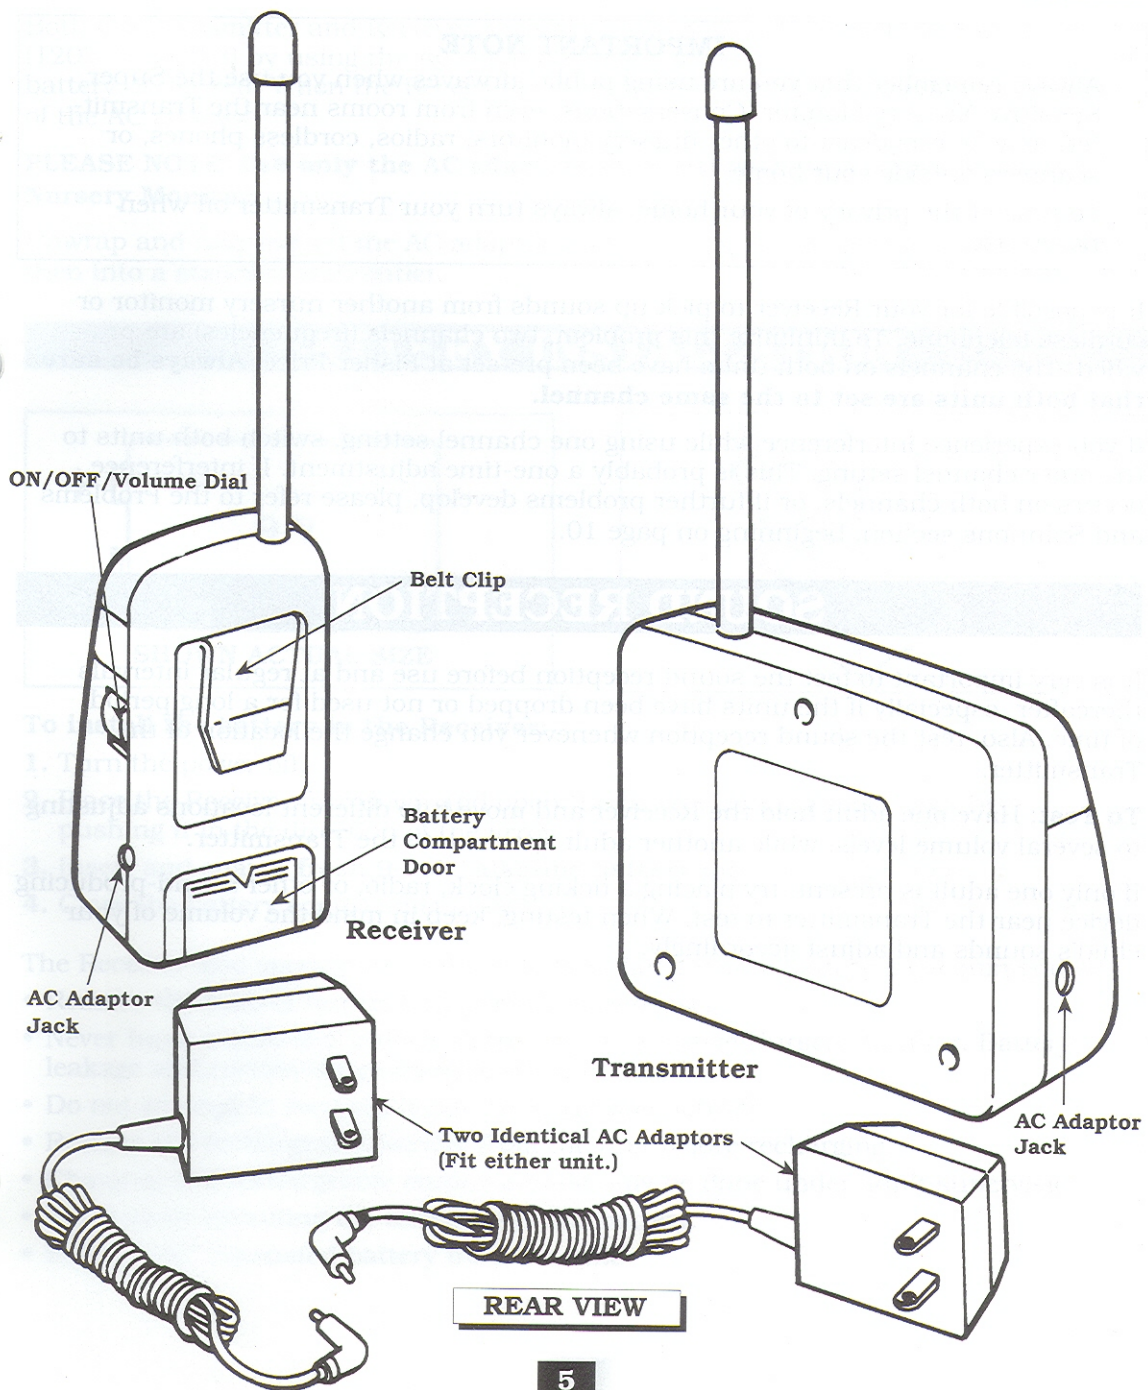

## CHANNEL (FREQUENCY) SWITCH

### IMPORTANT NOTE

Always remember that you are using public airwaves when you use the Super Sensitive Nursery Monitor. Conversations, even from rooms near the Transmitter, may be broadcast to other nursery monitors, radios, cordless phones, or scanners outside your home.

To protect the privacy of your home, always turn your Transmitter off when not in use.

It is possible for your Receiver to pick up sounds from another nursery monitor or cordless telephone. To minimize this problem, two channels (frequencies) are provided. The channels on both units have been pre-set at Fisher-Price. **Always be sure that both units are set to the same channel.**

If you experience interference while using one channel setting, switch both units to the other channel setting. This is probably a one-time adjustment. If interference occurs on both channels, or if further problems develop, please refer to the Problems and Solutions section, beginning on page 10.

## SOUND RECEPTION

It is very important to test the sound reception before use and at regular intervals thereafter, especially if the units have been dropped or not used for a long period of time. Also, test the sound reception whenever you change the location of the Transmitter.

**To Test:** Have one adult hold the Receiver and move it to different locations adjusting to several volume levels, while another adult speaks into the Transmitter.

If only one adult is present, try placing a ticking clock, radio, or other sound-producing device near the Transmitter to test. When testing, keep in mind the volume of your child's sounds and adjust accordingly.



## AC ADAPTOR

Both the Transmitter and Receiver will operate on standard household current (120V AC outlet) by using the AC adaptors provided. The Receiver can run on a 9-volt battery, if desired. When the Receiver is used near an outlet, we recommend the use of the AC adaptor.

**PLEASE NOTE: Use only the AC adaptors included with your Super Sensitive Nursery Monitor.**

Unwrap and fully extend the AC adaptor wire. Plug the AC adaptor into the unit and then into a standard wall outlet.

## BATTERY INSTALLATION

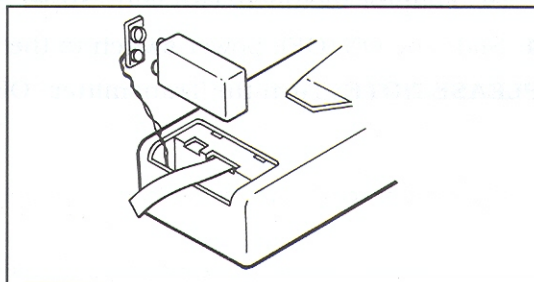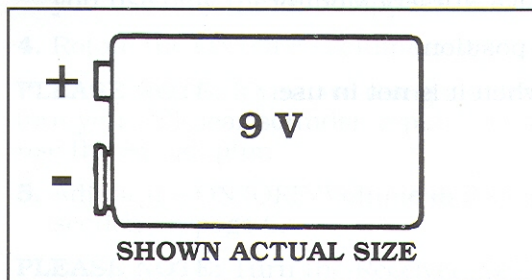

### To install the battery in the Receiver:

1. Turn the power off.
2. Place the Receiver face down and open the battery compartment door by pushing it in the direction of the arrow.
3. Insert and snap a **fresh 9-volt alkaline battery** into the connectors.
4. Close the battery compartment door.

The Receiver also operates on a 9-volt battery (an alkaline battery is recommended).

- Remove the battery during long periods of non-use.
- Never leave a worn-out battery in the Super Sensitive Nursery Monitor. Battery leakage and corrosion can damage the unit.
- Do not attempt to recharge a non-rechargeable battery.
- Remove the rechargeable battery from the unit before recharging.
- Charging of a rechargeable battery should only be done under adult supervision.
- Avoid short-circuiting the terminals of the battery.
- Remove the exhausted battery from the unit.

# TRANSMITTER

(Sends sounds to the Receiver)

1. Check to be sure the channel (frequency) switch is set to the same channel as on the Receiver.
2. Place the Transmitter in the same room with your child. Point the microphone pick-up directly toward the crib or play area.

**PLEASE NOTE:**

- Be sure to place the Transmitter out of the reach of children.
  - To prevent entanglement, never place the Transmitter in a crib or playpen.
3. Unwrap and fully extend the AC adaptor wire. Plug the AC adaptor into the Transmitter and then into a standard wall outlet. Make sure you use only the AC adaptor included with your Super Sensitive Nursery Monitor.
  4. Slide the ON/OFF power switch to the "ON" position.

**PLEASE NOTE:** Turn the Transmitter "OFF" when it is not in use.



# RECEIVER

(Picks up sounds from the Transmitter)

1. Check to be sure the channel (frequency) switch is set to the same channel as on the Transmitter.
2. Place the Receiver where you can monitor it audibly, or wear the Receiver using the belt clip.

**PLEASE NOTE:**

- Keep the Receiver upright for best reception.
  - Be sure to place the Receiver out of the reach of children.
3. If you are using the AC adaptor, unwrap and fully extend the AC adaptor wire. Plug the AC adaptor into the Receiver and then into a standard wall outlet. Make sure you use only the AC adaptor included with your Super Sensitive Nursery Monitor.
  4. Rotate the ON/OFF/Volume dial to turn the power "ON".

**PLEASE NOTE:** If you are using a battery and the power indicator light does not work (but you still hear sounds), replace the battery with a fresh, 9-volt alkaline battery or use the AC adaptor.

5. Adjust the ON/OFF/Volume dial to a comfortable level or see the Sound Reception section on page 6.

**PLEASE NOTE:** Turn the Receiver "OFF" when it is not in use.

# PROBLEMS AND SOLUTIONS

**IMPORTANT!** If you have a problem with this product, first check to be sure:

- the power in both units is turned "ON".
- both units are plugged in (with the AC adaptors provided).
- if a 9-volt battery is being used with the Receiver, it is fresh.
- the volume is turned up on the Receiver.
- the channel (frequency) switch is set to the same channel on both the Transmitter and Receiver.
- the house fuses or circuit breakers are on.
- the Receiver is within the range of the Transmitter.

PROBLEM	PROBABLE CAUSE	SOLUTION
No sound	Battery is dead or installed improperly	Replace the 9-volt battery in the Receiver or use the AC adaptor.
	AC adaptor not properly connected	Check AC adaptor fittings.
	Out of range	Move Receiver closer to Transmitter.
Power indicator light not working	Dead battery	Replace the 9-volt battery in the Receiver or use the AC adaptor.
	AC adaptor not properly connected	Check AC adaptor fittings.
Very weak reception	Out of range	Move Receiver closer to Transmitter.
	Transmitter or Receiver near metal concentration	Test while moving the Transmitter/Receiver to different locations.
	Weak battery	Replace the 9-volt battery in the Receiver or use the AC adaptor.

# PROBLEMS AND SOLUTIONS

PROBLEM	PROBABLE CAUSE	SOLUTION
Buzzing, interference, etc.	May be due to other nursery monitors, cordless telephones, walkie-talkies, etc.	Change channel (frequency) switch on both Transmitter and Receiver.
Static	Interference, possibly due to appliances such as mixers, light dimmers, etc.	Eliminate cause of static, or move the Receiver to a different electrical outlet.
	Out of range	Move Receiver closer to Transmitter.
	Channel (frequency) switches not on same setting	Check channel switch on Transmitter and Receiver.
Decreased range	Weak batteries	Replace the 9-volt battery in the Receiver or use the AC adaptor.
	Transmitter or Receiver near metal concentration	Test while moving the Transmitter/Receiver to different locations.
	Antenna covered	Remove obstructions.
	Receiver lying on side	Keep Receiver upright.
Feedback	Receiver too close to Transmitter	Move Receiver further away from Transmitter.
	Volume set too high	Lower volume.

Before returning this product to where you purchased it, please call Fisher-Price Consumer Affairs, toll-free at **1-800-432-KIDS** (1-800-432-5437).

## MAINTENANCE AND CARE

Do not use the Transmitter or Receiver near water. For example, do not use near a bathtub, washbowl, laundry tub, kitchen sink, in a wet basement, near a swimming pool, etc.

Keep the units free from dust. We recommend using an all cotton cloth for cleaning. Do not immerse the Transmitter or Receiver in water.

Use only the AC adaptors included with your Super Sensitive Nursery Monitor. Use of any other voids warranty.

## ONE (1) YEAR LIMITED WARRANTY

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052, warrants that the Super Sensitive Nursery Monitor is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to the Fisher-Price Product Service Department at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

**SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.**

**THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.**

**Important Note:** The electronic components are not designed for consumer repair. Evidence of any attempt at consumer repair will void the warranty. When returning the Super Sensitive Nursery Monitor Receiver for service, please remove the battery and return it with the unit.