

Cordless Nursery Monitor

Model Number 71562



Please read these instructions and keep them for future reference.

Includes a 3.6v, 270 mA nickel cadmium rechargeable battery for battery operation.

Fisher-Price®

Table of Contents

A Consumer Information	2
B Important Information	3
C Cordless Nursery Monitor System	4
D First-Time Battery Charging	5
E Set-Up and Use	5
F Sound Reception	7
G Charging the Battery	7
H Replacing the Battery	8
I Care	9
J FCC Note (United States Only)	9
K One (1) Year Limited Warranty	9
L Problems and Solutions Guide	10

A

Consumer Information

Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us toll-free, rather than returning this product to the store. Usually, we can solve the problem on the telephone or by sending you replacement parts. Please call Fisher-Price Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday, 9 AM - 5 PM EST Saturday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.


**CAUTION**

This product cannot replace responsible adult supervision of a child.

- Please read and follow all instructions in this booklet and on the product for proper use of this product.
- This product is not intended to be used as a medical monitor and its use should not replace adult supervision. It is important that an adult stay within the range of the Cordless Nursery Monitor at all times during use.
- This product does not detect non-audible functions, such as a child moving.
- To prevent entanglement, never place the transmitter in a crib or playpen. Place the transmitter, receiver and AC adaptor cord(s) out of reach of baby.
- To prevent entanglement, do not use extension cords with the AC adaptors.
- Use only the AC adaptors provided with your Cordless Nursery Monitor. Use of any others may damage the transmitter and/or receiver.
- Insert the AC adaptor plugs into standard household current (120v AC outlets).
- Position AC adaptor cords so that they are not walked on or pinched by items placed upon or against them.
- If you are using the Cordless Nursery Monitor at bedside, be sure to use the receiver in the base to prevent battery power from running low and ensure continuous monitoring.
- Do not use two nursery monitors at the same time in the same house.
- Never use the transmitter or receiver near water. For example, do not use near a bathtub, washbowl, laundry tub, kitchen sink, or in a wet basement, etc.
- Place the transmitter, receiver and AC adaptors where there is adequate ventilation. To prevent overheating, keep the transmitter, receiver and AC adaptors away from heat sources such as radiators, heat registers, direct sunlight, stoves, amplifiers, or other appliances which produce heat.
- Avoid short-circuiting the contact terminals in the base.
- Fully charge the battery before long-term storage.
- Always remember that you are using public airwaves when you use the Cordless Nursery Monitor. Conversations, even from rooms near the transmitter, may be broadcast to other nursery monitors, radios, cordless telephones, or scanners outside your home. To protect the privacy of your home, always turn the transmitter off when not in use.
- Any modification of the transmitter or the receiver will violate FCC compliance and can void the user's authority to operate the equipment.
- The Cordless Nursery Monitor is not designed for consumer repair. If your Cordless Nursery Monitor is not working properly, please refer to the Problems and Solutions Guide beginning on page 10.

Cordless Nursery Monitor System

Thank you for purchasing the Fisher-Price Cordless Nursery Monitor. With it's rechargeable battery, you're able to hear baby from anywhere in the house. And, while you and baby sleep, you can monitor baby and charge the battery at the same time!

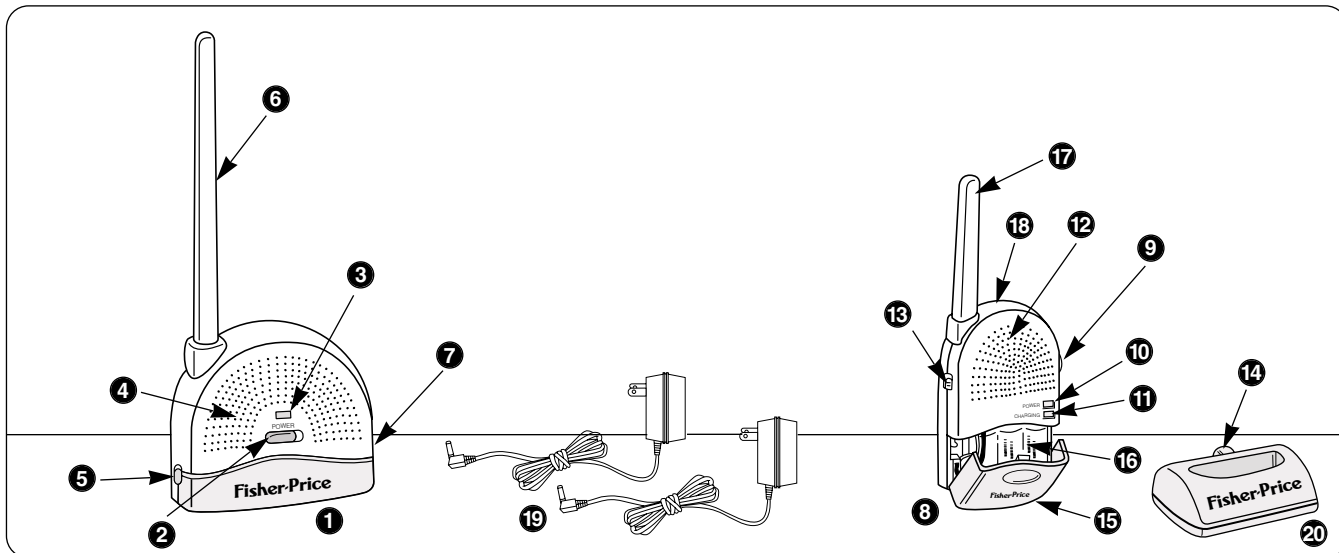


- 1 Transmitter Sends (transmits) sounds to the receiver.
- 2 On/Off Switch Turns the transmitter power "ON" or "OFF".
- 3 Power Indicator Lights up to let you know the transmitter is "ON".
- 4 Microphone For clear audio pick-up.
- 5 2-Position Channel Switch . . . Allows you to change channels when interference occurs.
- 6 Flexible Antenna Aids in sound transmission.
- 7 AC Adaptor Socket (on side) . . For use with the provided AC adaptor.
- 8 Receiver Receives signal from the transmitter to hear sound.
- 9 Off/On/Volume Dial Turns the receiver power "ON" or "OFF"; controls volume of sound.
- 10 Power Indicator Lights up to let you know the receiver is "ON" and that there is enough power (in the battery) to run the receiver. Light turns "OFF" when it's time to charge the battery (during battery use only).
- 11 Charging Indicator Lights up to let you know the receiver battery is charging.
- 12 Speaker Allows you to hear baby's sounds.
- 13 2-Position Channel Switch . . . Allows you to change channels when interference occurs.
- 14 AC Adaptor Socket For use with the provided AC adaptor.
- 15 Battery Compartment Door . . For easy access to the rechargeable battery.
- 16 Rechargeable Battery For portability, the receiver also runs on a 3.6v 270 mA nickel-cadmium rechargeable battery.
- 17 Flexible Antenna Aids in sound reception.
- 18 Belt Clip (on back) For added portability when moving from room to room.
- 19 AC Adaptors (2 included) . . . Both the transmitter and receiver (while in base) operate on standard household current (120v AC outlet) with these AC adaptors.
- 20 Base Allows you to charge the battery while monitoring baby!

D

First-Time Battery Charging

Your Fisher-Price Cordless Nursery Monitor includes a rechargeable battery. Before first-time use, you will need to charge the battery.

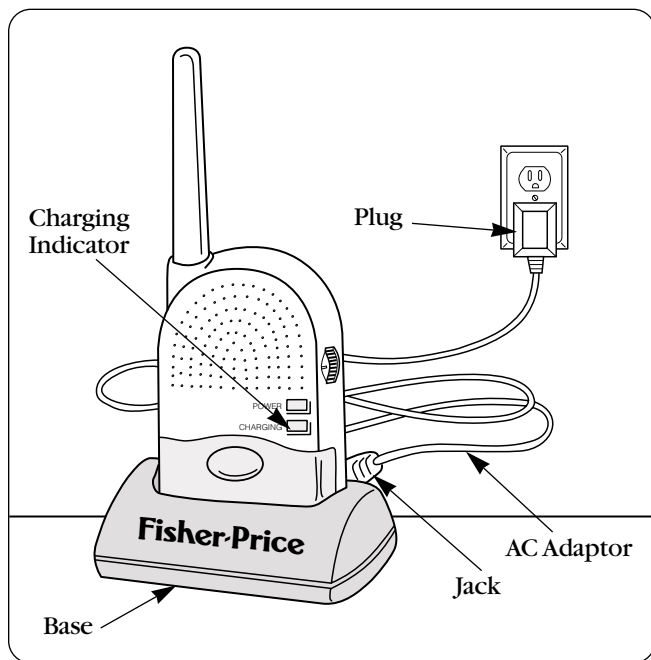

Helpful Hint: It will take approximately 10-12 hours to fully charge the battery.

- Fit the receiver into the base.
- Unwrap the AC adaptor cord. Insert the AC adaptor jack into the base socket and then insert the plug into a standard wall outlet. The charging indicator will light.
- Now, please read and follow the “Set-Up and Use” instructions.


E

Set-Up and Use


The portable receiver operates either on battery power or by use with the base and the AC adaptor included with your Cordless Nursery Monitor. When using the receiver with the base and the AC adaptor, you will be charging the battery while monitoring your baby!

IMPORTANT NOTES!

- To prevent entanglement, **never** place the transmitter in a crib or playpen. Place the transmitter, receiver and AC adaptor cord(s) out of reach of baby.
- If you are using the Cordless Nursery Monitor at bedside, be sure to use the receiver in the base to prevent battery power from running low and ensure continuous monitoring.

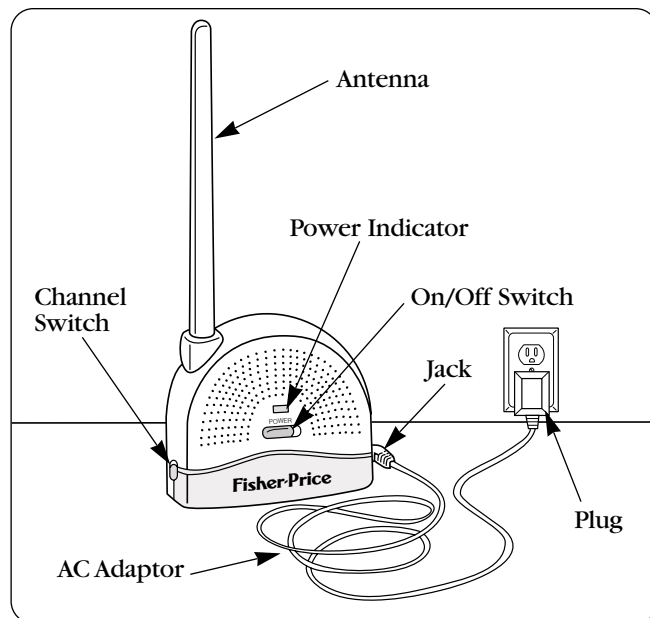


- Place the transmitter in the same room with your child. For best sound pick-up, point the microphone directly toward the crib or play area. Make sure the antenna points upward for best transmission.
- For best transmission, unwrap and fully extend the AC adaptor cord. Insert the AC adaptor jack into the transmitter socket and then insert the plug into a standard wall outlet.
- Set the channel switch to the same channel as the receiver.
- Slide the On/Off switch on the front of the transmitter to the “ON” position. The power indicator will light.

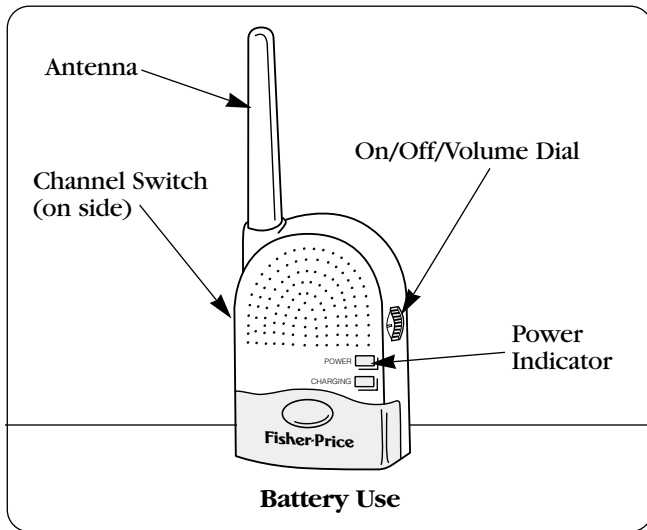

- If you will be using the receiver with the base, you will need to use the AC adaptor. For best reception, unwrap and fully extend the AC adaptor cord. Insert the AC adaptor jack into the base socket and then insert the plug into a standard wall outlet.
- Set the channel switch to the same channel as the transmitter.
- Rotate the On/Off/Volume dial on the side of the receiver to the “ON” position. The power indicator should light.

Helpful Hint: *If the receiver power indicator does not light when it is not in the base, it's time to charge the battery (see “Charging the Battery” beginning on page 7).*

 - Adjust the volume by turning the On/Off/Volume dial to a comfortable level.
- To protect your privacy, be sure to turn the transmitter and receiver “OFF” when not in use.

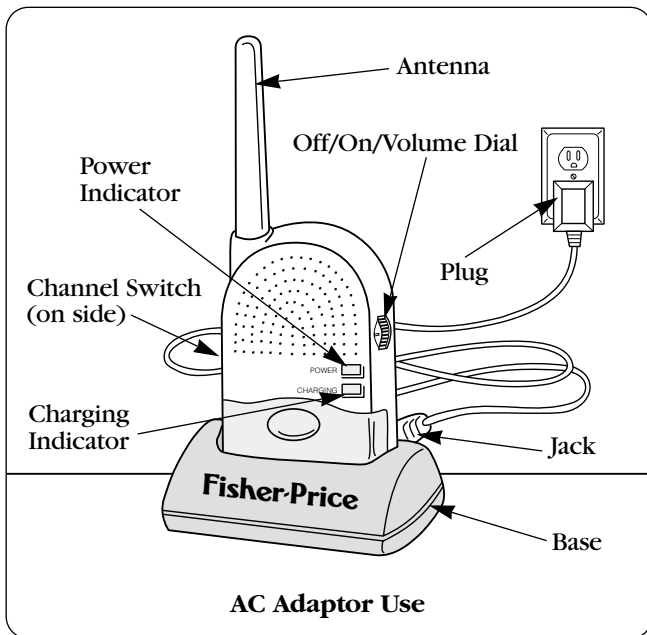

- Place the receiver where you can monitor it audibly either with or without the base. Or, wear the receiver using the convenient belt clip. Make sure the antenna points upward for best reception.

F

Sound Reception


It is very important to test the sound reception of the Cordless Nursery Monitor before first-time use and whenever you change the location of the transmitter.

- Test the Cordless Nursery Monitor transmission and reception. In the room with the transmitter, have one adult speak. (If an adult is not available, use a ticking clock or a wind-up music box.) Next, you should adjust the receiver location or volume dial until you hear sounds clearly.
- If you experience interference (buzzing, static, etc.) while using one channel setting, switch both units to the other channel. Selecting a channel is usually a one-time adjustment.
- If interference occurs on both channels or if further problems develop, please refer to the “Problems and Solutions Guide” beginning on page 10.

G

Charging the Battery


When the power indicator turns “OFF”, it’s time to charge the battery.

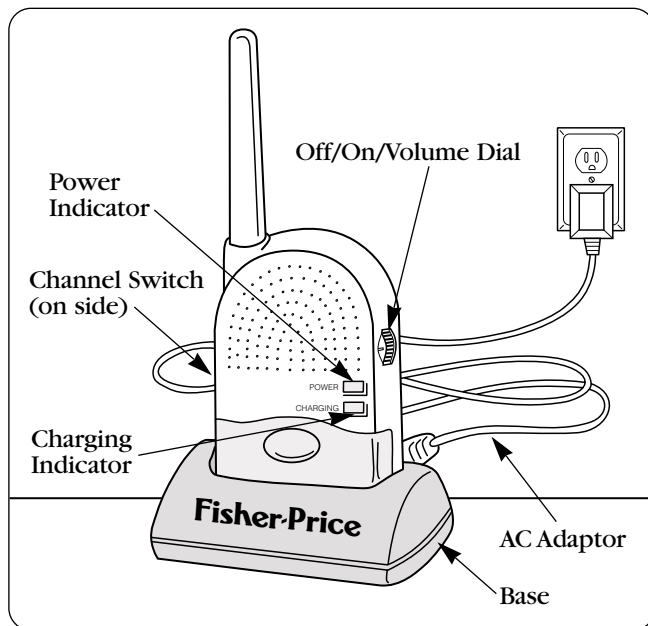

Helpful Hint: For long-term battery performance, do not leave the rechargeable battery in a discharged condition.

- Fit the receiver into the base.
- Unwrap the AC adaptor cord. Insert the AC adaptor jack into the base socket and then insert the plug into a standard wall outlet. The charging indicator will light.
- If you will be monitoring baby while charging the battery, rotate the Off/On/Volume dial on the side of the receiver to the “ON” position. The power indicator will also light. This does not mean the battery is charged. It will take approximately 10-12 hours depending on the condition of the battery.

Even with proper care, the rechargeable battery will not last forever. The life of the rechargeable battery depends on how well you follow these instructions and the total number of hours it is used. If you should ever need to replace your rechargeable battery, a new one can be purchased at some electronics or department stores; or contact Fisher-Price Consumer Affairs at 1-800-432-KIDS.

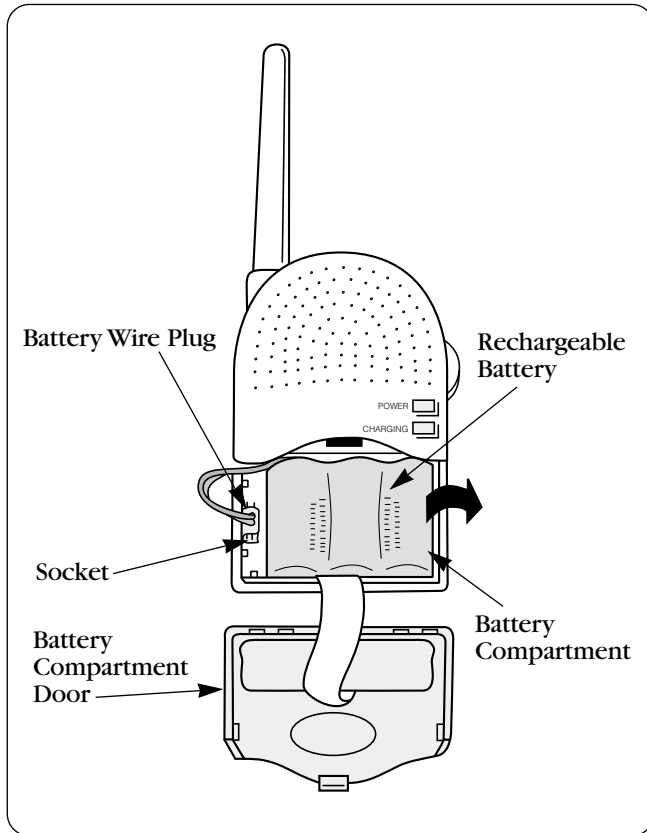

Battery Disposal

Nickel cadmium batteries contain materials which are harmful to the environment if not properly disposed. Contact the recycling center in your community for proper disposal instructions.

- Remove the receiver from the base (if used) and turn the power "OFF".
- Push down on the oval recess to slide the battery compartment door open.
- Unsnap the battery wire plug from the socket inside the battery compartment.
- Dispose of the dead battery properly (see "Battery Disposal").
- Snap the new rechargeable battery wire plug into the socket inside the battery compartment. Fit the battery into the compartment and tuck the battery wires next to the battery.
- Replace the battery compartment door.

 I

Care

The outer surface of the transmitter and receiver can be cleaned with a cloth lightly dampened with a mild cleaning solution. Do not immerse any part of the Cordless Nursery Monitor.

 J

FCC Note (United States Only)

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used according to the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is urged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 K

One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052, warrants that the Cordless Nursery Monitor is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to the Fisher-Price Consumer Affairs Department at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc. will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any other liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS AND YOU MAY ALSO HAVE OTHER LEGAL RIGHTS WHICH VARY FROM STATE TO STATE.

Important Note: The electronic components in the Cordless Nursery Monitor are not designed for consumer repair. Evidence of any attempt at consumer repair will void the warranty. Return both the transmitter and receiver with rechargeable battery.



Problems and Solutions Guide

IMPORTANT! If you have a problem with the Cordless Nursery Monitor, first check the Problems and Solutions Guide below. If you still experience a problem with the Cordless Nursery Monitor, call Fisher-Price Consumer Affairs, toll-free at 1-800-432-KIDS, 8 AM - 6 PM EST Monday through Friday, 9 AM - 5 PM EST Saturday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

PROBLEM	PROBABLE CAUSE	SOLUTION
Transmitter power indicator does not light	Transmitter not turned "ON"	Turn the transmitter "ON".
	Power is turned "OFF"	Make sure that any light switches that control power flow to the wall outlet are "ON". Make sure house fuses and circuit breakers are "ON".
	AC adaptor not properly connected	Check AC adaptor jack-to-socket and plug-to-outlet connections.
	AC adaptor problem	Test the transmitter using the other AC adaptor. If the transmitter works with the other AC adaptor, call Fisher-Price at 1-800-432-KIDS to replace the broken AC adaptor.
Receiver power indicator does not light	Receiver not turned "ON"	Turn the receiver "ON".
	Power is turned "OFF"	Make sure that any light switches that control power flow to the wall outlet are "ON". Make sure house fuses and circuit breakers are "ON".
	Low charge battery in receiver	Use AC adaptor with receiver in base to monitor and charge battery.
	AC adaptor not properly connected	Check AC adaptor jack-to-socket and plug-to-outlet connections.
	AC adaptor problem	Test the receiver using the other AC adaptor. If the receiver works with the other AC adaptor, call Fisher-Price at 1-800-432-KIDS to replace the broken AC adaptor.
	Receiver not properly seated in base.	Reposition the receiver so that it is properly seated in base.
	Receiver/base contacts dirty	Clean metal contacts on bottom of receiver and in base with a pencil eraser.

PROBLEM	PROBABLE CAUSE	SOLUTION
Charging indicator does not light when receiver is in base	AC adaptor not properly connected	Check AC adaptor jack-to-socket and plug-to-outlet connections.
	AC adaptor problem	Test the receiver using the other AC adaptor. If the receiver works with the other AC adaptor, call Fisher-Price at 1-800-432-KIDS to replace the broken AC adaptor.
	Receiver not properly seated in base	Reposition the receiver so that it is properly seated in base.
	Receiver/base contacts dirty	Clean metal contacts on bottom of receiver and in base with a pencil eraser.
No sound	Channel switches not on same setting	Check channel switch on transmitter and receiver.
	Signal interference due to other nursery monitors, cordless telephones, etc.	Change the channel setting on both the transmitter and the receiver. Identify and eliminate the source of interference. Test reception by moving the transmitter and/or receiver to different locations throughout the house. Relocate the transmitter and/or receiver.
	Out of range or insufficient signal	Test reception by moving the transmitter and/or receiver to different locations throughout the house. Relocate the transmitter and/or receiver.
	Volume not turned up	Adjust volume control on receiver.
	Low charge battery in receiver	Use AC adaptor with receiver in base to monitor and charge battery.
	Improper antenna position	Make sure antenna is pointing upward.

PROBLEM	PROBABLE CAUSE	SOLUTION
Weak reception	Out of range or insufficient signal	Test reception by moving the transmitter and/or receiver to different locations throughout the house. Relocate the transmitter and/or receiver.
	Low charge battery in receiver	Use AC adaptor with receiver in base to monitor and charge battery.
	AC adaptor cord(s) not fully extended	Fully extend AC adaptor cord(s).
	Improper antenna position	Make sure antennas are pointing upward.
Interference (buzzing, static, etc.)	Signal interference due to other nursery monitors or cordless telephones, etc.	Change channel switch on both transmitter and receiver to the other channel. Identify and eliminate source of interference. Do not use two nursery monitors at the same time in the same house.
	Channel switches not on same setting	Check channel switch on transmitter and receiver to be sure they are on the same channel.
Feedback (squealing or whistling)	Receiver is too close to the transmitter	Move receiver further away from transmitter.
	Volume is set too high	Lower volume on the receiver.

If you have any questions about this product:

In Canada, call 1-800-567-7724, or write to:

Mattel/Fisher-Price, 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

In Great Britain, telephone 01734 770488.

In Australia, call the Fisher-Price Australian Consumer Advisory Service toll-free at 1-800-800-812, or write to:

Fisher-Price, Mattel Pty. Limited, 461 Plummer Street, Port Melbourne, Victoria 3207.