 


PROBLEMS AND SOLUTIONS

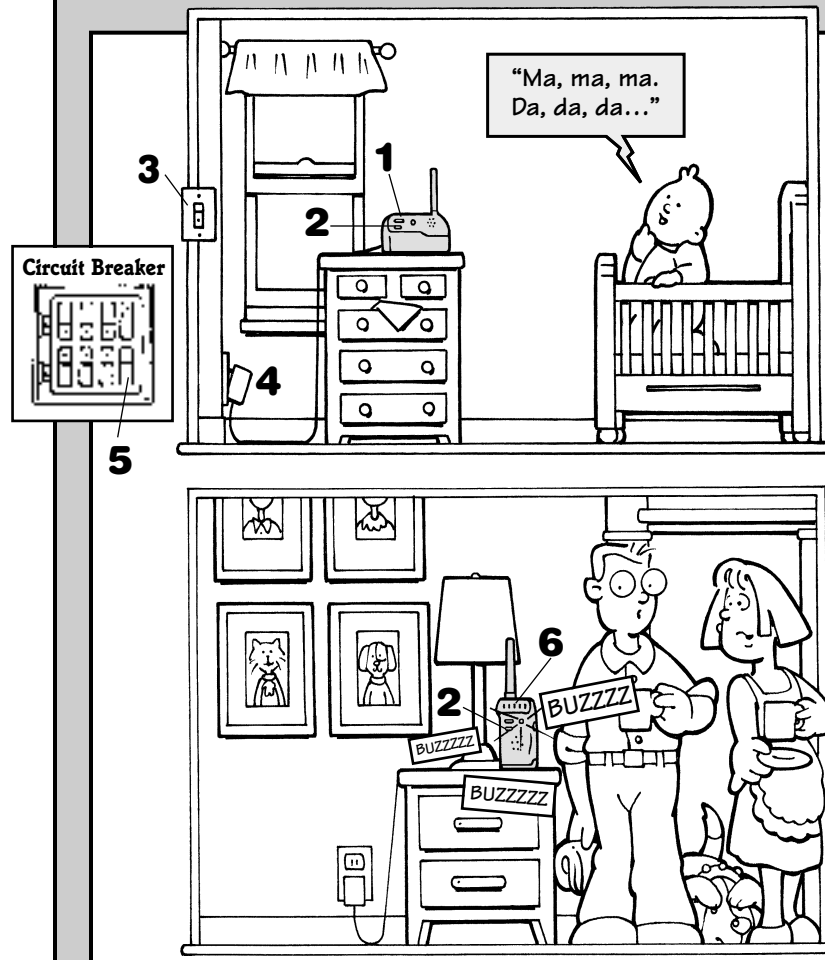

 
PROBLEMS

- 1 Transmitter power off. Power indicator not lit.
- 2 You hear static or buzzing because transmitter channel switch is not on same channel as receiver(s).
- 3 Transmitter power off. Power indicator not lit. Light switch that controls power flow to wall outlet off.
- 4 Transmitter power off. Power indicator not lit. AC adaptor cord plug-to-outlet not connected.
- 5 Transmitter power off. Power indicator not lit. Power is off because circuit breaker for baby's room off.
- 6 You hear static or buzzing and all five bars lit on receiver.

SOLUTIONS

- 1 Turn transmitter power on. Power indicator lights.
- 2 Make sure channel switches on both transmitter and receiver(s) set to same channel.
- 3 Make sure light switch that controls power flow to wall outlet is on.
- 4 Check AC adaptor cord plug-to-outlet connection.
- 5 Make sure house fuses and circuit breakers are on.
- 6 Check all five solutions above. Any one or more of these solutions should solve the problem.


Helpful Hint: If, after checking all of these solutions, you believe that your AC adaptors are damaged, please call Fisher-Price® at 1-800-432-KIDS.

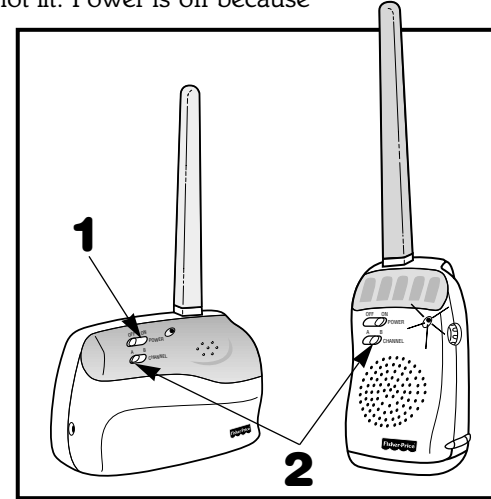

Fisher-Price®

SOUND 'N LIGHTS NURSERY MONITOR WITH DUAL RECEIVERS

 Product Number: 71590

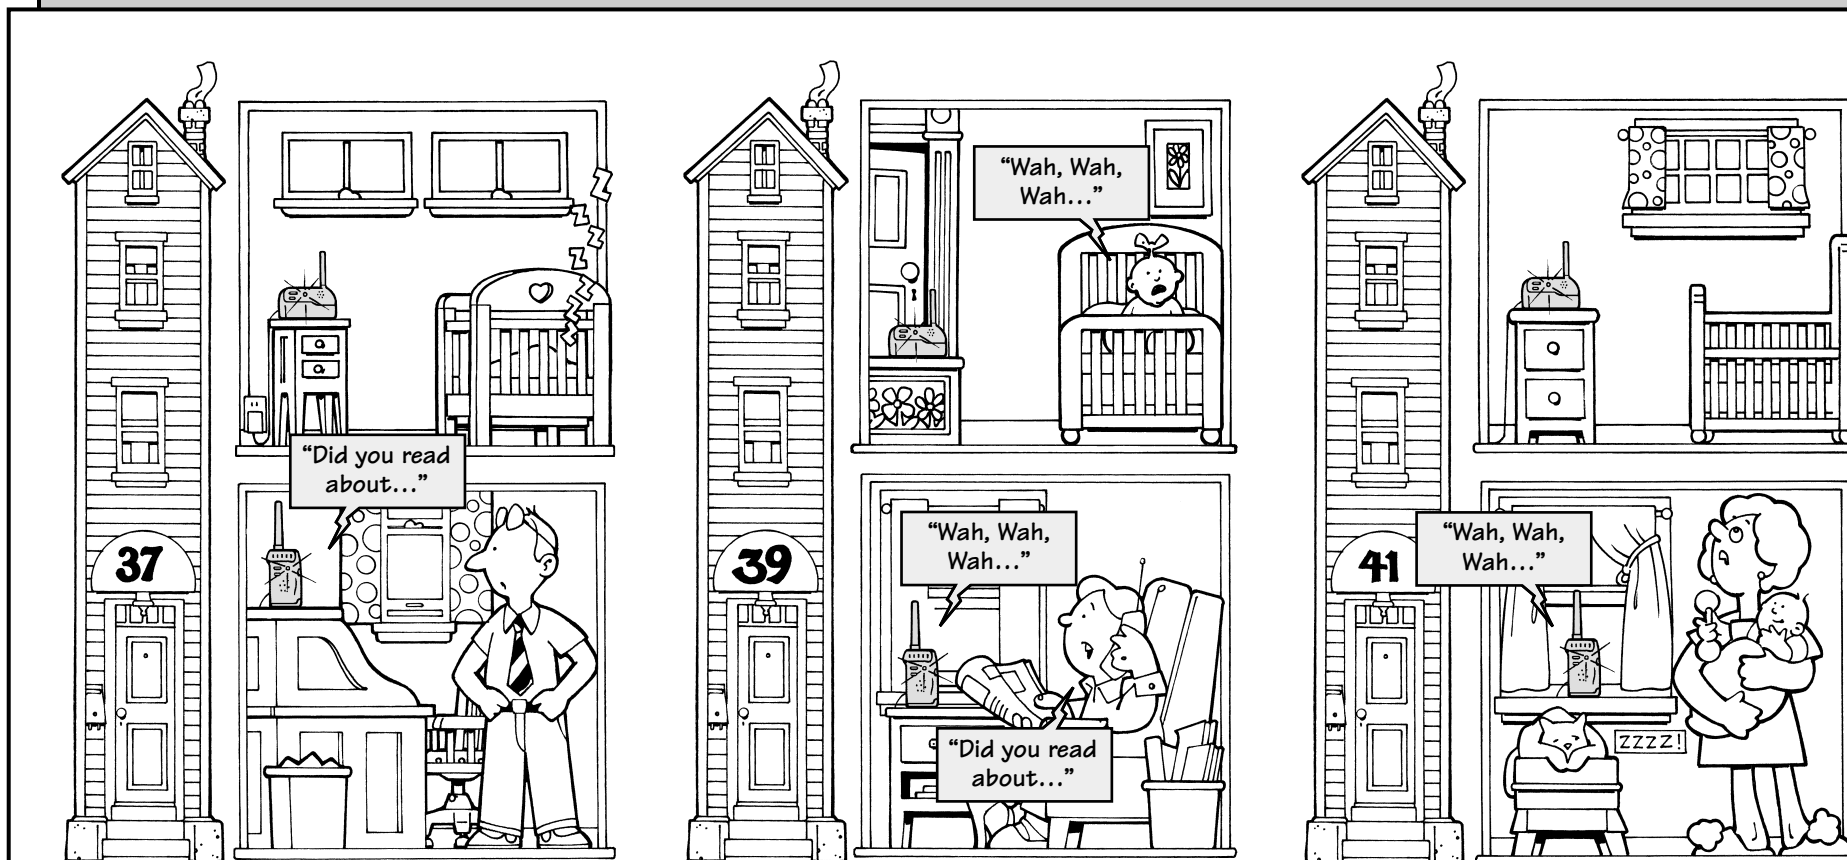

PROBLEM

 
 
You can hear conversations or sounds from other homes. There is signal interference due to other nursery monitor systems on same channel or cordless telephones.

SOLUTION

Change channel switches on both transmitter and receiver(s) to eliminate source of interference.

Helpful Hints:

- Do not use more than one nursery monitor system at same time in same household.
- Always remember that you are using public airwaves when using your nursery monitor system. Conversations, even from rooms near transmitter, may broadcast to other nursery monitors, radios, cordless telephones, or scanners outside your home. To protect privacy of your home, always turn transmitter off when not in use.

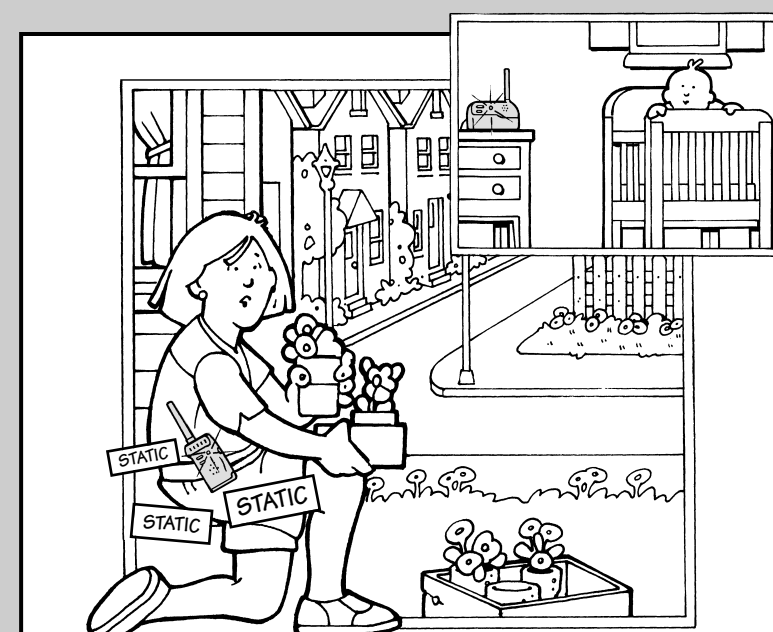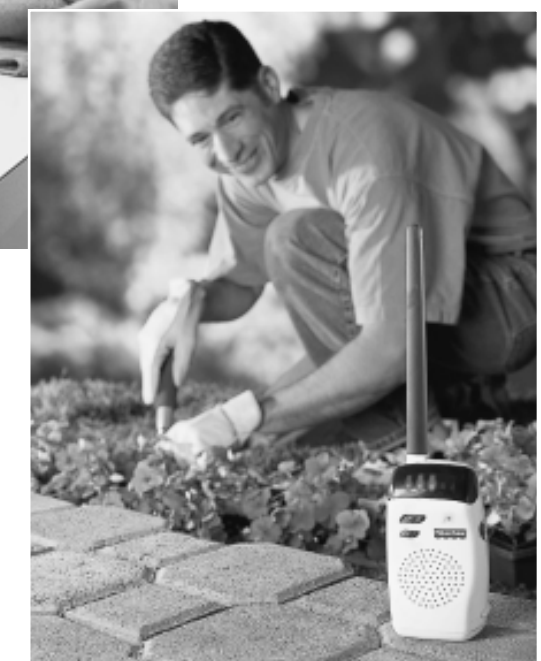

PROBLEM

You hear static or buzzing because receiver is out of range of transmitter.

Note: Range varies depending on surrounding conditions such as noise levels, physical obstructions and signal interference.

SOLUTION

Move receiver closer to transmitter.

Helpful Hint:

- If you cannot hear your child and all five bars do not light, your receiver battery is weak. Replace receiver battery with a fresh, 9V alkaline battery or use AC adaptor for power source.

- Adult assembly is required to install this battery (if used – not included).
- For proper setup and use, please read these instructions and keep for future reference.
- Includes three AC adaptors to power transmitter and receivers (plugs into standard household outlets – 120V AC). Receivers also run on battery power (9V alkaline battery for each receiver – not included).

IMPORTANT!

 
CAUTION

This product cannot replace responsible adult supervision.


- This product is not intended to be used as a medical monitor and its use should **not** replace adult supervision.
- Test sound reception of each receiver before first-time use and whenever you change location of transmitter.
- To prevent entanglement:
 - Never place transmitter in a crib or playpen. Keep transmitter and receiver(s) out of baby's reach.
 - Never use extension cords with the AC adaptors.
- Never use transmitter or receiver(s) near water (ie.: bathtub, sink, laundry tub or wet basement, etc.).
- Always use transmitter and receiver(s) where there is adequate ventilation. To prevent overheating, keep transmitter and receiver(s) away from heat sources such as radiators, heat registers, direct sunlight, stoves, amplifiers, or other appliances which produce heat.

TESTING SOUND RECEPTION

Test transmitter transmission and each receiver's reception.

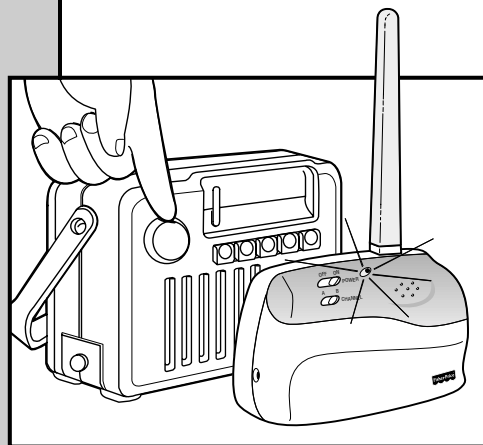


 Place transmitter in room in which you intend to use it. Slide transmitter power switch to turn power on. Turn on a radio.

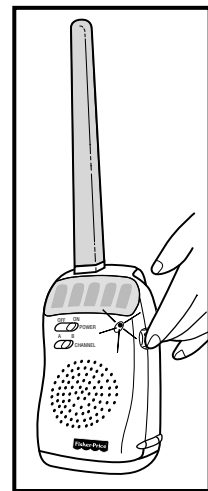

Place each receiver in the rooms in which you intend to use them. Rotate on/off/volume dial to turn power on. Adjust receiver's location for best reception.

 Hint: If you turn receiver power on before transmitter power, you will hear a static noise and all five bars in variable light display light. Simply turn receiver volume down and turn transmitter power on.


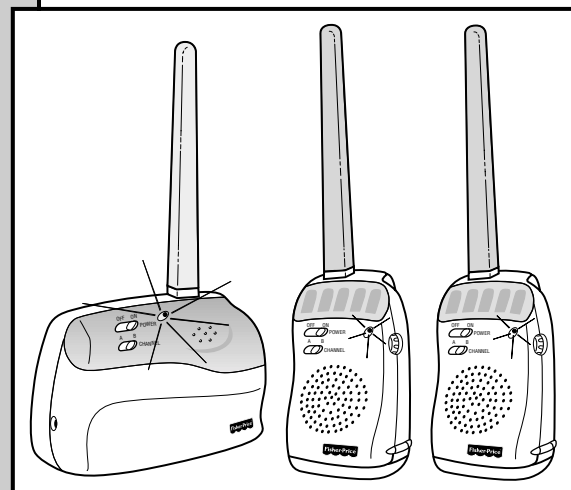


If you experience interference (buzzing or static, etc.) while using one channel setting, switch transmitter and receiver(s) to other channel. Selecting a channel is usually a one time adjustment.

Notes:

- Variable light display lights when sound is received by receiver.
- If all five bars in variable light display light:
 - Receiver power is on and transmitter power is off.
 - Receiver is too far away from transmitter.
 - Receiver and transmitter are not on same channel.
 - Loud sounds are transmitting.

  RECEIVER BATTERY INSTALLATION (OPTIONAL)

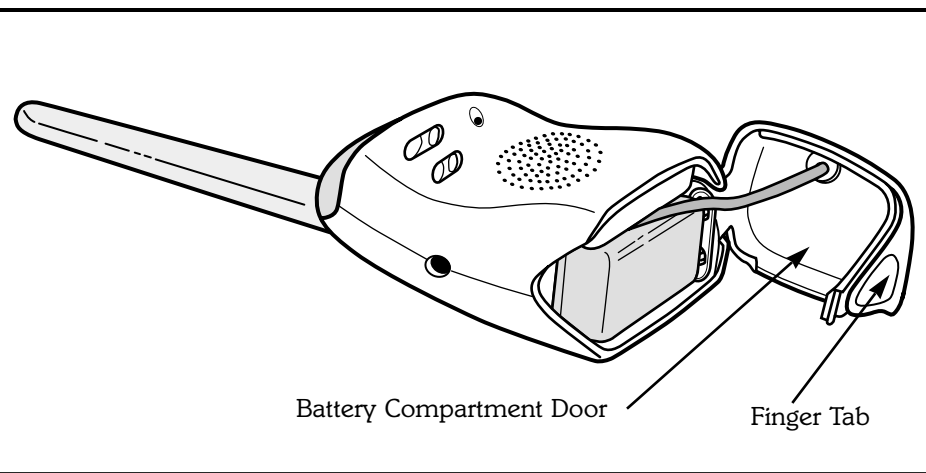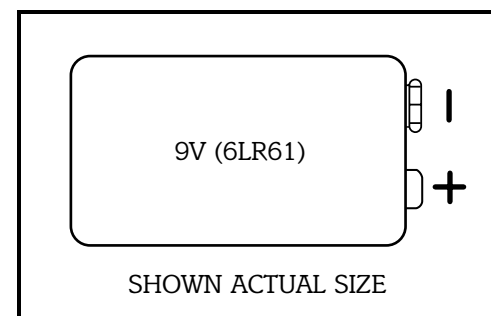

- Locate battery compartment door on bottom of receiver.
- Push finger tab on battery compartment door to open battery compartment door.
- Snap terminals of a fresh, 9V alkaline battery into receiver connectors.
- Close battery compartment door.

 
BATTERY TIPS

- Remove the battery during long periods of non-use. Always remove an exhausted battery from the product. Battery leakage and corrosion can damage this product. Dispose of battery safely.
- Never short circuit the battery terminals.
- A non-rechargeable battery is not to be recharged.
- Only a battery of the same or equivalent type as recommended in the "Battery Installation" instructions is to be used.
- If a removable rechargeable battery is used, it is only to be charged under adult supervision.
- A rechargeable battery is to be removed from the product before it is charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.

CONSUMER INFORMATION

Occasionally a consumer may experience a problem with one of our products. If this should happen, please call us, toll-free, rather than return this product to the store. Usually we can solve the problem on the telephone or by sending you replacement parts. Please call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

SETUP AND USE

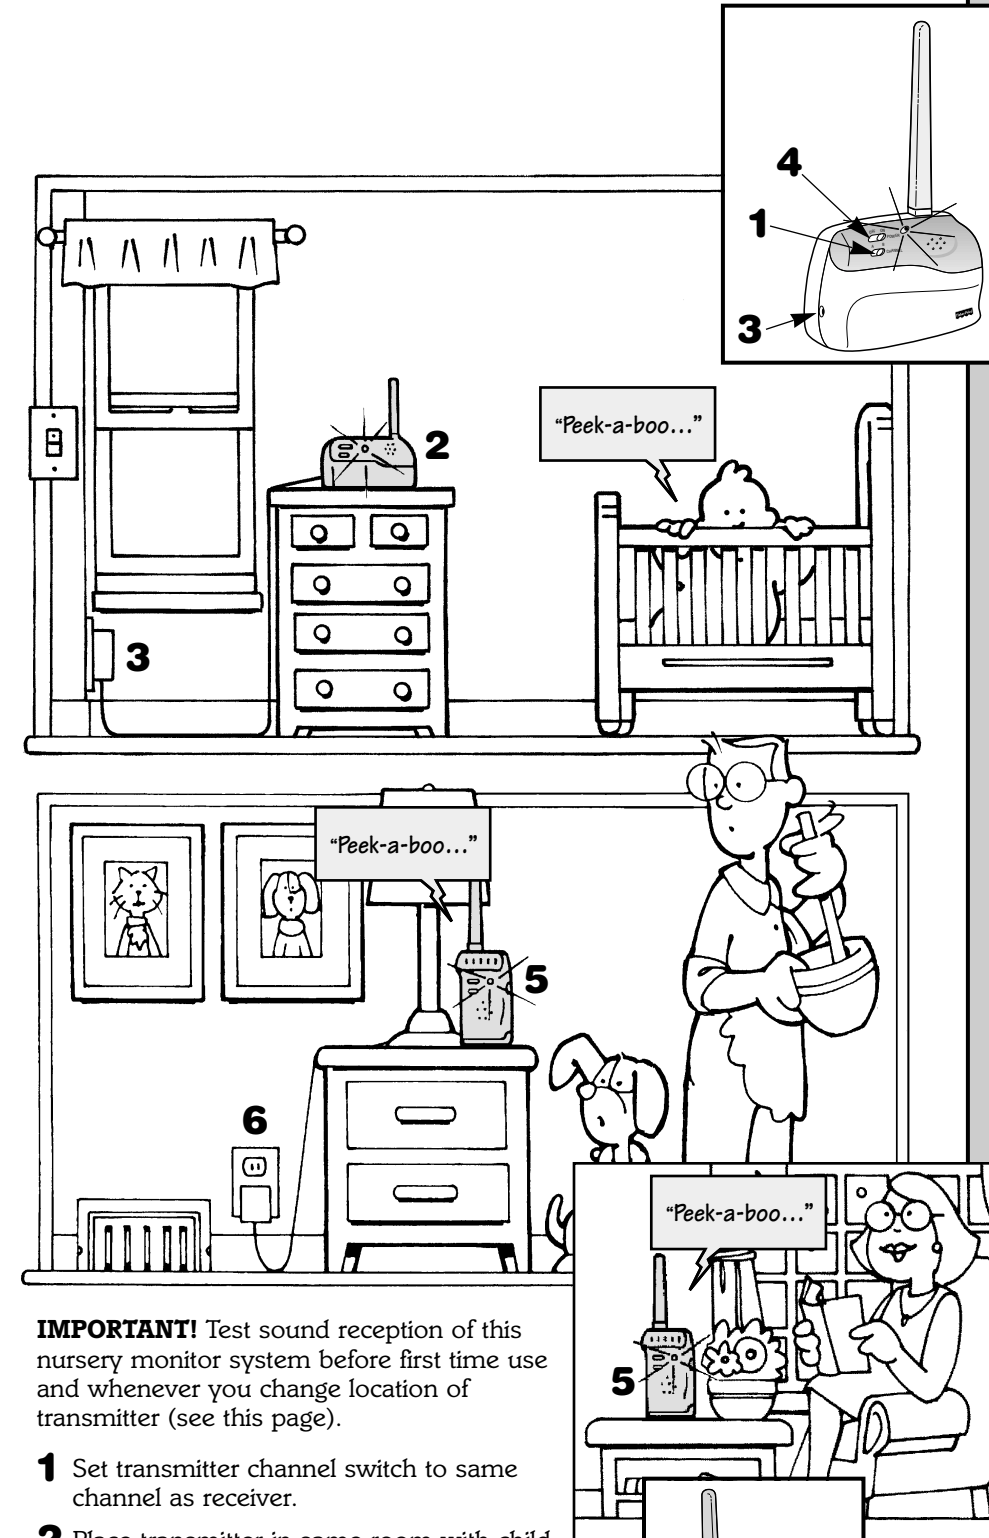

IMPORTANT! Test sound reception of this nursery monitor system before first time use and whenever you change location of transmitter (see this page).

- 1 Set transmitter channel switch to same channel as receiver.
- 2 Place transmitter in same room with child. Point microphone directly toward crib or play area.
- 3 Plug AC power cord into wall outlet. Unwrap and fully extend AC adaptor cord for best transmission. Insert AC adaptor jack into transmitter socket and plug into wall outlet.
- 4 Slide transmitter on/off switch to turn power on. Power indicator lights.
- 5 Place receiver where you will see or hear it.
- 6 Unwrap and fully extend AC adaptor cord for best reception. Insert AC adaptor jack into receiver socket and plug into wall outlet.

Note: To use a 9V alkaline battery for power source, refer to "Receiver Battery Installation" instructions on this page.
- 7 Rotate receiver on/off/volume dial to turn power on. Power indicator lights. Rotate on/off/volume dial to adjust volume.

CARE

Excess dirt in transmitter microphone will hamper transmission of sound. Clean outer surface of transmitter and receivers with a cloth lightly dampened with a mild cleaning solution. Never immerse transmitter, receivers or AC adaptors.

FCC NOTE (UNITED STATES ONLY)

Sound 'n Lights Nursery Monitor with Dual Receivers
Model Number: 71590

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Sound 'n Lights Nursery Monitor with Dual Receivers
Consumer Relations Department
636 Girard Avenue
East Aurora, New York 14052

Any modification of the transmitter or receiver will violate FCC compliance and can void the user's authority to operate the equipment.

ONE (1) YEAR LIMITED WARRANTY

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052 warrants that the Sound 'n Lights Nursery Monitor with Dual Receivers is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Consumer Relations at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc., will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.

The electronic components in transmitter, receivers and AC adaptors are not designed for consumer repair. Evidence of any attempt of consumer repair will void this warranty.

If you have any questions about this product:

In Canada, call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Fremont Blvd., Mississauga, Ontario L5R 3W2.

In Great Britain, telephone **01628 500303**.

In Australia, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1-800-800-812 (valid only in Australia).

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, New York 14052, U.S.A.

©2000 Mattel, Inc. All Rights Reserved.

® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in Hong Kong

71590pr-0920