

# Fisher-Price®

## Baby Smartronics™

### Alphabet Nest-a-mals™

Model Number: 71651



Please keep this instruction sheet for future reference,  
as it contains important information.

 
Requires three "AA" (LR6) batteries for operation (included).

Tool required for battery replacement: Phillips screwdriver (not included).


Batteries must be replaced by an adult.

[www.fisher-price.com](http://www.fisher-price.com)

# Battery Replacement

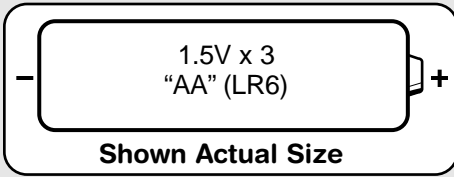

## Battery Compartment

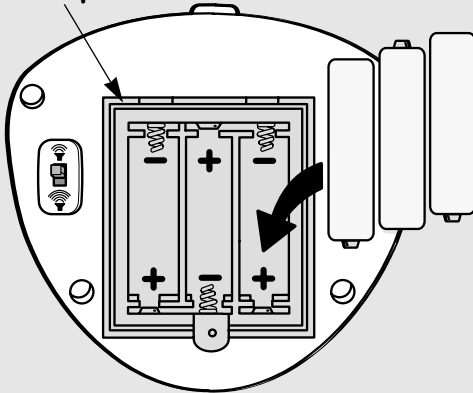 

## Bottom View

For best performance, we recommend you replace the batteries that came with this toy with three, new "AA" (LR6) alkaline batteries upon purchase.

- Locate the battery compartment on the underside of the base.
- Loosen the screw in the battery compartment cover using a Phillips screwdriver and lift to remove the cover.
- Remove the exhausted batteries. Dispose of batteries safely.
- Insert three, new "AA" (LR6) alkaline batteries as indicated inside the battery compartment.

 
 
**Helpful Hint:** For longer battery life, we recommend use of **alkaline** batteries.

- Fit the tabs on the battery compartment cover into the slots in the base and close the cover.
- Tighten the screw with a Phillips screwdriver. Do not over-tighten.

## Battery Tips


- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can cause damage. Dispose of batteries safely.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Replacement" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.
- If sound or lights from this toy become faint or stop working, it's time for an adult to replace the batteries!

# Let's Play and Learn!

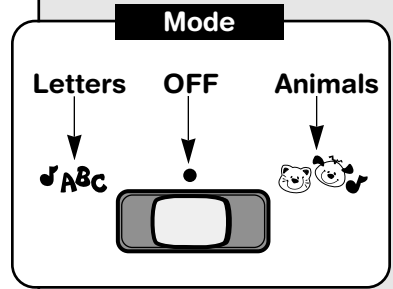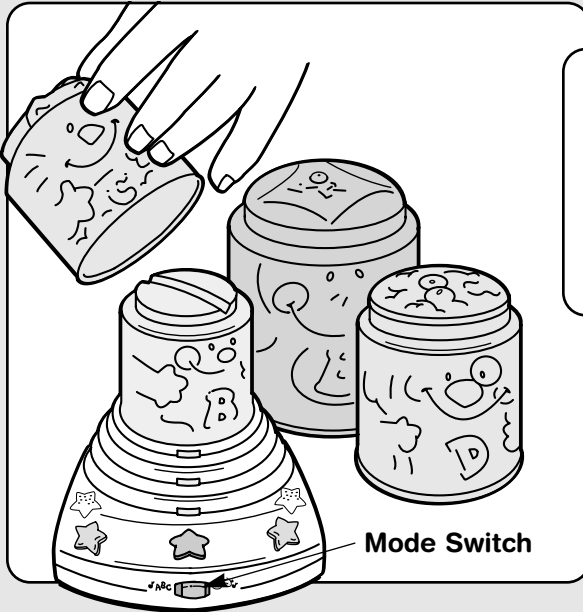

- Alphabet Nest-a-mals™ has two different play modes to introduce baby to animal names and sounds, and first letters! Slide the mode switch to the left for letters ♪ ABC. Slide the mode switch to the right for animals 🐱 🐶 🎵.

 - Turn Alphabet Nest-a-mals™ ON by sliding the mode switch to Letters ♪ ABC or to Animals 🐱 🐶 🎵.
- In the **Letters mode**, nest the cups on the base to hear the letter shown on the nesting cup, followed by the name of the animal pictured on the cup.
- In the **Animals mode**, nest the cups on the base to hear the name of the animal pictured on the nesting cup, followed by the sound the animal makes.
- In either mode, watch the stars light and twinkle each time you place a nesting cup on the base.
- The cups can be nested or stacked on or apart from the base!
- Hear a fun circus tune play and watch the stars light and twinkle whenever the roly-poly base is rocked from side-to-side!
- To extend the life of your batteries, always remember to turn the mode switch to the OFF position ● after play.

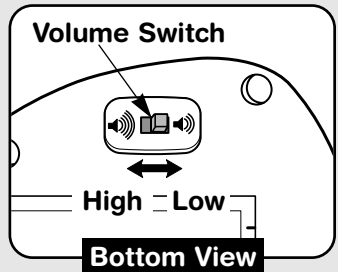

- Locate the volume switch on the underside of the base. Select high volume 🗣️ or low volume 🗣️.

## Care

To clean, wipe all parts with a damp cloth. Never immerse this toy.

## FCC Note (United States Only)

**Note:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

**CAUTION:** Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

## Consumer Information



### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

For other countries, outside the United States: **Canada:** call **1-800-567-7724**, or write to: Mattel Canada Inc, 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2. **Great Britain:** telephone 01628 500303.

**Australia:** Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

**New Zealand:** 16-18 William Pickering Drive, Albany 1331, Auckland.

**Fisher-Price** Fisher-Price, Inc., a subsidiary of Mattel, Inc.  
East Aurora, New York 14052, U.S.A.

©2001 Mattel, Inc. All Rights Reserved.

® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in China  
71651a-0920