



First Words Phone™

Instructions



Model Number: 71654

Please keep these instructions for future reference.

 
 
Requires three "AA" (LR6) batteries for operation (included).

Tool required for battery replacement: Phillips screwdriver (not included).

Batteries must be replaced by an adult.



Battery Replacement

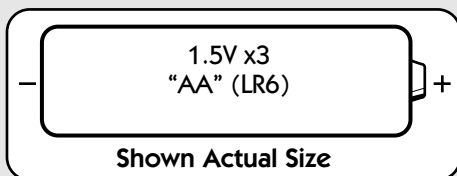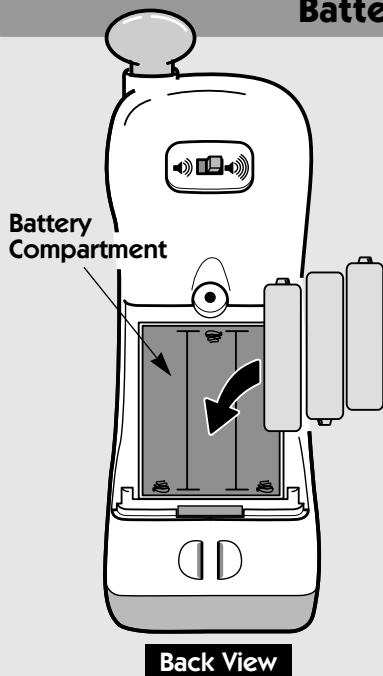

For best performance, we recommend you replace the batteries that came with this toy with three, new alkaline batteries upon purchase.

- Locate the battery compartment on the back of the phone.
- Loosen the screw in the battery compartment cover using a Phillips screwdriver and lift to remove the cover. (The screw will remain in the cover.)
- Remove the exhausted batteries from the phone. Dispose of the used batteries safely.
- Insert three, new AA (LR6) alkaline batteries as indicated inside the battery compartment.

 
 
Helpful Hint: For longer battery life, we recommend use of alkaline batteries.

- Fit the tab on the battery compartment cover into the slot in the phone and close the cover.
- Tighten the screw with a Phillips screwdriver. Do not over-tighten.

Battery Tips



- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can cause damage. Dispose of batteries safely.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Replacement" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.
- If sound or lights from this toy become faint or stop working, it's time to replace the batteries!

Let's Play and Learn!

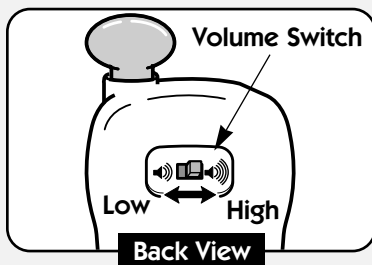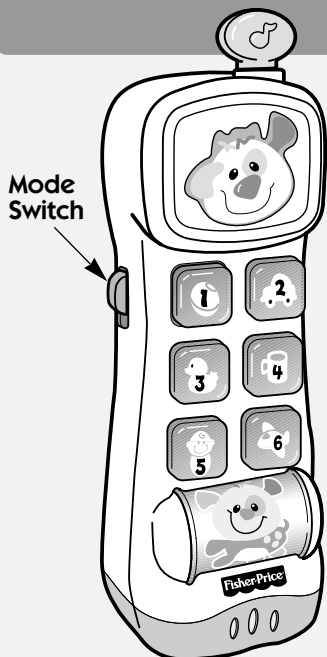

- First Words Phone™ has two different play modes to help baby learn words and numbers! Slide the mode switch up for Words (🐶🐱). Slide the mode switch down for Numbers (1234).
- Locate the volume switch on the back of the toy. Select low volume 🔊 or high volume 🔊.

  - Turn First Words Phone™ ON by sliding the mode switch to Words (🐶🐱) or to Numbers (1234).
- In the **Words mode**, press any one of the six keypad buttons to hear the name of the object pictured on the keypad and to see blinking lights.
- Or, spin the three position roller to hear the name of the animal pictured on the roller and to see blinking lights.
- In the **Numbers mode**, press any one of the six keypad buttons to hear the number you've pressed. First Words Phone™ will start at "one" and count up to the number you've pressed and each keypad will light in sequence!
- Or, spin the three position roller to hear the bear growl, the kitty meow or the puppy bark and to see blinking lights.
- In either play mode, press the puppy's face at any time during play to hear the phone ring and to hear a telephone greeting. Next time you press the puppy's face, First Words Phone™ says "Bye-bye" and hangs up. With each press of the puppy's face, its nose lights up too!
- Press the antenna at any time during play to hear one of two fun melodies.
- To extend the life of your batteries, always remember to turn the mode switch to the OFF position (●) after play.

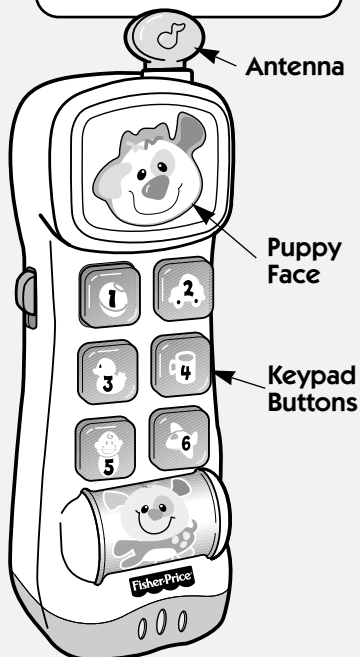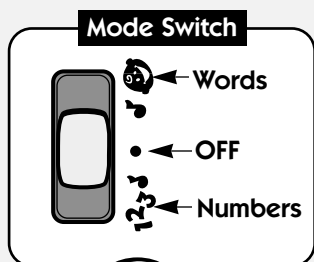

Care

- To clean, wipe all parts with a damp cloth. Never immerse this toy.

FCC Note (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Consumer Information



Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 5 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price® Consumer Affairs, 636 Girard Avenue,
East Aurora, New York 14052.

www.fisher-price.com

If you have any questions about this product:

In Canada, call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

In Great Britain, telephone 01628 500303.

In Australia, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1-800-800-812 (valid only in Australia).

Fisher-Price Fisher-Price, Inc., a subsidiary of Mattel, Inc.
East Aurora, New York 14052, U.S.A.

©2000 Mattel, Inc. All Rights Reserved.

® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in China
71654pr-0920