



Animal Quartet Piano

Instructions



Model Number: 71663

Please keep these instructions for future reference.


Requires three "AA" (LR6) alkaline batteries. Dispose of batteries safely.

Adult assembly is required for battery replacement.

Tool required for battery replacement: Phillips screwdriver (not included).

Fisher-Price®

Battery Replacement

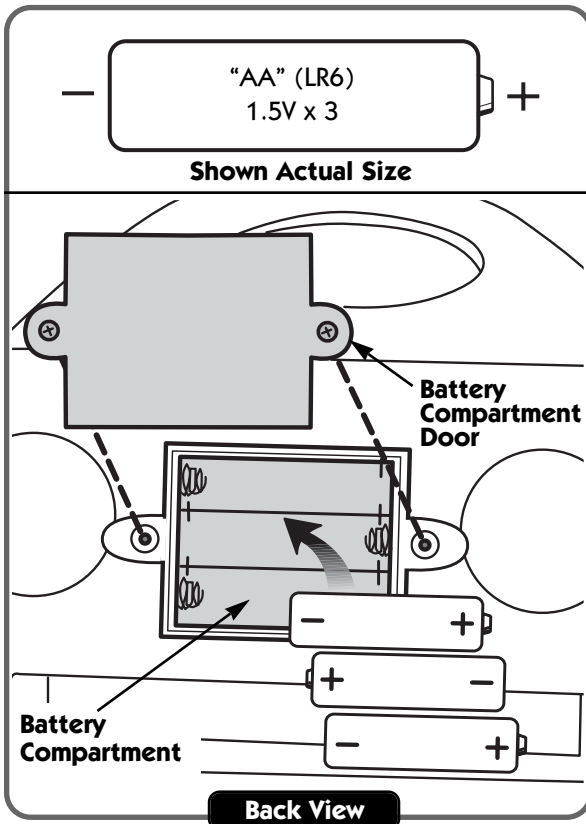

For best results, we recommend replacing the batteries that came with this toy with three new alkaline batteries.

- Locate the battery compartment on the back of the piano.
- Loosen the screws in the battery compartment door with a Phillips screwdriver. (The screws will remain in the door.)
- Lift to remove the battery compartment door.
- Insert three “AA” (LR6) alkaline batteries as indicated inside the battery compartment.


Hint: We recommend using alkaline batteries for longer battery life.

- Replace the battery compartment door and tighten the screws with a Phillips screwdriver. Do not over-tighten.

Battery Tips


- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can cause damage. Dispose of batteries safely.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the “Battery Replacement” instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.
- If sound or lights from this toy become faint or stop working, it's time for an adult to replace the batteries!

Let's Play and Learn!

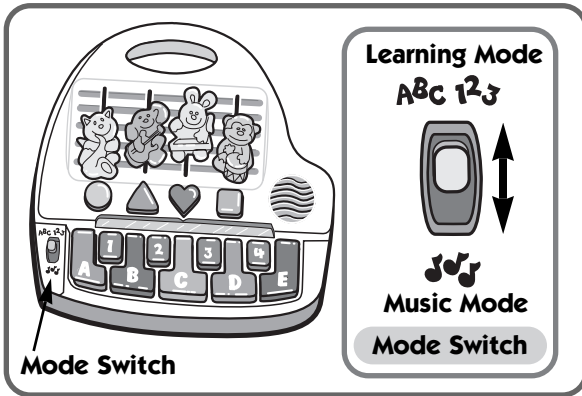

- Animal Quartet Piano has two play modes. To select a play mode, slide the mode switch up for Learning **A B C 1 2 3** or down for Music **♪ ♫**.
- To turn the sound off, slide the mode switch to the middle position.
- Locate the volume switch on the bottom of the toy. Select low volume () or volume ().

Learning Mode

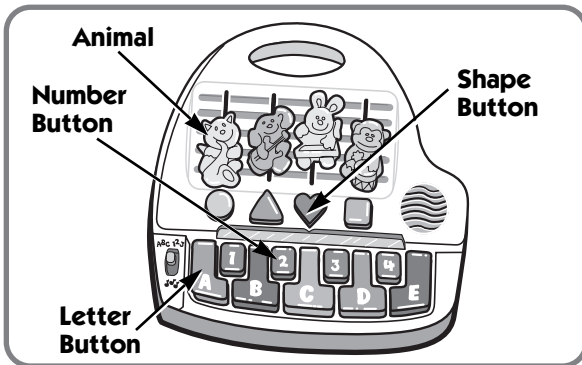


- Press a letter button to hear the letter. "**A**".
- Press a number button to hear the number. "**2**".
- Press a shape button to hear the color and name of the shape. "**Red heart**".
- Slide an animal up and down the track to hear the animal's name and sound. "**Cat. Meow meow!**"

Hint: Slide an animal up the track (away from you) to raise the animal's pitch. Slide an animal down the track (toward you) to lower the animal's pitch.

- Watch the lights flash as you slide the animals up and down the tracks!

Music Mode

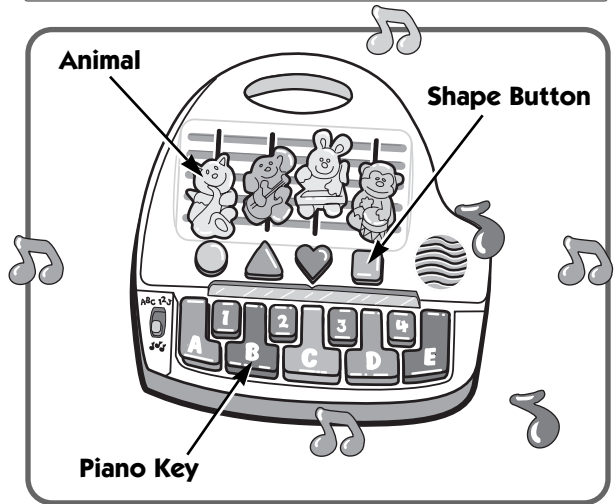

- Press a piano key to hear a single note.
Hint: If a piano key is pressed after an animal has been moved up or down the track, the note will be played by the animal's instrument.
- Press a shape button to hear the animals play one of four friendly songs. To hear more songs, press the shape buttons again and again!
- Slide an animal up or down the track to hear the name of the animal's instrument and the instrument sound. "**Drum. Rat-a-tat-tat.**"
Hint: Slide an animal up the track (away from you) to raise the instrument volume. Slide an animal down the track (toward you) to lower the instrument volume.
- Watch the lights flash as the music plays!

NOTE: The phrases and sound effects shown in bold type are random responses by this toy. This toy may respond differently than shown.

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy in water.
- This toy has no consumer serviceable parts. Please do not take this toy apart.

FCC Statement (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Consumer Information



Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

www.fisher-price.com

If you have any questions about this product:

In Canada, call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

In Great Britain, telephone 01628 500303.

In Australia, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1-800-800-812 (valid only in Australia).