 




Counting Sheep™

Instructions

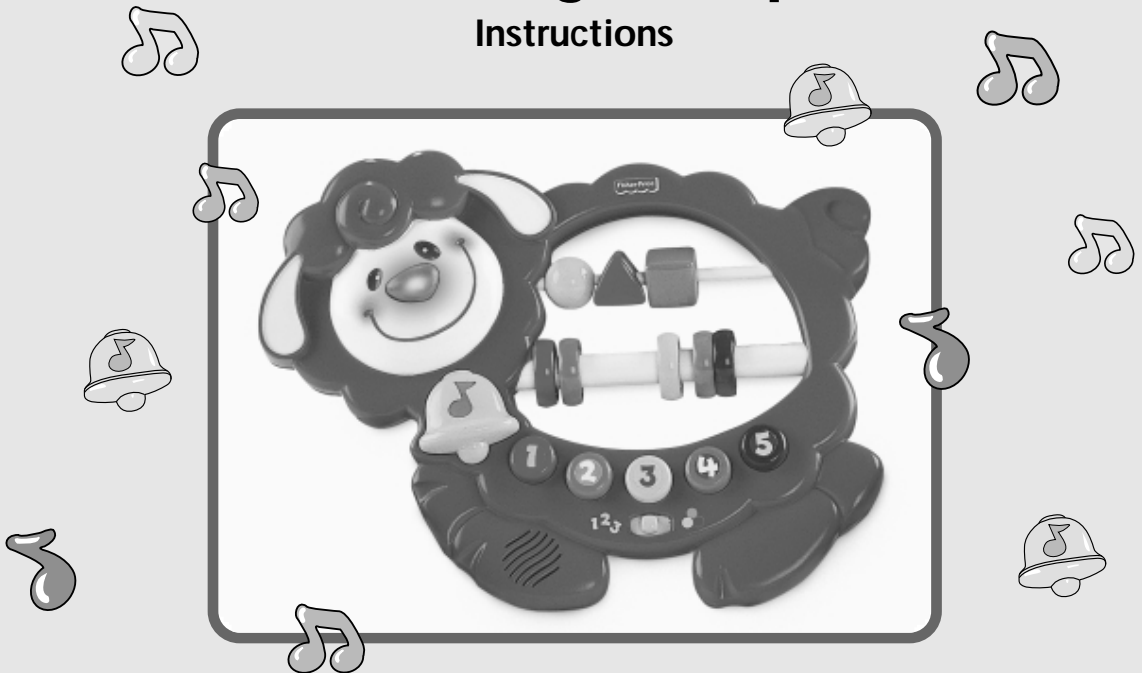

Model Number: 71933

Please keep these instructions for future reference.

 
Requires three "AA" (LR6) batteries for operation (included).

Tool required for battery replacement: Phillips screwdriver (not included).

Batteries must be replaced by an adult.



Battery Replacement

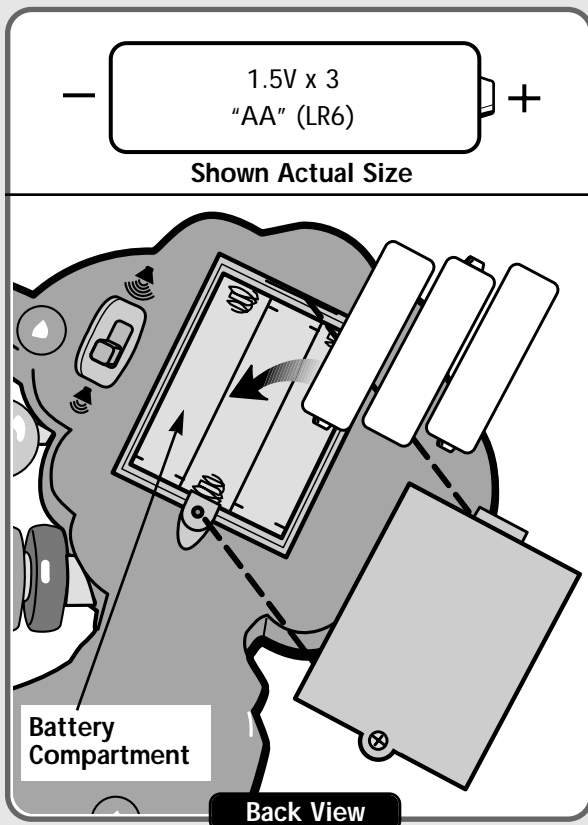

Battery Tips

- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the toy. Battery leakage and corrosion can cause damage. Dispose of batteries safely.
- Never short circuit the battery terminals.
- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Replacement" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the toy before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.
- If sound or lights from this toy become faint or stop working, it's time to replace the batteries!

For best performance, we recommend you replace the batteries that came with this toy with three, new alkaline batteries upon purchase.

- Locate the battery compartment on the back of the toy.
- Loosen the screw in the battery compartment cover using a Phillips screwdriver and lift to remove the cover. (The screw will remain in the cover.)
- Remove the exhausted batteries from the toy. Dispose of the used batteries safely.
- Insert three, new "AA" (LR6) alkaline batteries as indicated inside the battery compartment.

 
Helpful Hint: For longer battery life, we recommend use of alkaline batteries.

- Fit the tab on the battery compartment cover into the slot in the battery compartment and close the cover.
- Tighten the screw with a Phillips screwdriver. Do not over-tighten.




Let's Play and Learn!

Front View

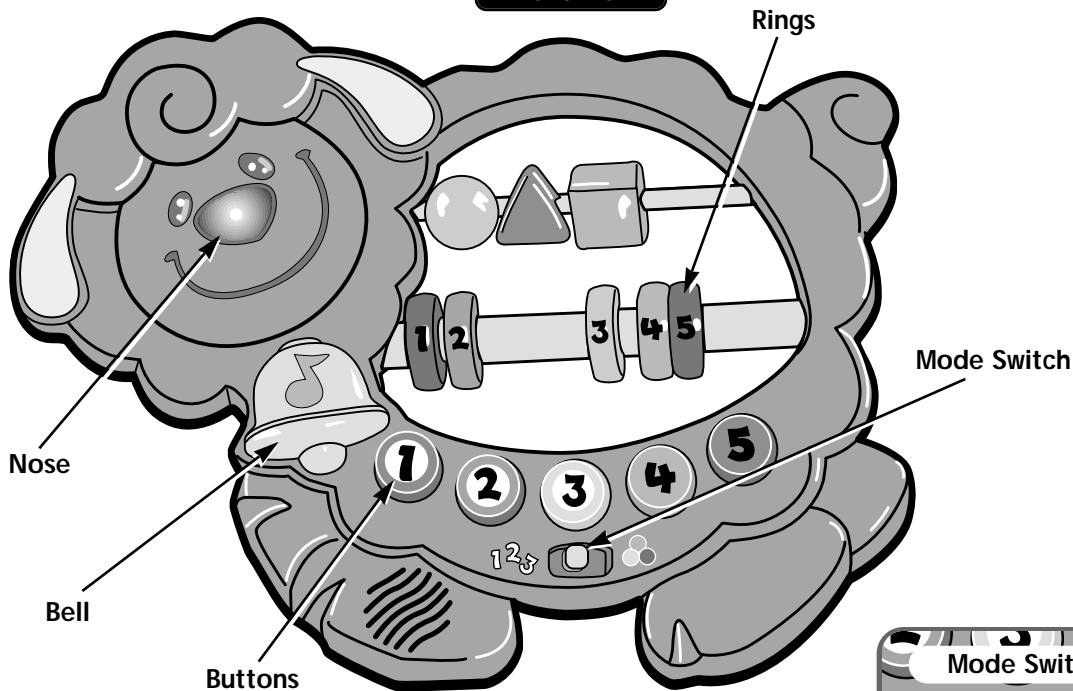


- Turn Counting Sheep™ ON by sliding the mode switch to Numbers (123) or to Colors (456).
- In the **Numbers mode**, press any one of the five buttons to hear the number you've pressed and watch the sheep's nose light-up!
- Slide the rings to the right or left to hear the number on the ring. Help the sheep count with each slide of a ring: 1, 2, 3, 4, 5!
- In the **Colors mode**, press any one of the five buttons to hear the color of the button you've pressed and watch the sheep's nose light-up!
- Slide the rings to the right or left and the sheep will tell you the color of each ring.
- In **either play mode**, press the bell at any time during play to hear one of two "sheepish" melodies. Or, press the sheep's nose for funny sound effects!
- To extend the life of your batteries, always remember to turn the mode switch to the OFF position (●) after play.

 - Counting Sheep™ has two different play modes to introduce baby to numbers and colors! Slide the mode switch to the left for Numbers (123). Slide the mode switch to the right for Colors (456).

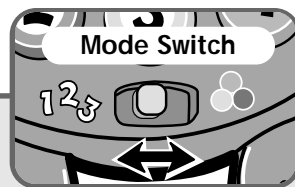

Back View

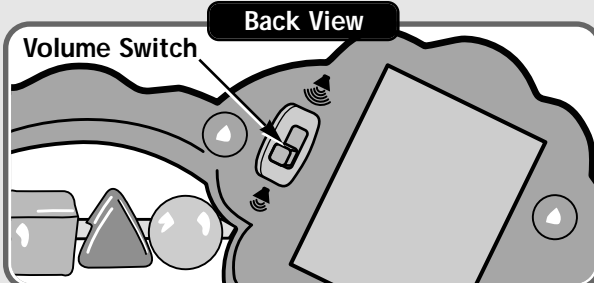 

- Locate the volume switch on the back of the toy. Select low volume (speaker icon) or high volume (speaker icon with sound waves).



Care

To clean, wipe all parts with a damp cloth. Never immerse this toy.

FCC Statement (United States Only)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Consumer Information



Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

www.fisher-price.com

If you have any questions about this product:

In Canada, call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

In Great Britain, telephone **01628 500303**.

In Australia, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1-800-800-812 (valid only in Australia).