

Fisher-Price®

Big Action™ Construction Rotating Crane Boom Kit

Model Number: 72028


⚠ WARNING

Entanglement Hazard


- Your child could become entangled in the cord on the rotating crane boom when it is fully extended (lowered).
- Do not use this product until you have repaired it.

Replacement Instructions


IMPORTANT! Enclosed is a new rotating crane boom with a shorter cord.

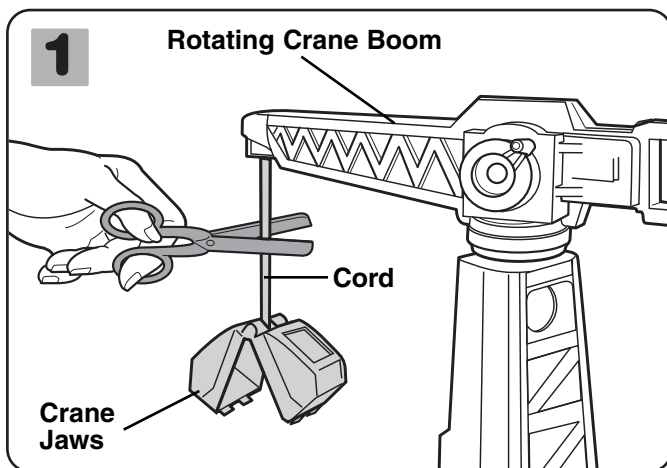

- Cut the cord on the rotating crane boom. Throw away the crane jaws.

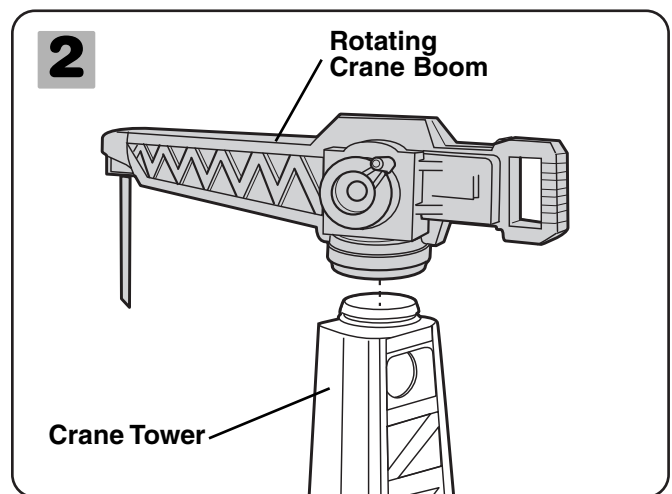

- Lift to remove the rotating crane boom from the tower. Throw away the rotating crane boom.

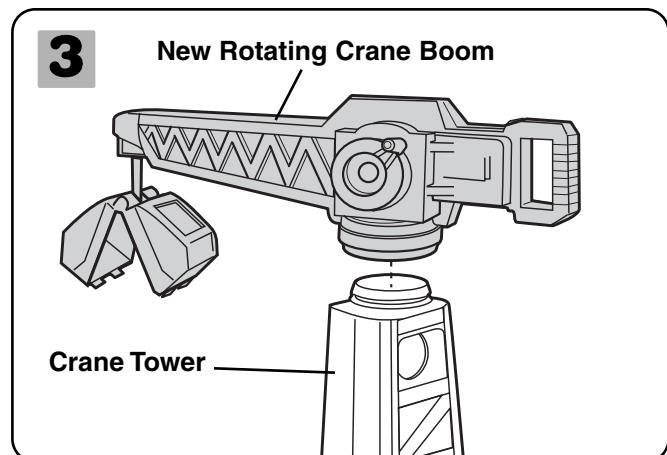

- Fit and snap the new rotating crane boom onto the top of the crane tower.

If you have further questions, call Fisher-Price® Consumer Relations, toll-free at **1-800-233-4004**, 8 AM-6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price® Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

Fisher-Price, Inc., a subsidiary of Mattel, Inc.
East Aurora, New York 14052, U.S.A.

©2000 Mattel, Inc. All Rights Reserved.
® and ™ designate U.S. trademarks of Mattel, Inc.