


# Fisher-Price®

## All-In-One Kitchen Center™

Model 72108

Please keep these instructions for future reference.

 Tool needed for assembly: Phillips screwdriver.

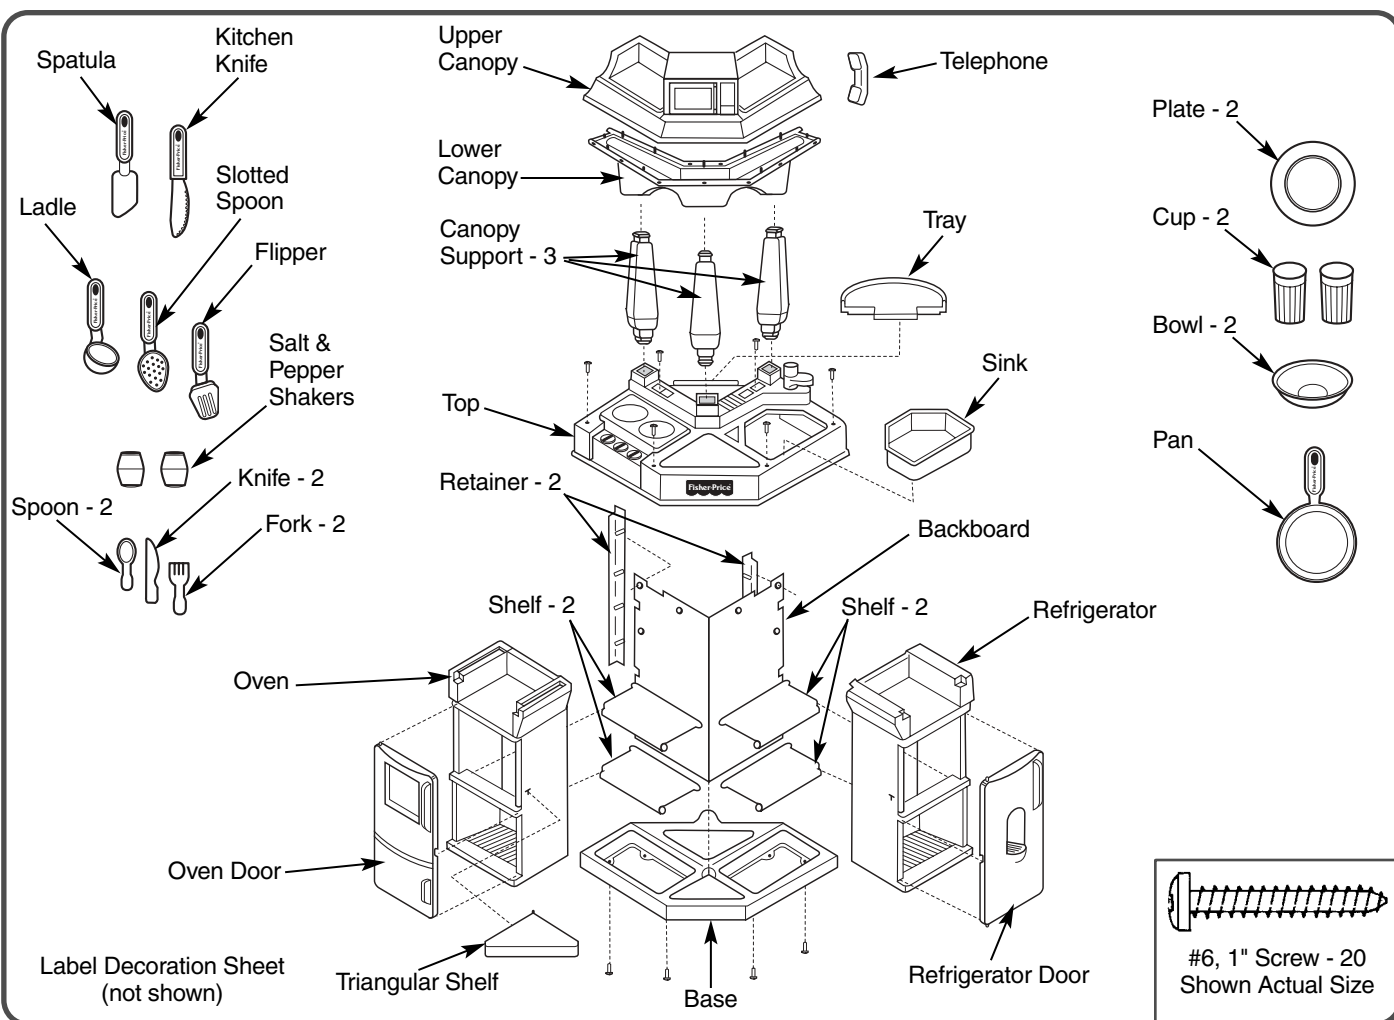


- Before assembly, wipe each plastic part with a damp cloth to remove any debris.
- Save all packaging material until assembly is complete to ensure that parts are not discarded.

### ⚠ CAUTION

 This package contains small parts.  
Adult assembly is required.

# Assembly


1

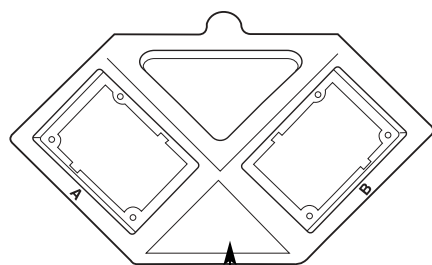

Triangular Shelf

- Place the base on a flat surface so that the triangular shelf faces you.
- Take note of the letter (A or B) next to each rectangular opening.

 
2

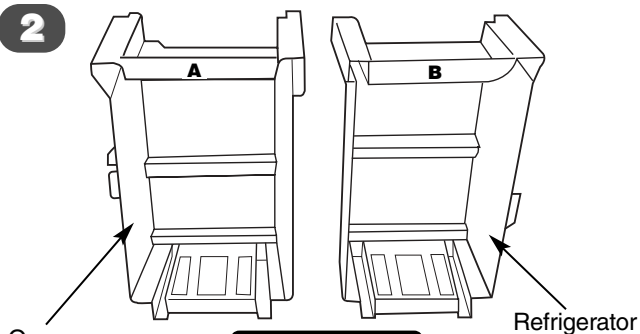

BACK VIEW

- The oven and refrigerator are marked A (oven) and B (refrigerator). Locate the A or B marking on the back of each.

 
3

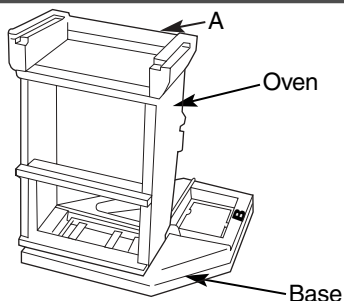

FRONT VIEW

- Insert the oven (A) into the rectangular opening in the base (A).

 
4

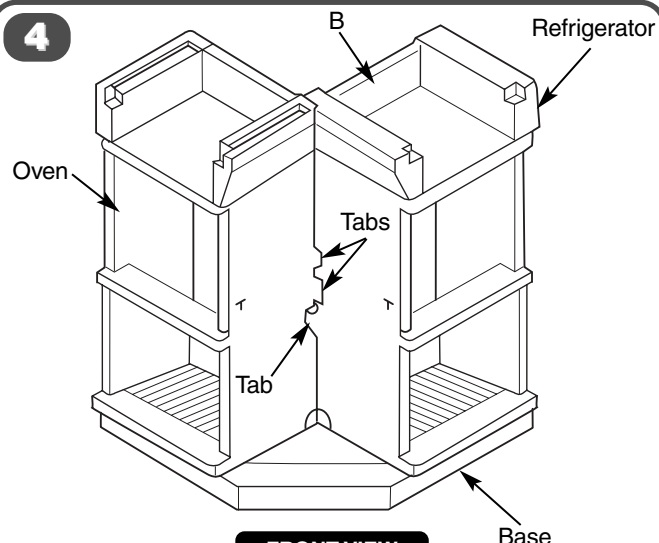

FRONT VIEW

- Insert the refrigerator (B) into the rectangular opening in the base (B).
- Position the refrigerator and the oven so that the tab on the refrigerator is flat against the oven and the tabs on the oven are flat against the refrigerator.

 
5

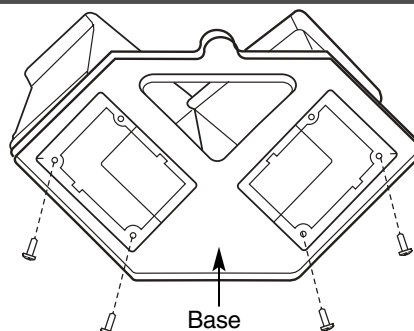


BOTTOM VIEW

- Turn the base assembly upside down.
- Insert four screws and tighten with a Phillips screwdriver. Do not over-tighten.


# Assembly

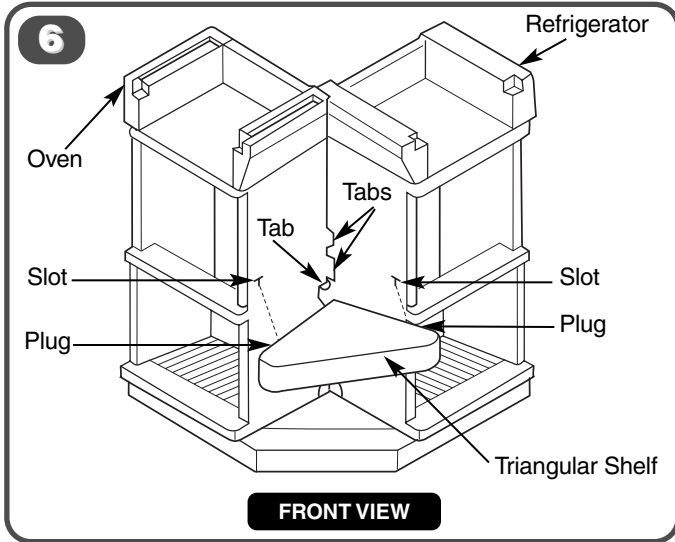 

 - Stand the base assembly upright.
- Insert the plugs on the triangular shelf into the slots in the oven and refrigerator.
- Make sure the tab on the refrigerator is flat against the oven and the tabs on the oven are flat against the refrigerator.

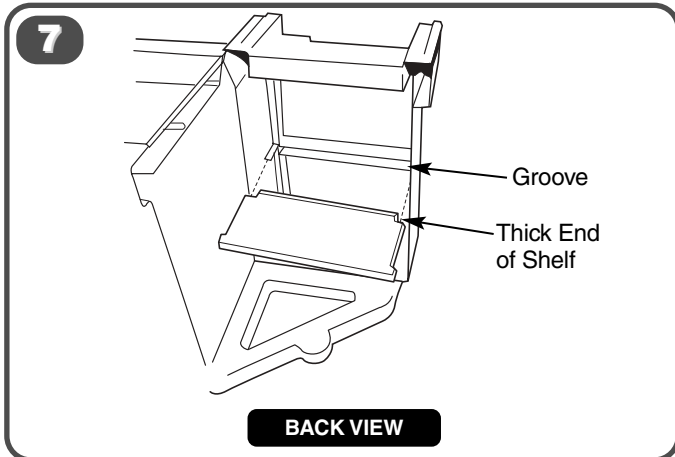


 - Turn the base assembly so that the back faces you.
- Hold a shelf so that the thick end faces away from you.
- Insert the thick end of the shelf into a groove in the oven.
- Repeat this procedure to insert a shelf into the other groove in the oven, and the remaining two shelves into the grooves in the refrigerator.

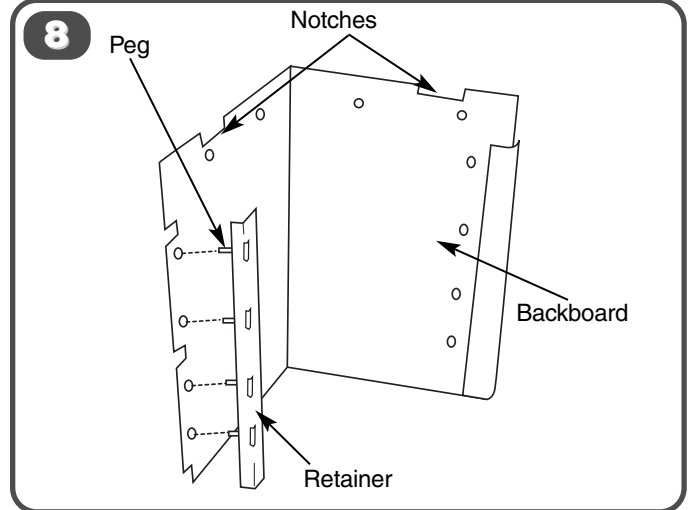

- Position the backboard so that the notches are upward.
- Insert the square and round pegs on a retainer into the corresponding holes in the backboard.
- Repeat this procedure to attach the other retainer to the backboard.

 
**PLEASE NOTE:** If the pegs on the retainer do not line-up with the holes in the backboard, turn the backboard around so that you are looking at the opposite side. Re-crease the backboard in the middle and attach the retainers.

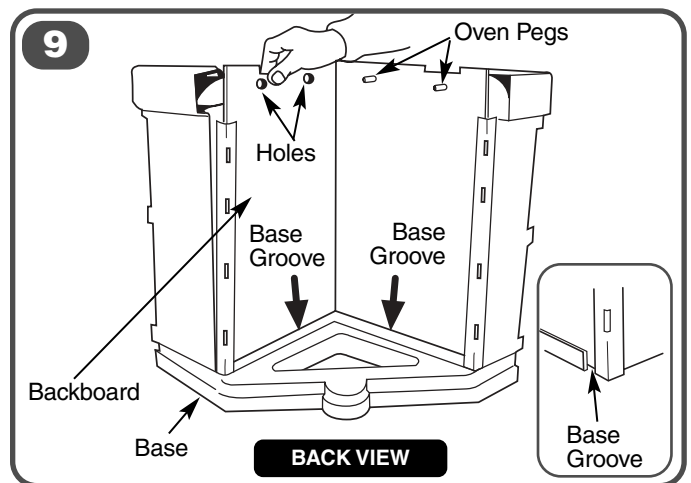

- Insert the backboard into the base groove, as shown.
- Insert the four pegs on the back of the oven and refrigerator into the holes in the backboard.

# Assembly

 
**10**

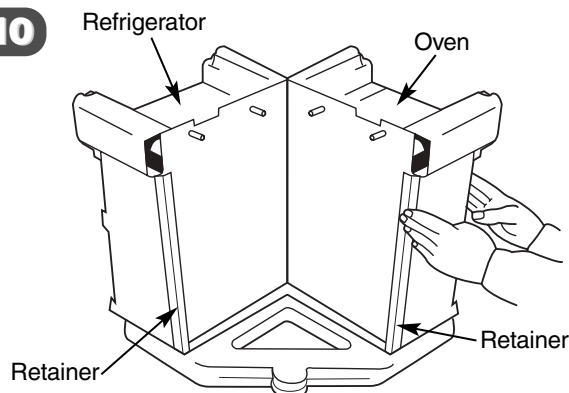

**BACK VIEW**

- Snap a retainer onto the oven.
- Snap the other retainer onto the refrigerator.

 
**12**

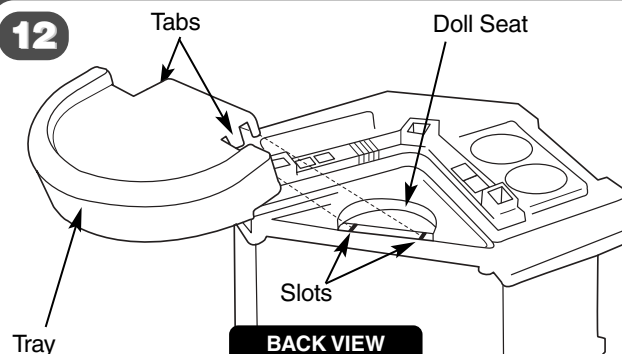

**BACK VIEW**

- Turn the base assembly so that the back faces you.
- Align the tabs on the tray with the slots on the bar in front of the doll seat.
- Snap the tray into place on the bar.

 
**13**

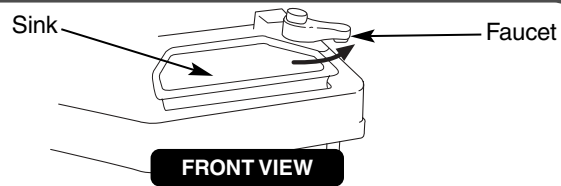

**FRONT VIEW**

- Turn the assembly so that the front faces you.
- Turn the faucet to the right, away from the sink opening.
- Fit the sink into the opening on top of the refrigerator.
- Center the faucet over the sink.

 
**11**

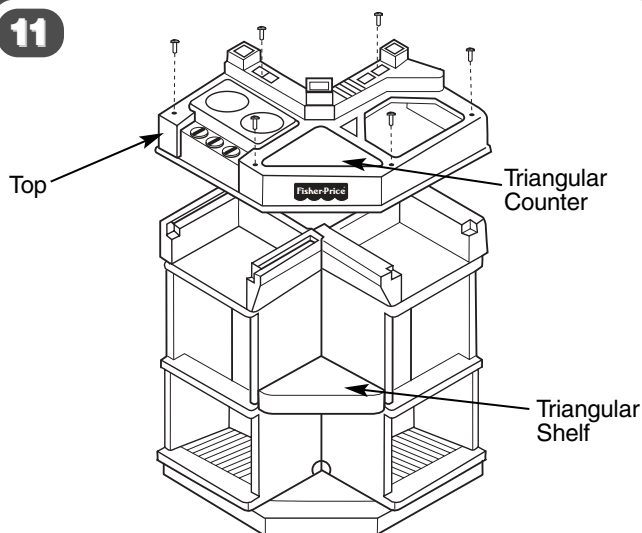

**FRONT VIEW**

- Turn the base assembly so that the front faces you.
- Fit the top onto the base assembly with the triangular counter over the triangular shelf.
- Push the top down firmly.
- Insert six screws and tighten with a Phillips screwdriver. Do not over-tighten.

 
**14**

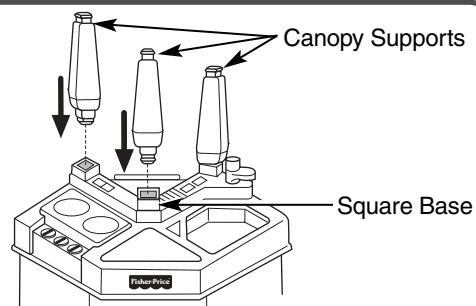

- Insert a canopy support, wide end down, into a square base.
- Press down to snap the canopy support into place.
- Repeat this procedure to attach the other two canopy supports.


# Assembly

 15

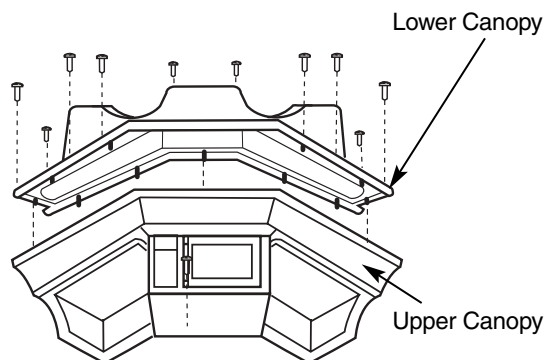


- Turn the upper canopy upside down.
- Fit the lower canopy onto the upper canopy, as shown.
- Insert ten screws and tighten with a Phillips screwdriver. Do not over-tighten.

 17

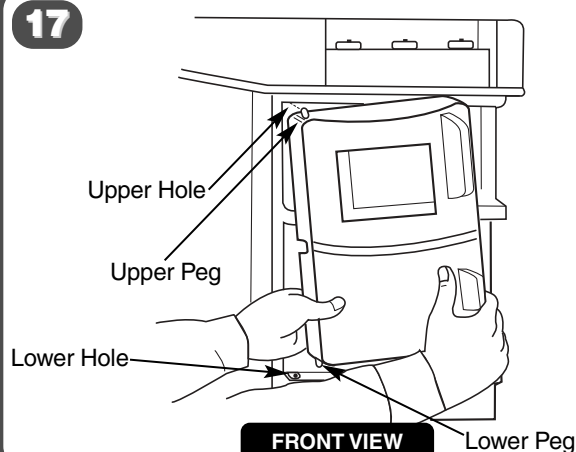


- Insert the upper peg on the oven door into the upper hole in the oven.
- Slide the lower peg on the oven door into the lower hole in the oven.

 16

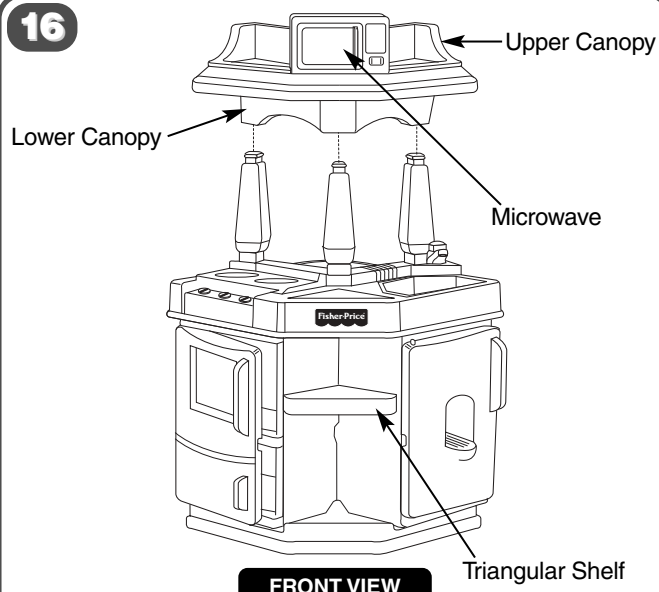


- Turn the canopy assembly upright so that the microwave oven faces you.
- Fit the canopy onto the canopy supports, making sure the microwave oven is over the triangular shelf.
- Push down on the canopy until it snaps into place.

 18

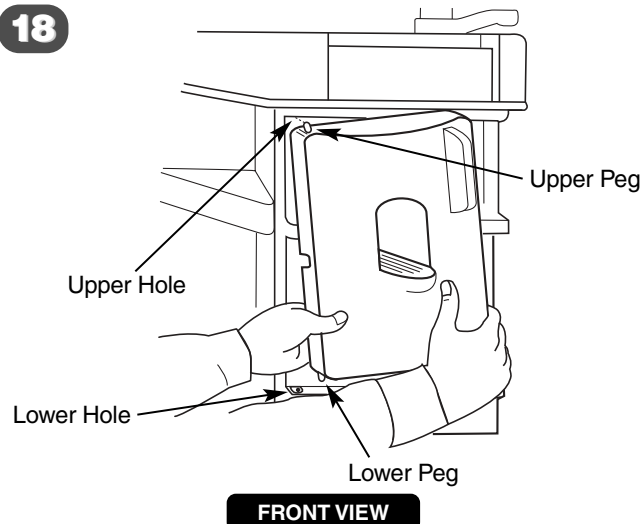


- Insert the upper peg on the refrigerator door into the upper hole in the refrigerator.
- Slide the lower peg on the refrigerator door into the lower hole in the refrigerator.

## Label Decoration

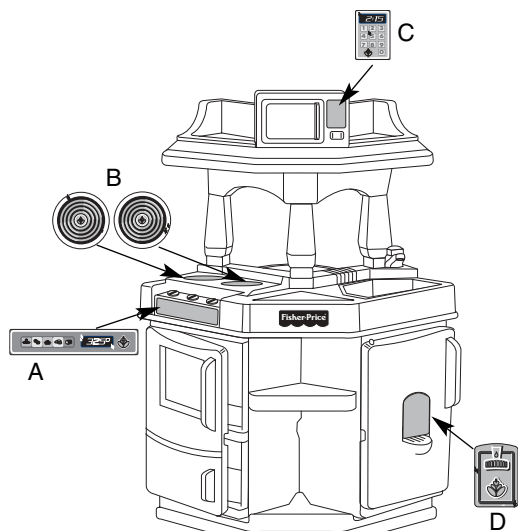 

FRONT VIEW

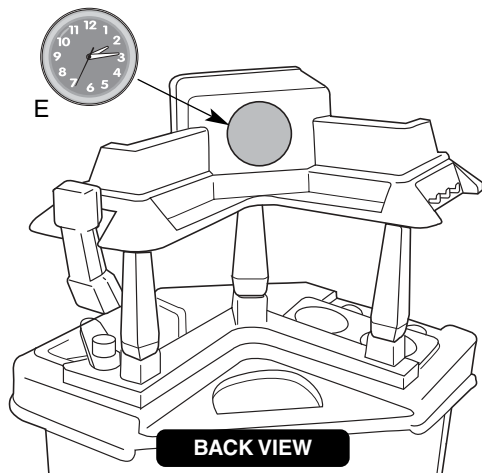 

BACK VIEW

- Make sure the areas where the labels will be applied are clean and dry. Wash your hands before applying the labels.
- Apply the labels as shown in the illustrations.
- Apply the top corners of a label first and smooth downward to remove air bubbles.
- For best results, avoid repositioning a label once it has been applied.

## Adding Accessories

- Place the telephone on the holder on the canopy.
- Hang the spatula, the slotted spoon, the flipper and the ladle on the canopy hooks.
- Before using the cooking and eating utensils, hand wash them in hot, soapy water.

## Maintenance

- Periodically check the All-In-One Kitchen™ Center for loose screws, and tighten as needed. Check plastic parts on a regular basis for cracks or broken pieces.



### Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 5 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

If you have any questions about this product:

**In Canada**, call **1-800-567-7724**, or write to: Mattel Canada Inc, 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

**In Great Britain**, telephone 01629 500302.

**In Australia**, Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1-800-800-812 (valid only in Australia).

[www.fisher-price.com](http://www.fisher-price.com)

Fisher Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©1999 Mattel, Inc. All Rights Reserved.

® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in U.S.A

6

72108c-0920