


Fisher-Price®

All-In-One Kitchen Center™

Please keep these instructions for future reference.
Tool needed for assembly: Phillips screwdriver.

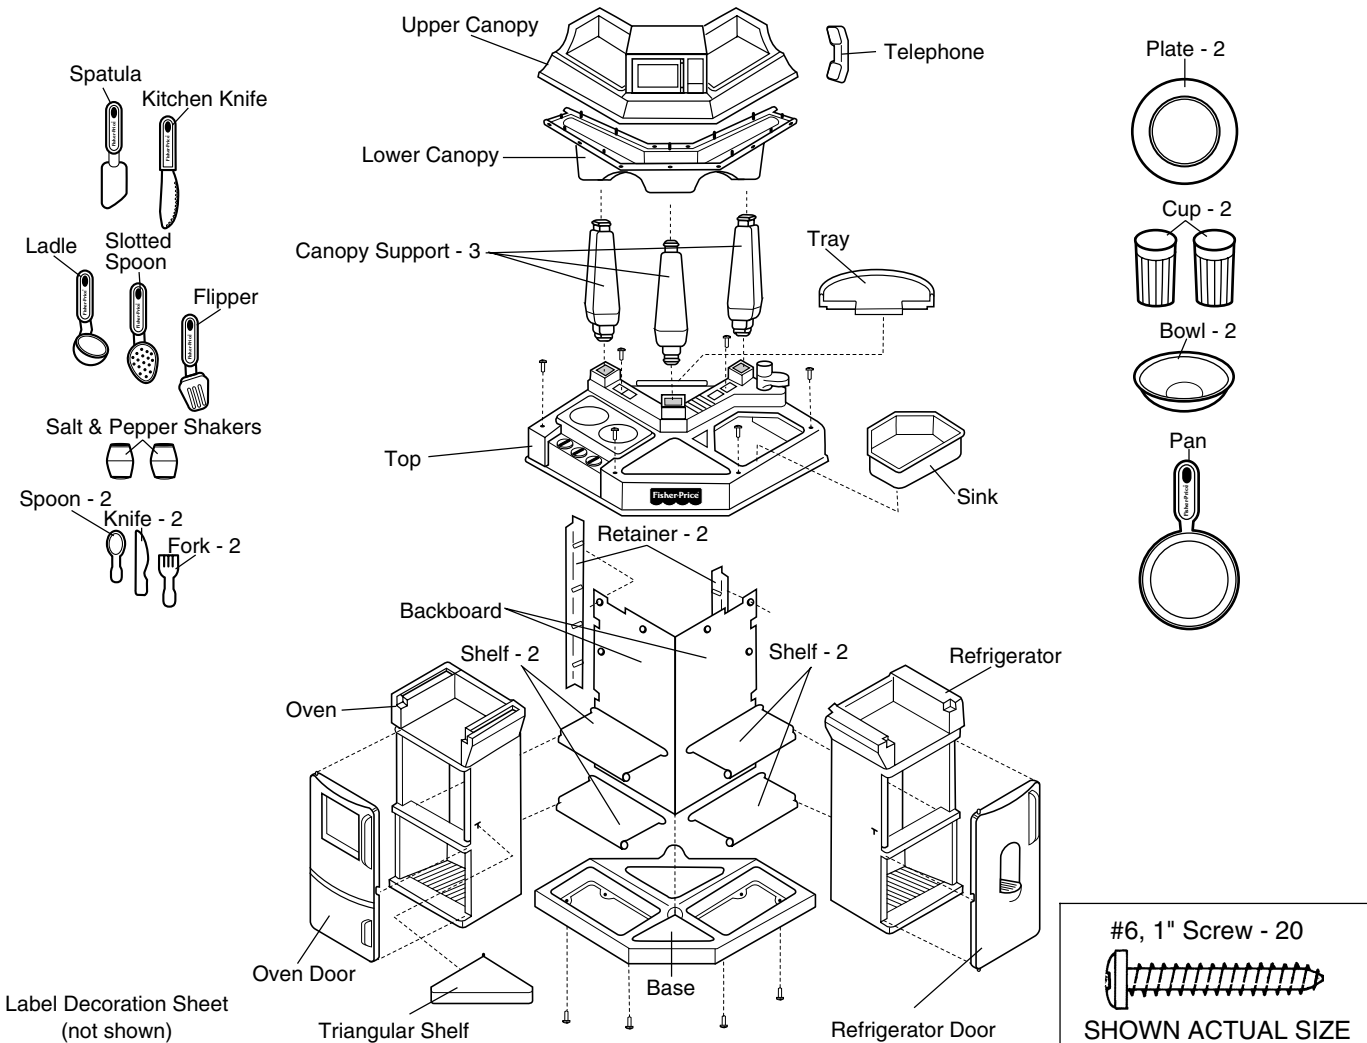


- Before assembly, wipe each plastic part with a damp cloth to remove any debris.
- Save all packaging material until assembly is complete to ensure that parts are not discarded.

CAUTION

Please keep small parts, hardware and plastic bags out of children's reach.


Assembly

1

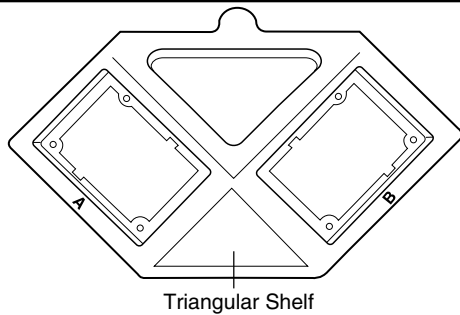


- Place the base on a flat surface so that the triangular shelf faces you.
- Take note of the letter (A or B) next to each rectangular opening.

2

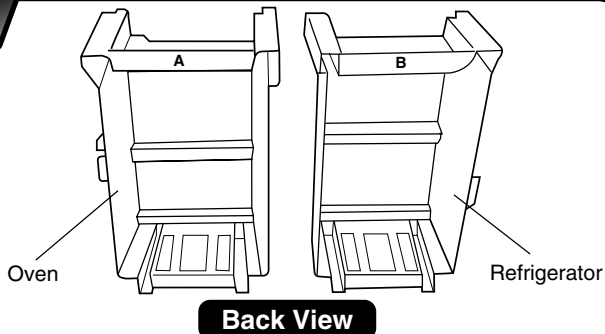


- Turn the oven and refrigerator around so that the backs face you.
- Identify the oven (A) and the refrigerator (B).

3

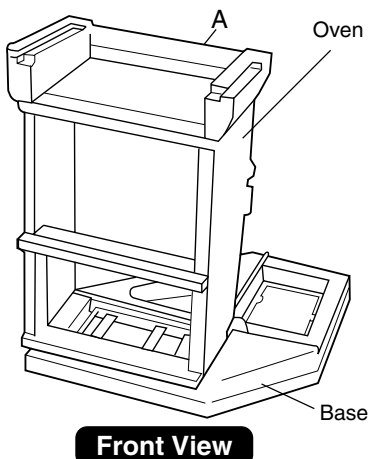


- Insert the oven (A) into the rectangular opening in the base (A).

4

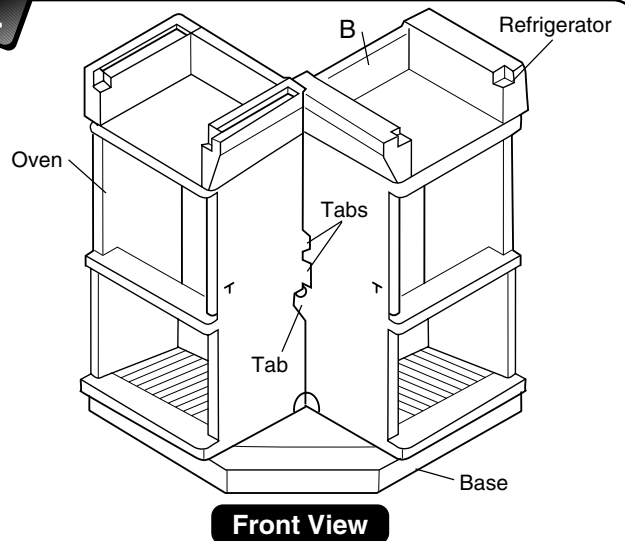


- Insert the refrigerator (B) into the rectangular opening in the base (B).
- Position the refrigerator and the oven so that the tab on the refrigerator is flat against the oven and the tabs on the oven are flat against the refrigerator.


5

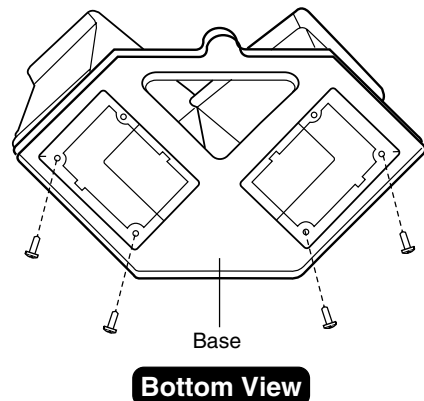


- Turn the base assembly upside down.
- Insert four screws and tighten with a Phillips screwdriver. Do not over-tighten.

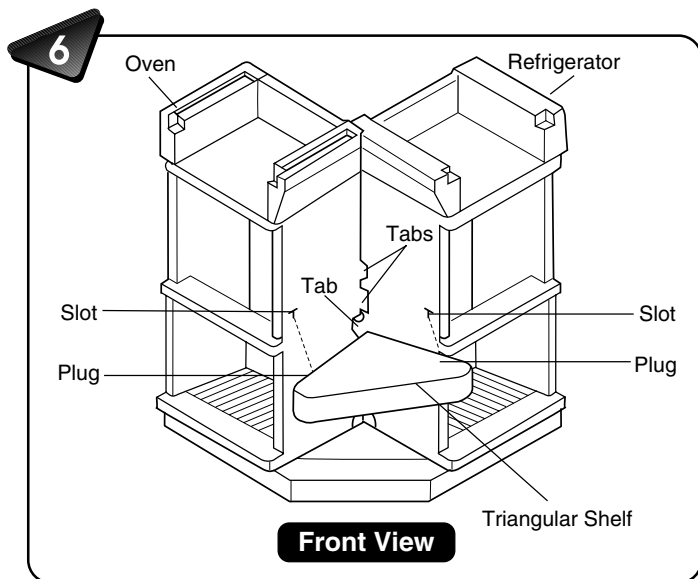

- Stand the base assembly upright.
- Insert the triangular shelf into the slots in the oven and refrigerator.
- Make sure the tab on the refrigerator is flat against the oven and the tabs on the oven are flat against the refrigerator.

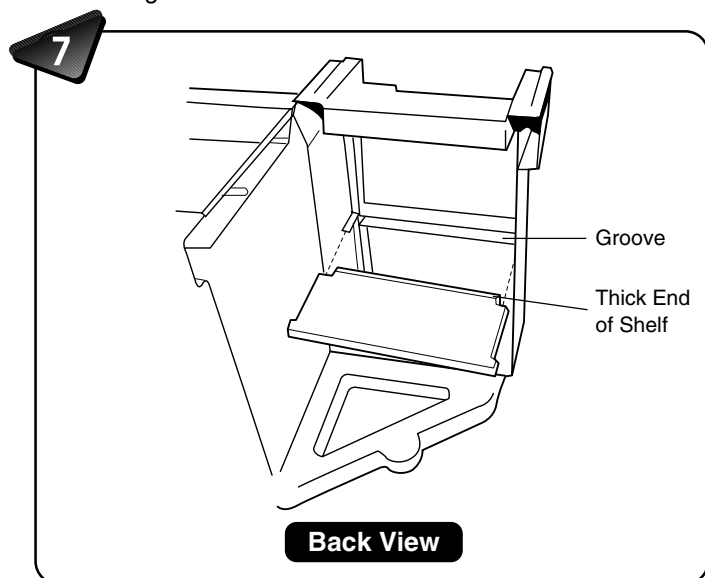


- Turn the base assembly so that the back faces you.
- Hold a shelf so that the thick end faces away from you.
- Insert the thick end of the shelf into a groove in the oven.
- Repeat this procedure to insert a shelf into the other groove in the oven, and the remaining two shelves into the grooves in the refrigerator.

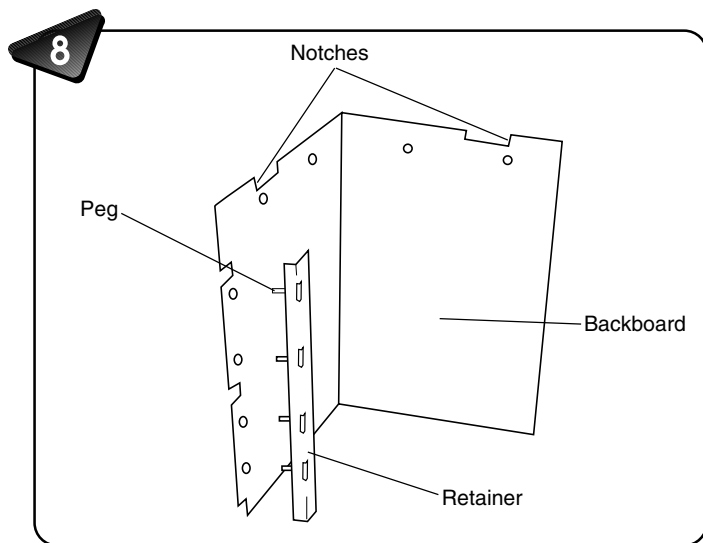


- Position the backboard so that the notches are upward.
- Insert the square and round pegs on a retainer into the corresponding holes in the backboard.
- Repeat this procedure to attach the other retainer to the backboard.

PLEASE NOTE: If the pegs on the retainer do not line-up with the holes in the backboard, turn the backboard around, so that you are looking at the opposite side. Re-crease the backboard in the middle and attach the retainers.

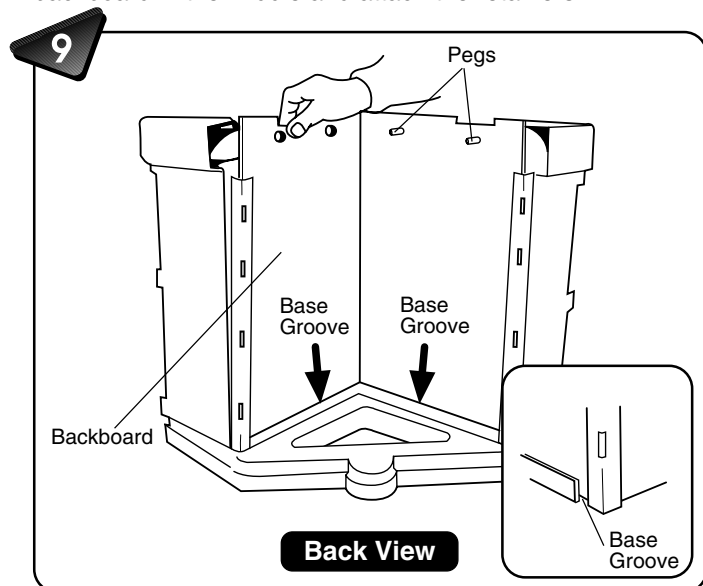


- Insert the backboard into the base groove, as shown.
- Insert the four pegs on the back of the oven and refrigerator into the holes in the backboard.

10

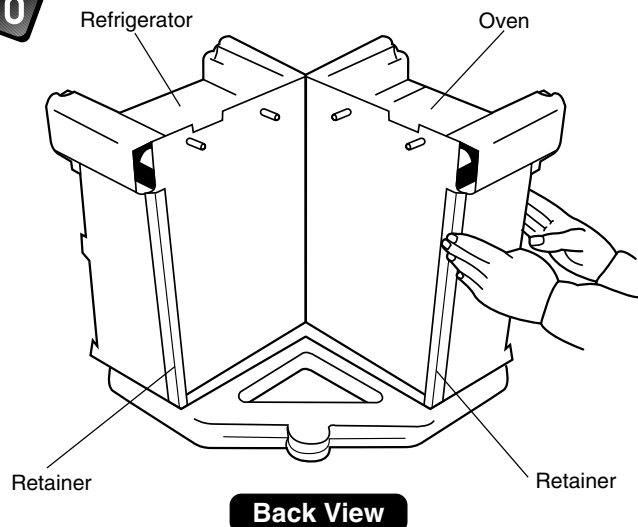


- Snap the retainer onto the oven.
- Snap the retainer onto the refrigerator.

11

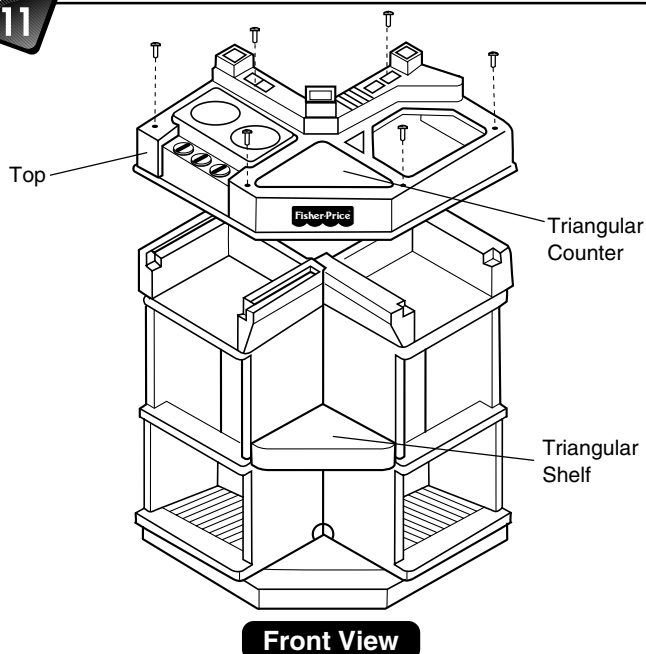


- Turn the base assembly so that the front faces you.
- Fit the top onto the base assembly so that the triangular counter is over the triangular shelf.
- Push the top down firmly.
- Insert six screws and tighten with a Phillips screwdriver. Do not over-tighten.

12

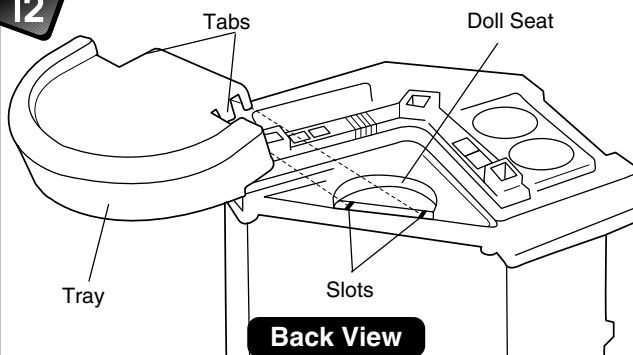


- Turn the base assembly so that the back faces you.
- Align the tabs on the tray with the slots on the bar in front of the doll seat.
- Snap the tray into place on the bar.

13

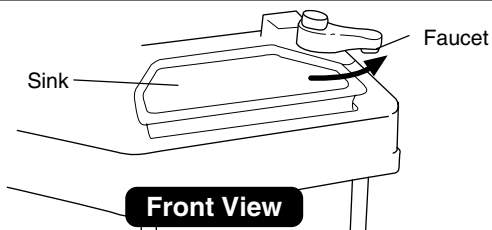


- Turn the assembly so that the front faces you.
- Turn the faucet to the right, completely away from the sink opening.
- Fit the sink into the opening on top of the refrigerator.
- Center the faucet over the sink.

14

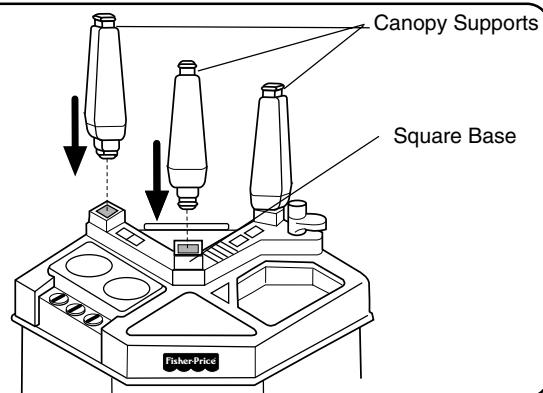


- Insert a canopy support, wide end down, into a square base.
- Press down to snap the canopy support into place.
- Repeat this procedure to attach the other two canopy supports.

15

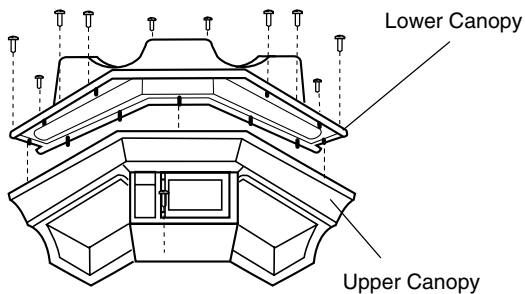


- Turn the upper canopy upside down.
- Fit the lower canopy onto the upper canopy, as shown.
- Insert the ten screws and tighten with a Phillips screwdriver. Do not over-tighten.

16

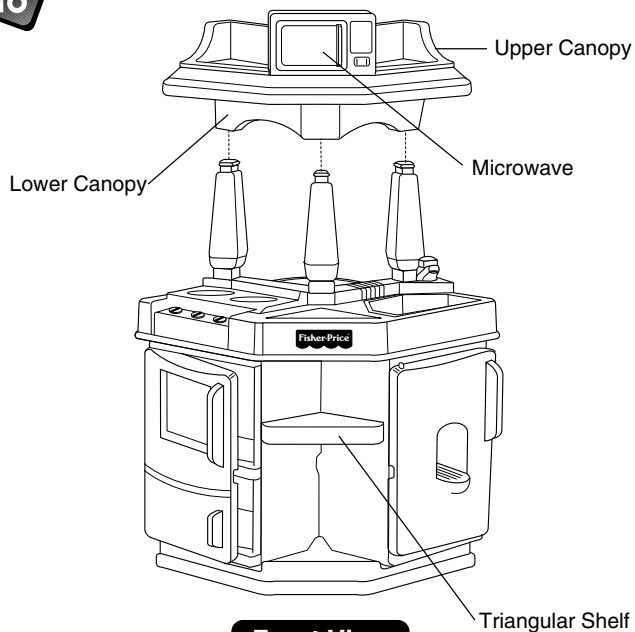**Front View**


- Turn the canopy upright so that the microwave oven faces you.
- Fit the canopy onto the canopy supports, making sure the microwave oven is over the triangular shelf.
- Push down on the canopy until it snaps into place.

17

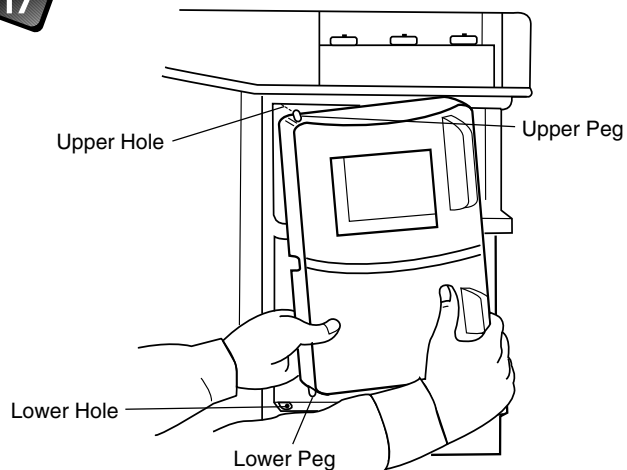**Front View**


- Insert the upper peg on the oven door into the upper hole in the oven.
- Slide the lower peg on the oven door into the lower hole in the oven.

18

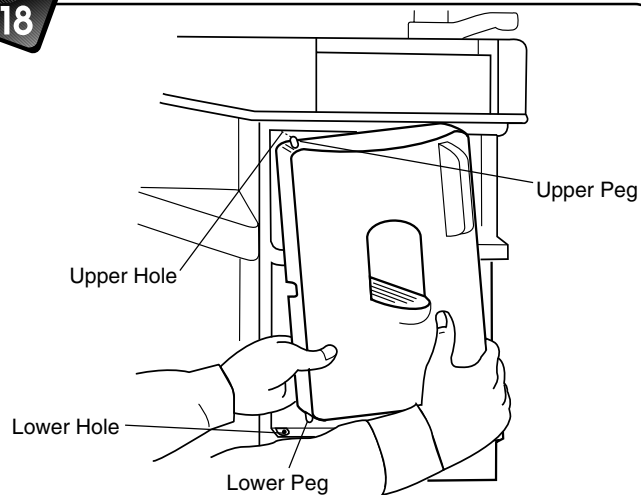**Front View**

- Insert the upper peg on the refrigerator door into the upper hole in the refrigerator.
- Slide the lower peg on the refrigerator door into the lower hole in the refrigerator.

Label Decoration

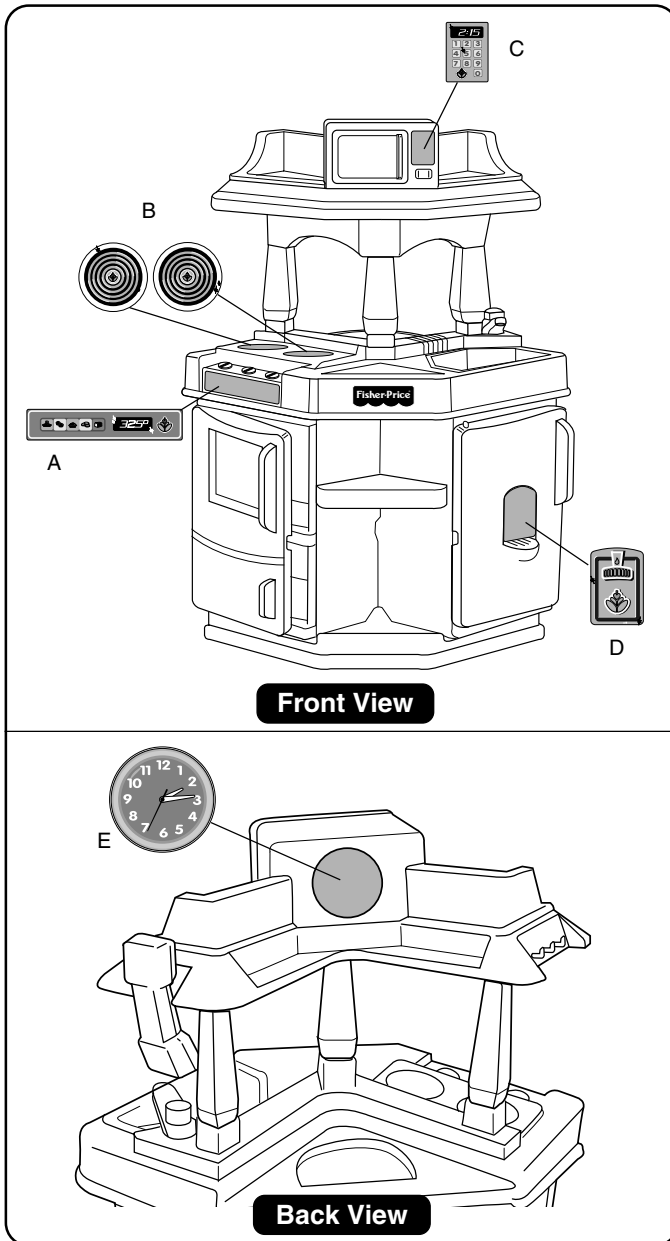

- Note where the label decorations should be applied, as shown in the illustrations.
- Make sure the areas where the labels will be applied are clean and dry.
- Apply the top corners of the label first and smooth downward to remove air bubbles.
- For best adhesion, try to avoid applying the labels more than once.

Adding Accessories

- Place the telephone on the holder on the canopy.
- Hang the spatula, the slotted spoon, the flipper and the ladle on the canopy hooks.
- Before using the cooking and eating utensils, hand wash them in hot, soapy water.

Maintenance

- Periodically check the All-In-One Kitchen Center for loose screws, and tighten as needed.



Questions? We'd like to hear from you!

Call Fisher-Price Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

If you have any questions about this product:

In Canada, call **1-800-567-7724**, or write to: Mattel/Fisher-Price, 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

In Great Britain, telephone 01734 770488.

In Australia, call the Fisher-Price Australian Consumer Advisory Service toll-free at 1-800-800-812, or write to: Fisher-Price, Mattel Pty. Limited, 461 Plummer Street, Port Melbourne, Victoria 3207.