



Instructions

# Creative Coaster™

Model Number: 72690



**Please save these instructions for future reference.  
Adult assembly is required.  
No tools are necessary for assembly.**


If you have any questions, please call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price, Inc., Consumer Relations,  
636 Girard Avenue, East Aurora, New York 14052

[www.fisher-price.com](http://www.fisher-price.com)


# One-Time Assembly

1

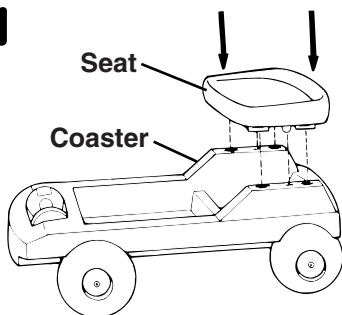

- Insert the four tabs on the seat into the four slots in the coaster.
- Press down on the seat until it “snaps” into place. Pull up on the seat to be sure it is secure.

2

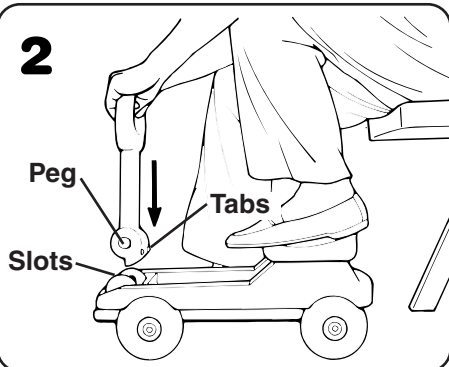


- While sitting in a chair, place your foot onto the seat.
- Hold the handle with two hands and position it so that the tabs face the seat.
- Align the pegs on either side of the handle with the slots in the front of the coaster.

**Hint:** One of the pegs and one of the slots are larger than the other.

- Press firmly downward on the handle until it snaps into place. Pull upon the handle to be sure it is secure.

3

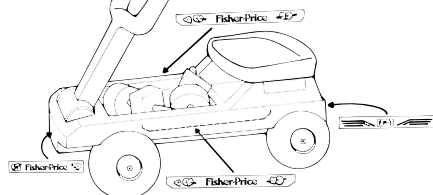

- Make sure the areas where the labels will be applied are clean and dry.
- Apply the labels as shown in the illustration.
- For best adhesion, try to avoid applying a label more than once.

## Care

To clean, wipe the surface of this toy with a damp cloth. Do not immerse this toy.