

# Fisher-Price®

Instructions  
Model Number 72722

## POWER CHANGE™

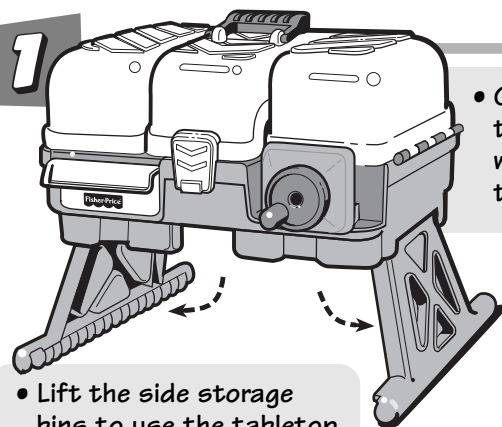
### Workshop®

Please keep these instructions  
for future reference.

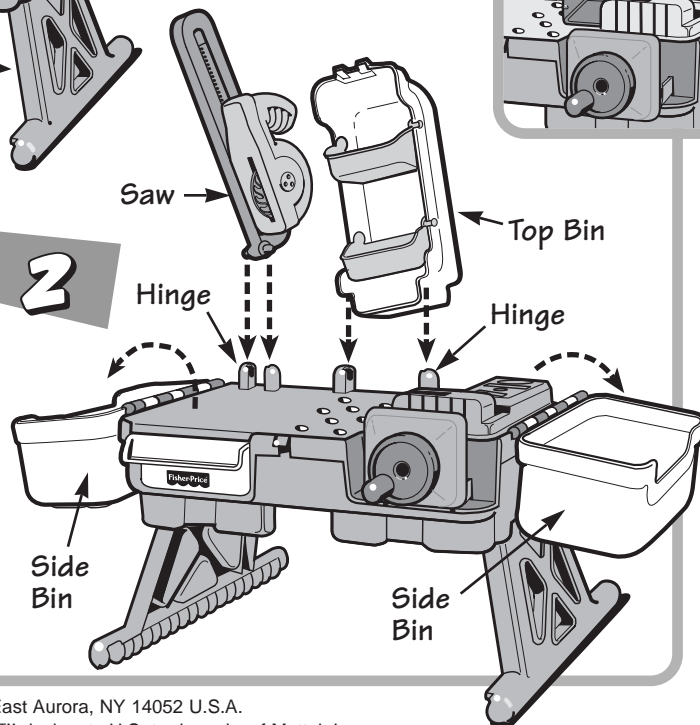
Adult assembly is required.

No tools needed for assembly.

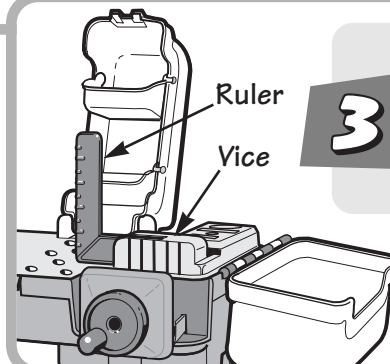


**1**

- Lift the side storage bins to use the tabletop.
- At an angle, fit one of the pegs on the saw into a hole in the hinge on the table top. Insert and snap the other peg on the saw into the other hole in the hinge.
- At angle, fit one of the pegs on the top bin into a hole in the hinge on the table top. Insert and snap the other peg on the top bin into the other hole in the hinge.

**2**

- Grasp the legs on the bottom of the workshop and pull them down and out.

**3**

- Fit the ruler in the vise to measure things!

**Questions?**

**We'd like to hear from you!**

Call Fisher-Price® Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM-5 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call **1-800-382-7470**. Or, write to: Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

If you have any questions about this product:  
**In Canada**, call 1-800-567-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.  
**In Great Britain**, telephone 01628 500303.  
**In Australia**, call the Fisher-Price Australian Consumer Advisory Service toll-free at 1-800-800-812, or write to: Mattel Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond Victoria, 3121 Australia.

**www.fisher-price.com**