

Fisher-Price®

Instructions

2-in-1 RC Truck™

Product Number 72824



Please keep these instructions for future reference.

Adult assembly is required to install batteries.

Requires four size "AA" (LR6) alkaline batteries (not included) in the truck.

Requires one 9-volt (6LR61) alkaline battery (not included) in the transmitter.

Tool needed for battery installation: Phillips Screwdriver.

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Affairs, toll-free at **1-800-432-KIDS**, 8 AM-5 PM EST Monday through Friday.

Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to:

Fisher-Price® Consumer Affairs, 636 Girard Avenue, East Aurora, New York 14052.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, NY 14052 U.S.A.

©1999 Mattel, Inc. All Rights Reserved. © and ™ designate U.S. trademarks of Mattel, Inc.

IMPORTANT!

 
Radio interference can occur if more than one radio control vehicle or another radio device is operating on the same frequency. Radio interference can also occur near high voltage electrical wires, reinforced concrete buildings or trucks with CB radios.

Radio interference can cause this product to work erratically. For best performance, do not operate this toy near other radio devices (such as nursery monitors, cordless telephones or other radio control vehicles on the same frequency) and away from high voltage power lines, large buildings and walls.

Transmitter operates on a 27.145 MHz carrier radio frequency. The output power is 10,000 uV/M @3m which is equivalent to 80dBuV/M.

Battery Installation

Hint: The 9-volt (6LR61) battery in the transmitter has a longer life than the "AA" (LR6) batteries in the truck. You may need to change the "AA" batteries more often than the 9-volt battery.

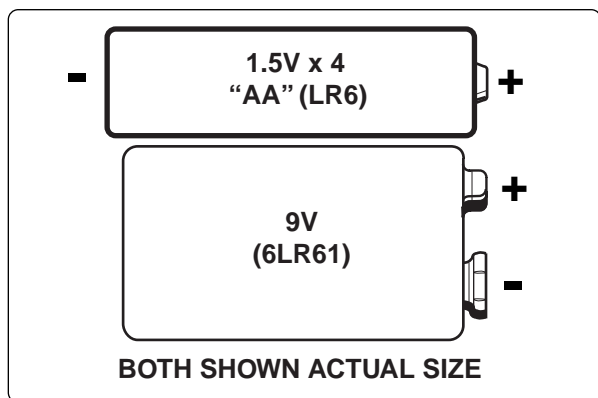

Battery Tips

 
- Do not mix old and new batteries.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Never short circuit the battery terminals.

Battery Installation

- Non-rechargeable batteries are not to be recharged.
- Only batteries of the same or equivalent type as recommended in the "Battery Installation" instructions are to be used.
- If removable rechargeable batteries are used, they are only to be charged under adult supervision.
- Rechargeable batteries are to be removed from the product before they are charged.
- If you use a battery charger, it should be examined regularly for damage to the cord, plug, enclosure and other parts. Do not use a damaged battery charger until it has been properly repaired.


Truck Batteries

- Turn the truck upside down.
- Loosen the screw in the battery compartment door with a Phillips screwdriver.
- Remove the battery compartment door.
- Insert four, size "AA" alkaline batteries, as indicated inside the battery compartment.
- Fit the tab on the battery compartment door into the slot in the battery compartment. Close the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

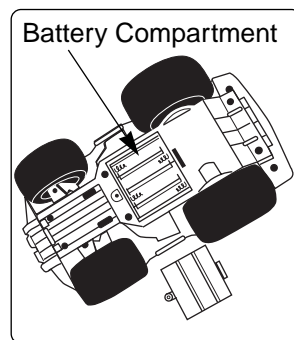


Transmitter Battery

 - Loosen the screw in the battery compartment door with a Phillips screwdriver.
- Open the battery compartment door.
- Snap a 9-volt battery to the battery contacts and insert it into the battery compartment.
- Close the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.

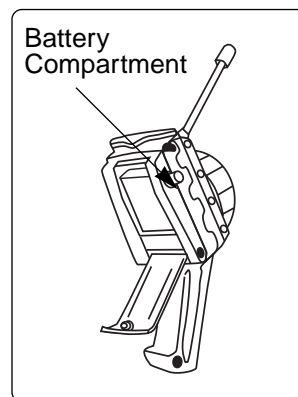


Truck Use

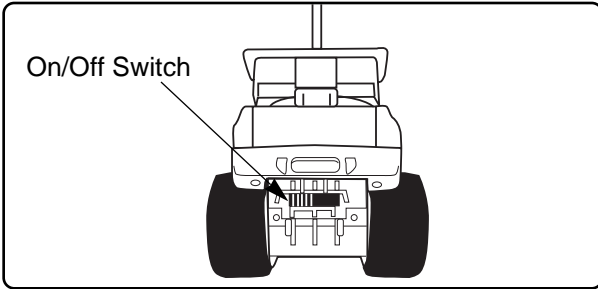 


- Slide the on/off switch to turn truck power on or off.

Hint: Truck power will turn off automatically after a few minutes of non-use. To turn truck power back on, slide the on/off switch to the on position.

 
Monster Truck - Low Speed

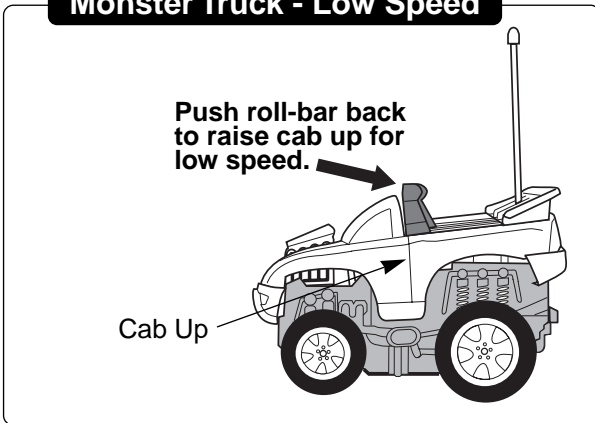

Racing Truck - High Speed

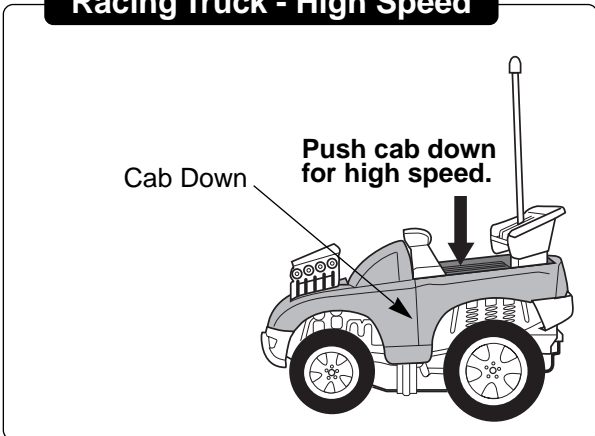 

Transmitter Use

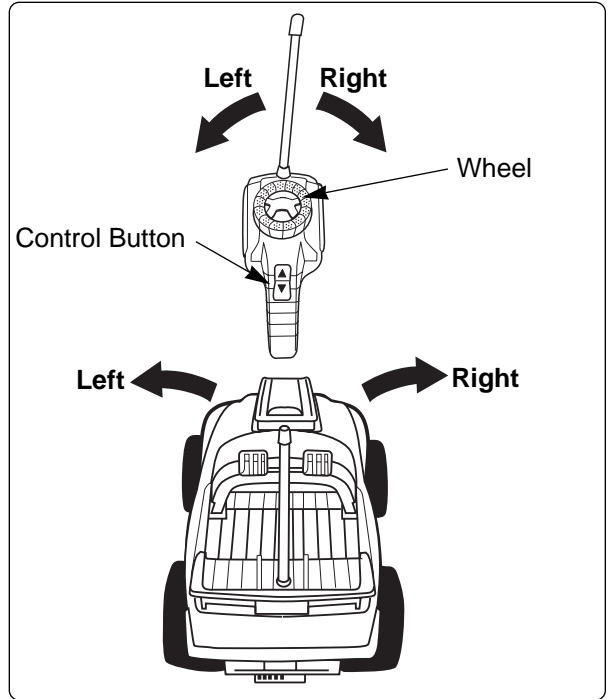 

- **FORWARD** - Push the top arrow on the transmitter control button.
- **REVERSE** - Push the bottom arrow on the transmitter control button.
- **STOP** - Release the transmitter control button.
- **LEFT** - Turn the transmitter wheel to the left.
- **STRAIGHT** - Keep the transmitter wheel straight.
- **RIGHT** - Turn the transmitter wheel to the right.

Good Driver Tips

- For maximum range, keep the transmitter antenna pointed up.
- Operate the truck in a dry, open area, away from any street or moving (motorized) vehicles.
- Avoid using this toy near sand and water. If moisture does get inside the truck or transmitter, remove the batteries and allow the units to dry for several hours before next use.
- Store your truck and transmitter inside after play, away from heat or direct sunlight.
- Do not carry the truck or transmitter by the antenna.

Problems and Solutions

Problem	Cause	Solution
No power	<ul style="list-style-type: none"> Batteries installed incorrectly Dead batteries On/off switch in off position Dirty battery contacts 	<ul style="list-style-type: none"> Remove truck batteries and replace in correct orientation, as shown inside battery compartment. Check to be sure transmitter battery contacts are fully snapped. Replace truck batteries with four new "AA" alkaline batteries and/or transmitter battery with a new 9-volt battery. Slide on/off switch to turn power on. Clean battery terminals.
Truck goes slowly	<ul style="list-style-type: none"> Truck batteries weak 	<ul style="list-style-type: none"> Replace truck batteries with four new "AA" alkaline batteries.
Truck runs erratically	<ul style="list-style-type: none"> Interference Weak signal 	<ul style="list-style-type: none"> Change your location. Replace truck batteries with four new "AA" alkaline batteries and/or transmitter battery with a new 9-volt battery. Point transmitter antenna upward. Move transmitter closer to truck. Replace truck batteries with four new "AA" alkaline batteries and/or transmitter battery with a new 9-volt battery.
Poor steering control	<ul style="list-style-type: none"> Truck batteries weak Transmitter battery weak 	<ul style="list-style-type: none"> Replace truck batteries with four new "AA" alkaline batteries. Replace transmitter battery with a new 9-volt battery.

If you have any questions about this product: **In Canada**, call 1-800-567-7724, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2. **In Great Britain**, telephone 01628 500303. **In Australia**, call the Fisher-Price Australian Consumer Advisory Service toll-free at 1-800-800-812, or write to: Mattel Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond Victoria, 3121 Australia.

FCC Note (United States Only)

2-in-1 R/C Truck™

Model Number: 72824

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

Consumer Affairs Department, 636 Girard Avenue, East Aurora, New York 14052

This device generates and uses radio frequency, and if not used properly, may cause interference to radio and television reception. It has been tested and found to comply with the limits set by the FCC, which are designed to provide reasonable protection against such interference.

Caution: FCC Regulations state that changes or modifications to this product not expressly approved by the party responsible for compliance may void the user's authority to operate the equipment.

One (1) Year Limited Warranty

Fisher-Price, Inc., 636 Girard Avenue, East Aurora, New York 14052, warrants that the 2-in-1 RC Truck™ is free from all defects in material and workmanship when used under normal conditions for a period of one (1) year from the date of purchase.

Should the product fail to perform properly, we will repair or replace it at our option, free of charge. Purchaser is responsible for shipping the product to Fisher-Price Consumer Affairs at the address indicated above and for all associated freight and insurance cost. Fisher-Price, Inc., will bear the cost of shipping the repaired or replaced item to you. This warranty is void if the owner repairs or modifies the product. This warranty excludes any liability other than that expressly stated above including but not limited to any incidental or consequential damages.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH MAY VARY FROM STATE TO STATE.