


To the Rescue!

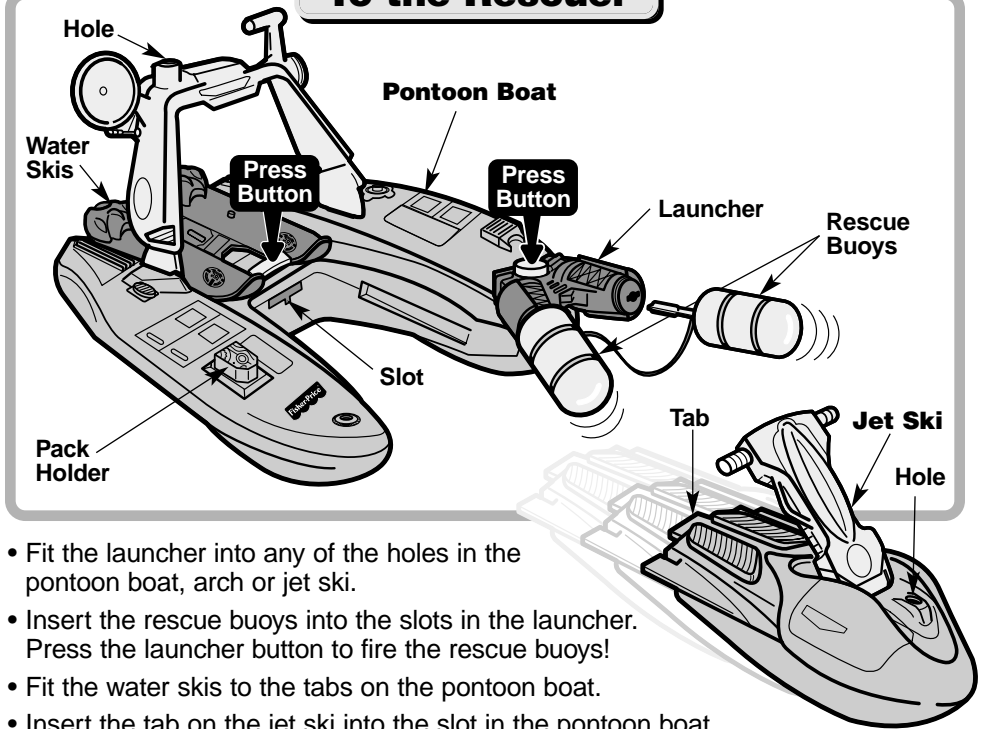

- Fit the launcher into any of the holes in the pontoon boat, arch or jet ski.
- Insert the rescue buoys into the slots in the launcher. Press the launcher button to fire the rescue buoys!
- Fit the water skis to the tabs on the pontoon boat.
- Insert the tab on the jet ski into the slot in the pontoon boat. Press the button on the pontoon boat to propel the jet ski!
- Fit any of the Rescue Heroes™ equipment packs (sold separately) to the pack holders.

Consumer Information

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**,
8 AM - 6 PM EST Monday through Friday.

Hearing-impaired consumers using TTY/TDD equipment,
please call 1-800-382-7470. Or, write to:

Fisher-Price® Consumer Relations
636 Girard Avenue
East Aurora, New York 14052

For other countries, outside the United States:

Canada: Call **1-800-567-7724**, or write to: Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

Great Britain: telephone 01628 500303.

Australia: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia.

Consumer Advisory Service 1300 135 312.

New Zealand: 16-18 William Pickering Drive, Albany 1331, Auckland.

Fisher-Price, Inc., a subsidiary of Mattel, Inc., East Aurora, New York 14052, U.S.A.

©2001 Mattel, Inc. All Rights Reserved.

® and ™ designate U.S. trademarks of Mattel, Inc.

Printed in China

72867b-0920



Quick Response™ Watercraft

Product Number: 72867



Figure sold separately.
This toy is not intended for use in water.



**Please save this instruction sheet for future reference,
as it contains important information.**

Adult assembly is required.


No tools needed for assembly.

www.rescueheroes.com

CAUTION



- Do not launch the rescue buoys at point blank range.
- Only use the projectiles (rescue buoys) supplied with this toy. Do not fire at people or animals.

Parts

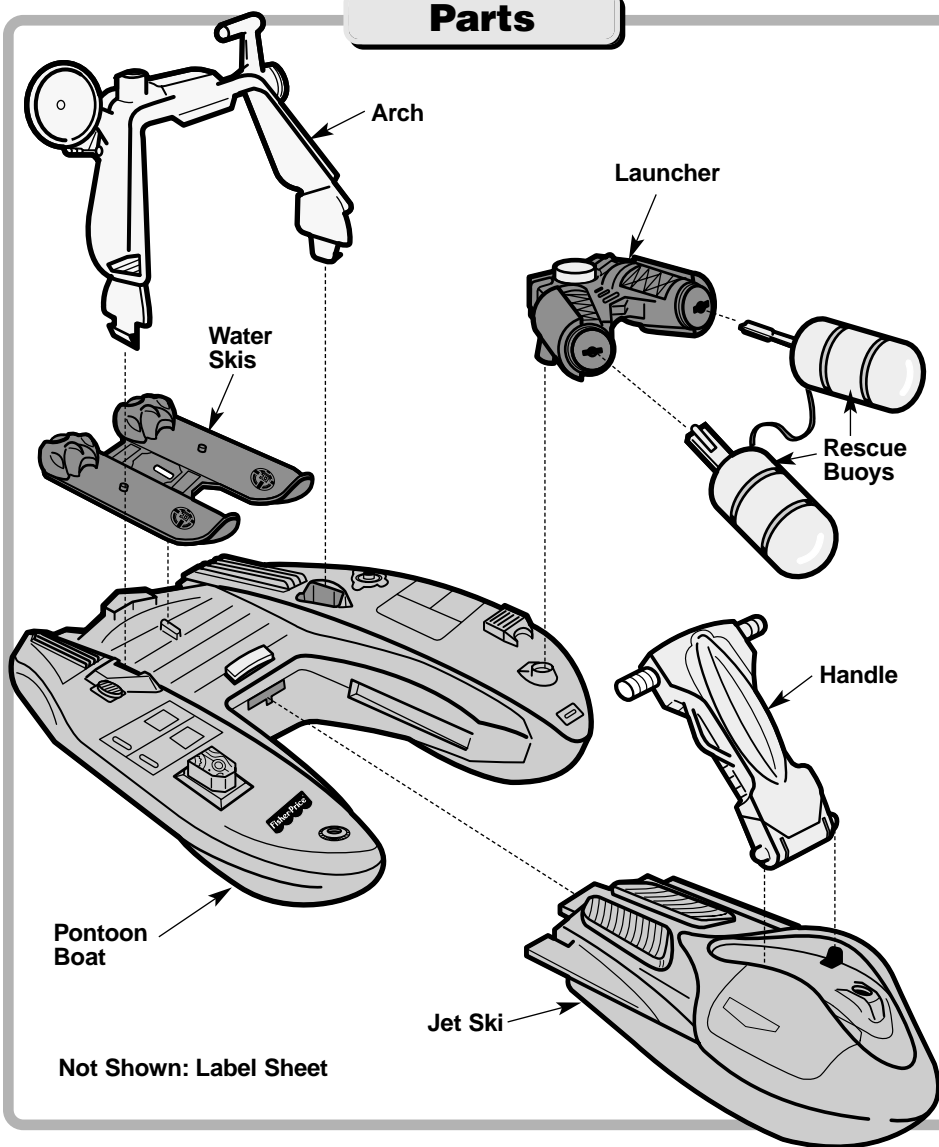


One-time Assembly

1

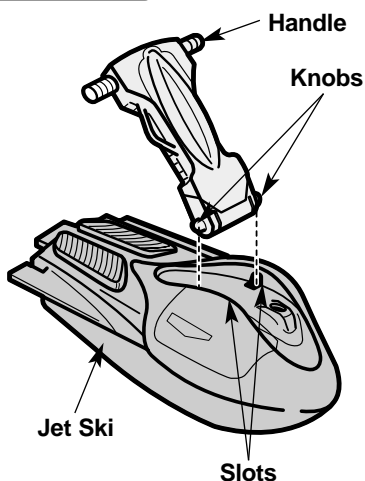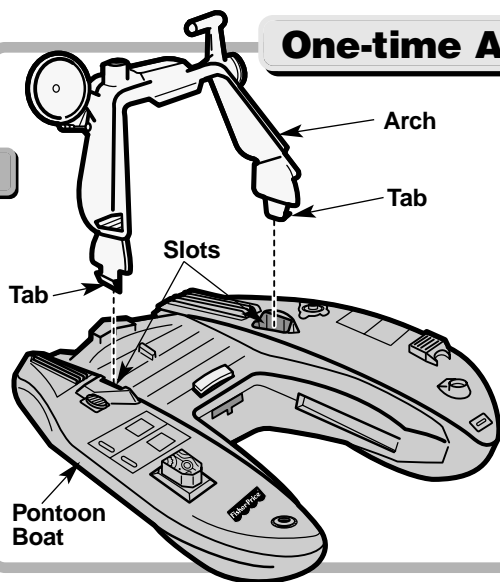

- Position the arch with the bend toward the back of the pontoon boat. Insert and snap the arch tabs into the slots in the pontoon boat.
- Position the handle with the smooth side toward the front of the jet ski. At an angle, fit a knob on the end of the handle into one of the slots in the jet ski. Snap the other knob on the end of the handle into the other slot in the jet ski.

2

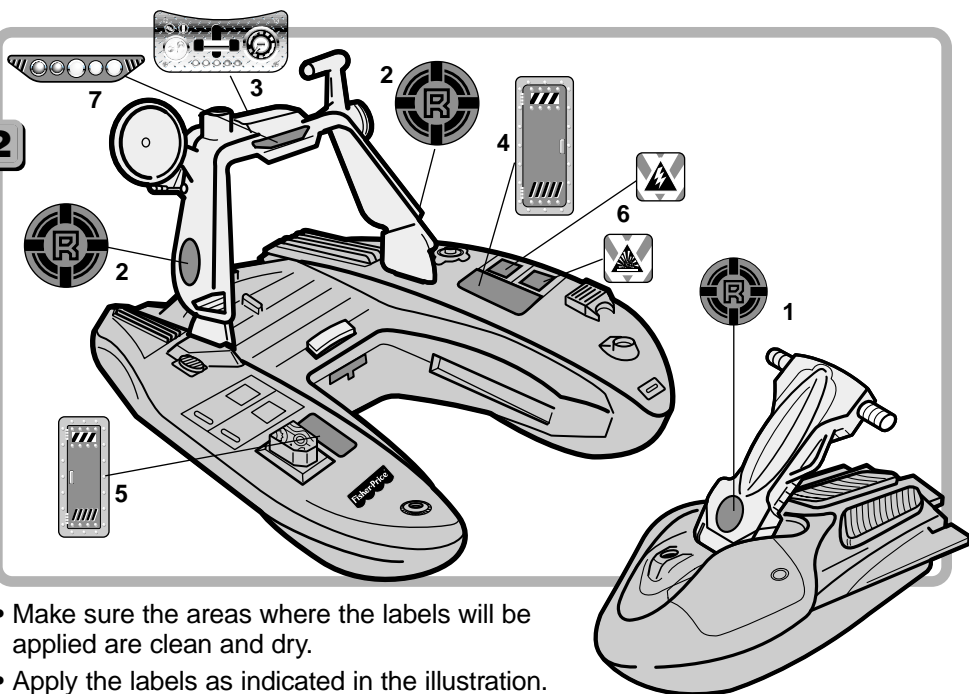

- Make sure the areas where the labels will be applied are clean and dry.
- Apply the labels as indicated in the illustration.
- For best results, avoid applying the labels more than once.

One-time assembly is now complete. 3