

Fisher-Price®

Instructions

Spiral Speedway

Product Number 72876



Product features may vary from the picture above.

Please save these instructions for future reference.


Adult assembly is required.

No tools are needed for assembly.

Message to Parents


Thank you for choosing Spiral Speedway. We hope your child enjoys the action as the cars race each other off the ramps and down the spiraling course to the checkered flag! The cars park in the base for easy storage and the handle makes Spiral Speedway a perfect take-along toy.

Label Application

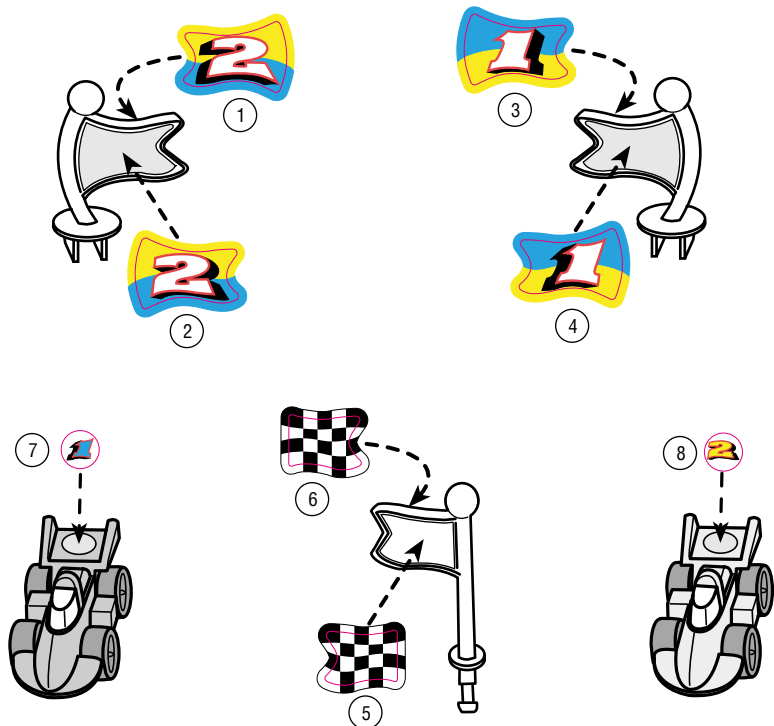

- Make sure the areas where the labels will be applied are clean and dry.
- Apply the labels as shown in the illustration above.
- For best adhesion, try to avoid applying the labels more than once.

Assembly and Use

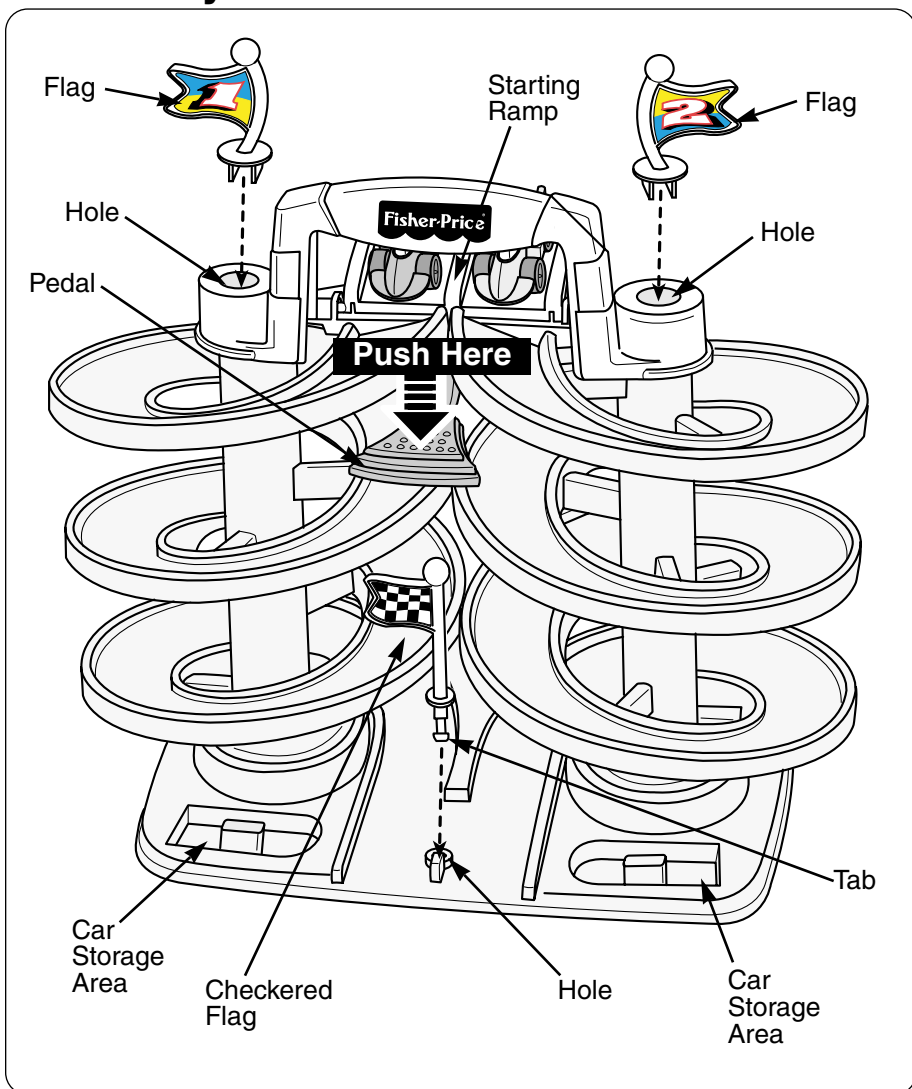

- Insert the flag poles into the holes at the top of each ramp.
- Align the tab on the checkered flag pole with the groove in the hole in the base and fit the flag pole into the hole.
- Place the cars on the starting ramp.
- Push down on the pedal to start the race.



Questions? We'd like to hear from you!

Call Fisher-Price Consumer Affairs, toll-free at **1-800-432-KIDS**,
8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers
using TTY/TDD equipment, please call 1-800-382-7470.

Or, write to: Fisher-Price Consumer Affairs, 636 Girard Avenue,
East Aurora, New York 14052.

If you have any questions about this product:

In Canada, call **1-800-567-7724**, or write to: Mattel/Fisher-Price, 6155 Freemont
Blvd., Mississauga, Ontario L5R 3W2.

In Great Britain, telephone 01734 770488.

In Australia, call the Fisher-Price Australian Consumer Advisory Service toll-free at
1-800-800-812, or write to: Fisher-Price, Mattel Pty. Limited, 461 Plummer Street,
Port Melbourne, Victoria 3207.