



Command Center™

Model Number 72955



Helicopter, Motorcycle, equipment packs and figures sold separately.


Please keep this instruction sheet for future reference, as it contains important information.
Adult assembly is required.

Requires three "AA" (LR6) **alkaline** batteries (not included).
Tool required for battery installation: Phillips Screwdriver (not included).

Fisher-Price®

www.rescueheroes.com

PARTS

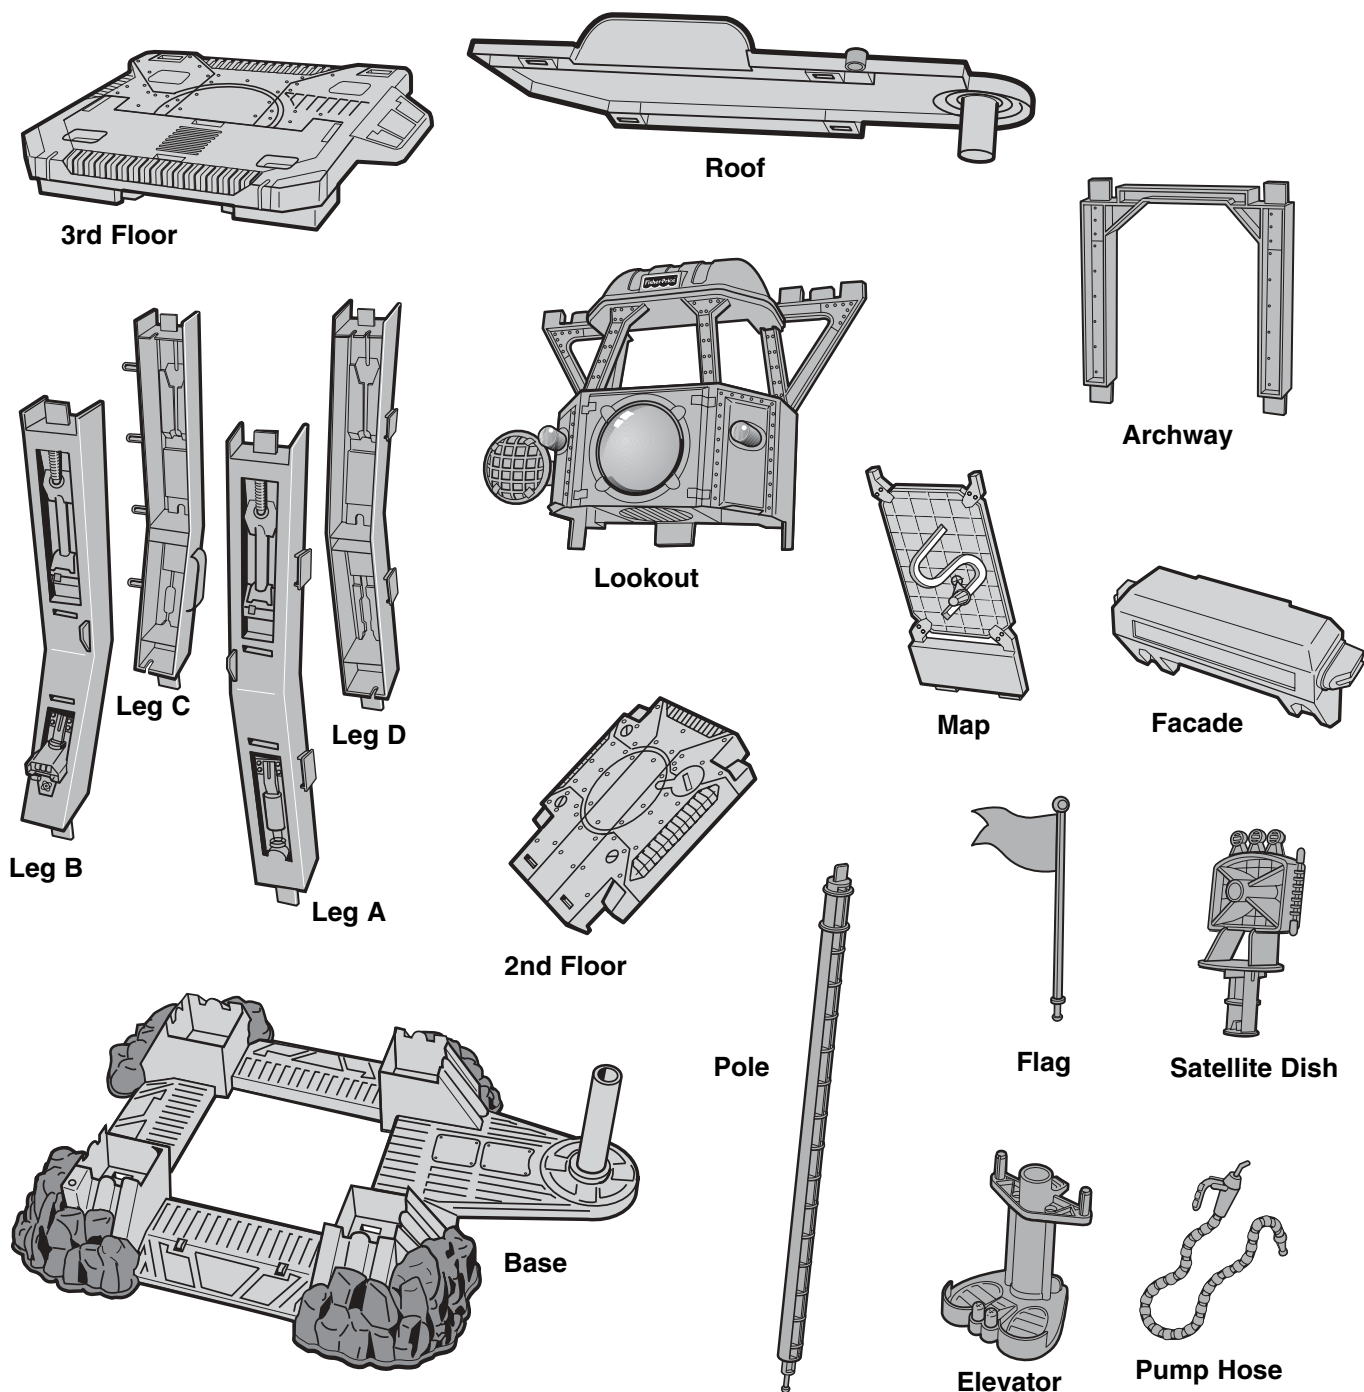



Part not shown: Label Sheet.

⚠ CAUTION

Please keep small parts and plastic bags away from children. Dispose of plastic bags properly.



LABEL DECORATION

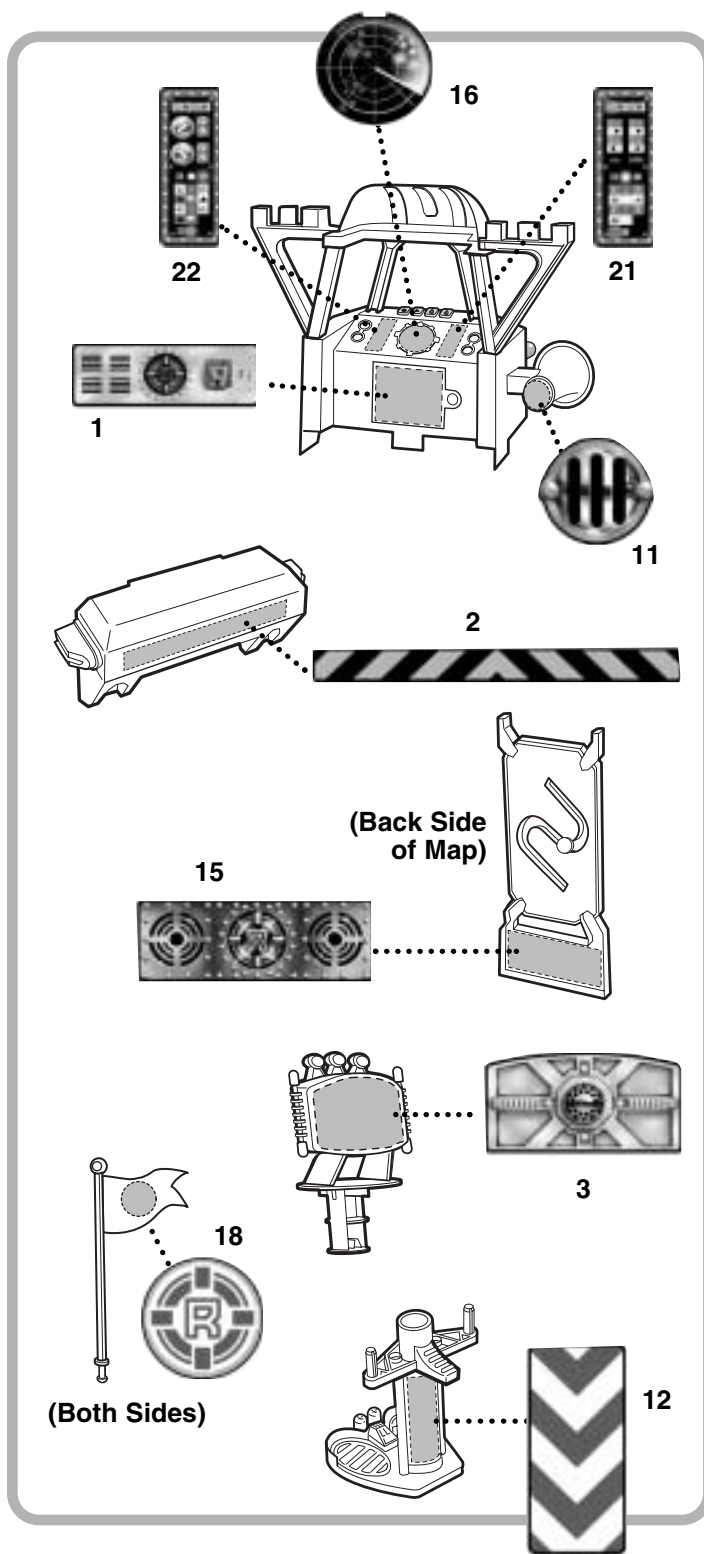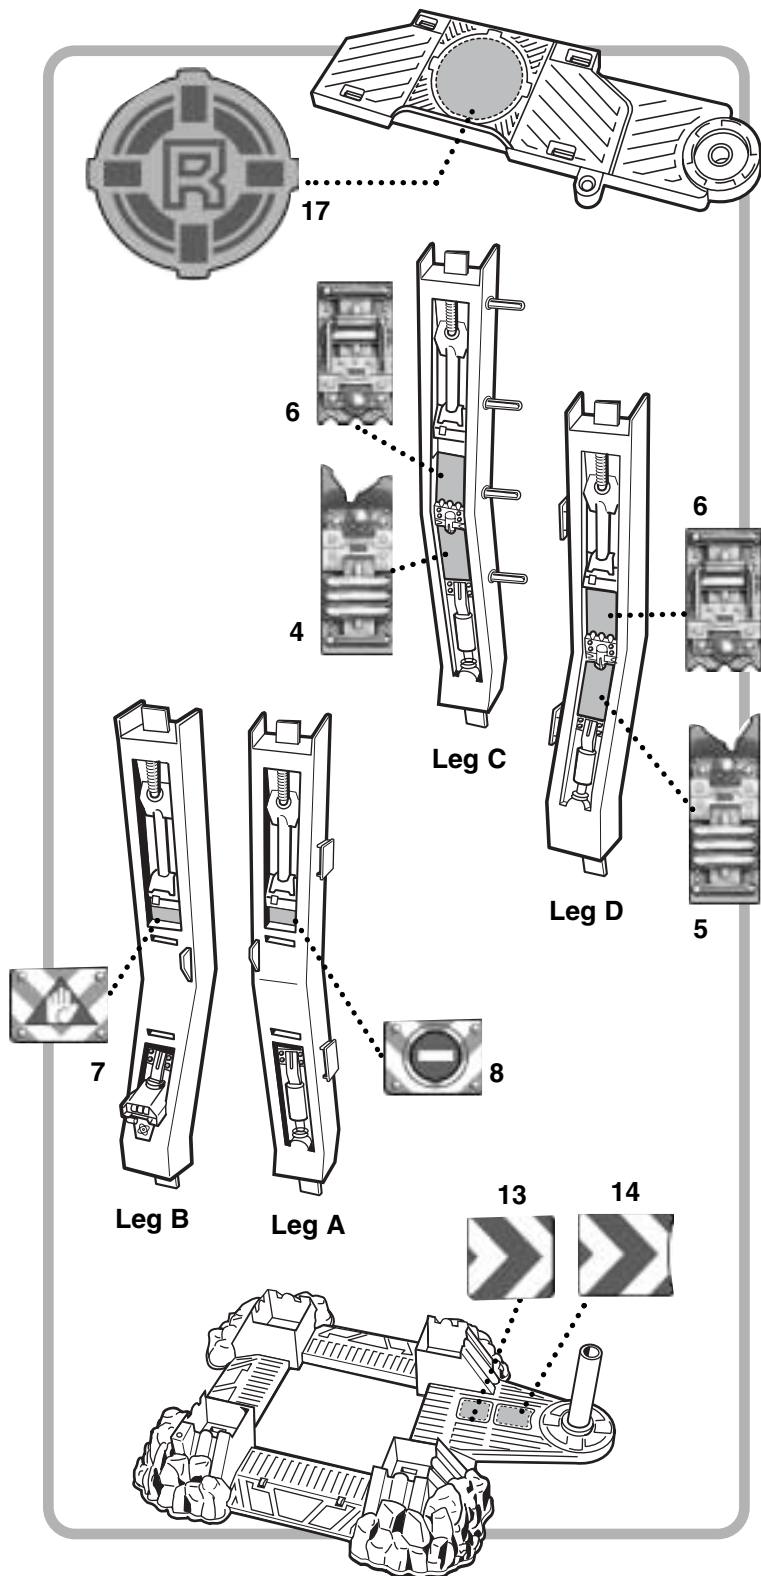


Proper label application will help to keep the labels looking their best.

- Wash your hands before applying the labels.
- Make sure the areas where the labels will be applied are clean and dry. Wipe this product with a clean, soft, dry cloth to remove any dust or oils.
- For best results, do not attempt to apply a label more than once.
- Apply the labels as shown in the illustration.

Note: Do not apply labels 9,10,19 and 20. These labels should be applied in assembly step 2, page 4.

BATTERY INSTALLATION

BUILDING THE COMMAND CENTER™

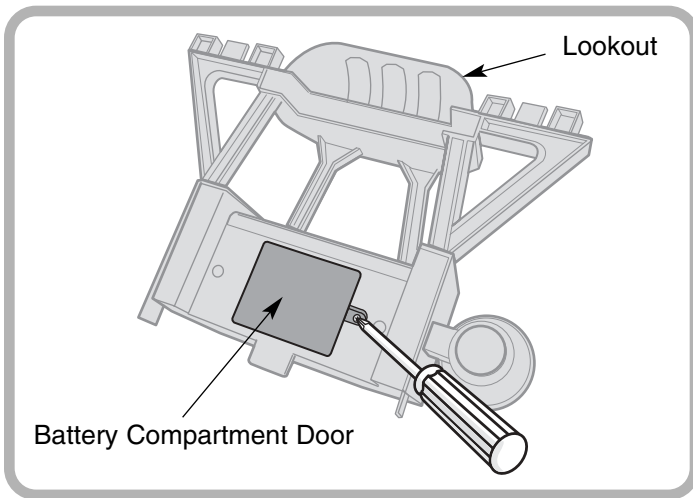


- Locate the battery compartment door on the inside of the lookout.
- Loosen the screw in the battery compartment door with a Phillips screwdriver. Remove the battery compartment door.
- Insert three “AA” (LR6) **alkaline** batteries.

Hint: We recommend using **alkaline** batteries for longer life.

- Replace the battery compartment door and tighten the screw with a Phillips screwdriver. Do not over-tighten.
- When lights or sounds from this toy become faint or stop, it's time for an adult to change the batteries!

SHOWN ACTUAL SIZE

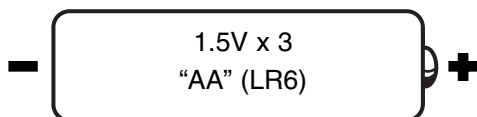


Battery Safety Information


Batteries may leak fluids that can cause a chemical burn injury or ruin your toy.

To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the toy. Dispose of batteries safely. Do not dispose of batteries in a fire. The batteries may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

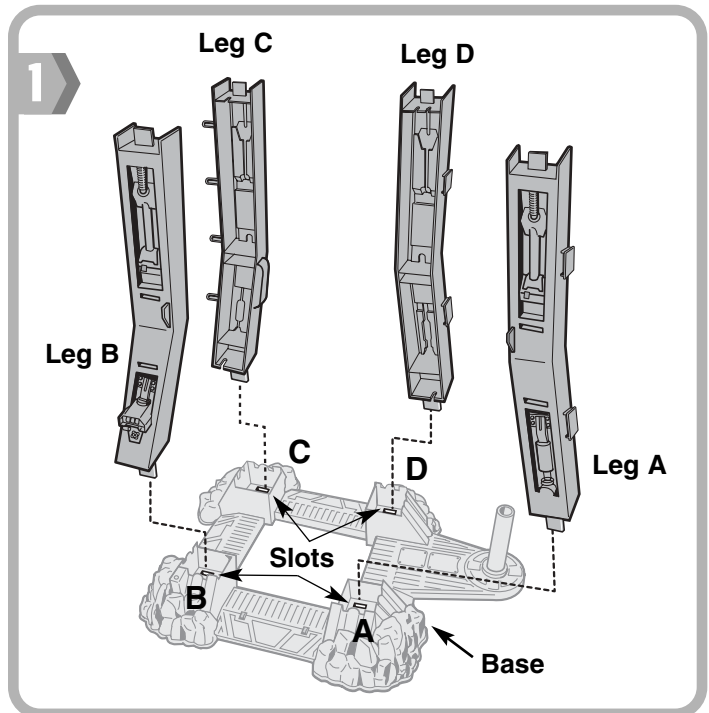


- Position the base on a flat surface.
- Note the A, B, C, and D markings on the legs and the slots in the base.
- Insert and “**snap**” leg A into the base slot marked A.
- Insert and “**snap**” leg B, leg C and leg D into the matching base slots marked B, C and D.
- Pull up on each leg to be sure each is secure in the base.

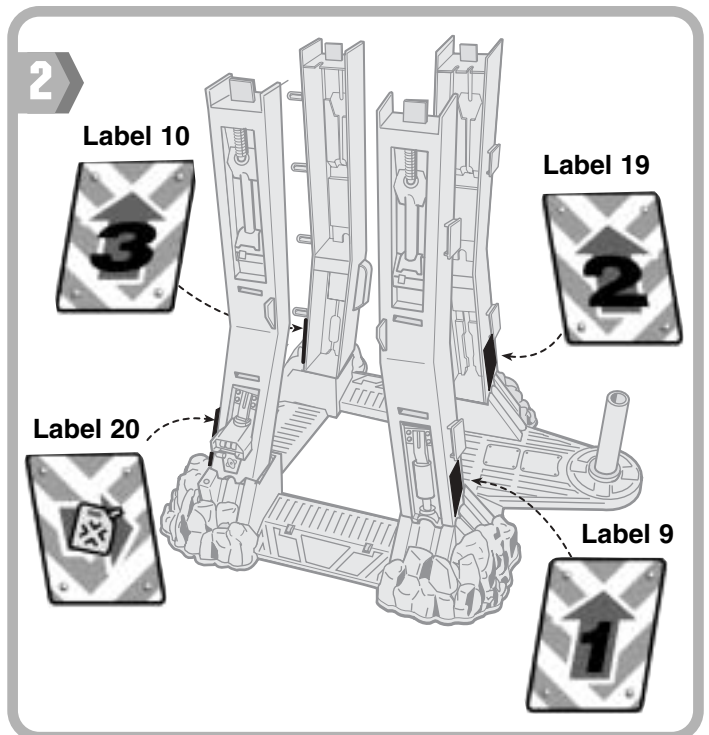

- Apply the labels as shown in the illustration.




BUILDING THE COMMAND CENTER™

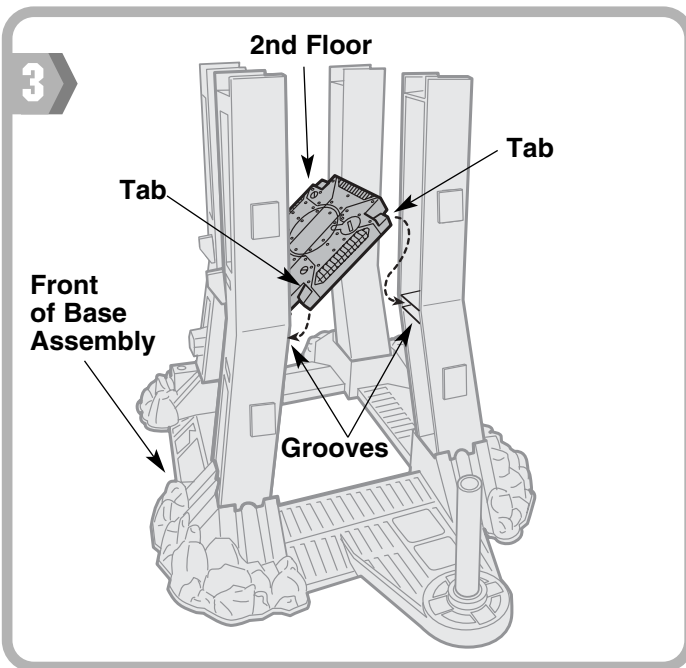


- Position the 2nd floor between the legs, so that the long ledge is toward the front of the base assembly.
- Fit each of the four tabs on the 2nd floor into the groove in each of the legs.


Hint: You will need to flex the legs apart slightly to fit the 2nd floor between the legs.

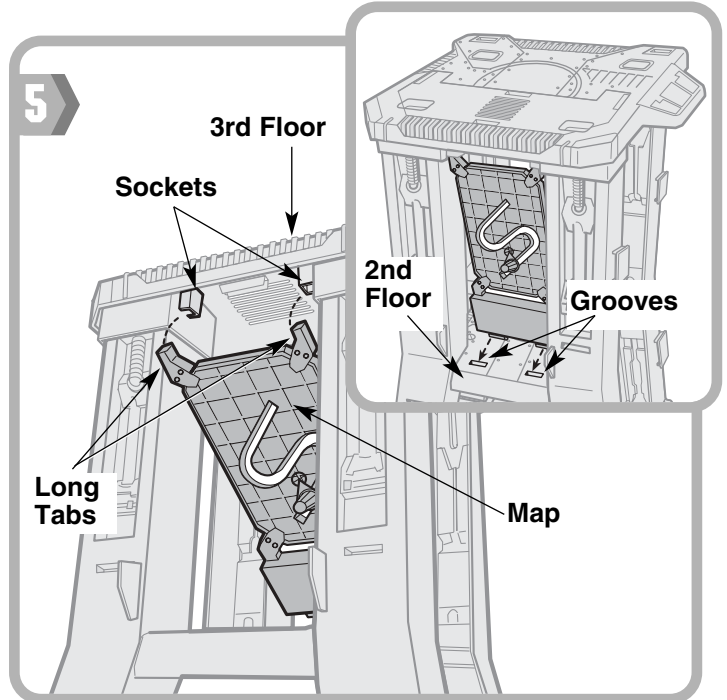


- Position the map so that the long tabs are upright.
- At an angle, insert the long tabs on the map into the sockets on the underside of the 3rd floor.
- Push the map forward to fit the short tabs into the grooves in the front end of the 2nd floor.

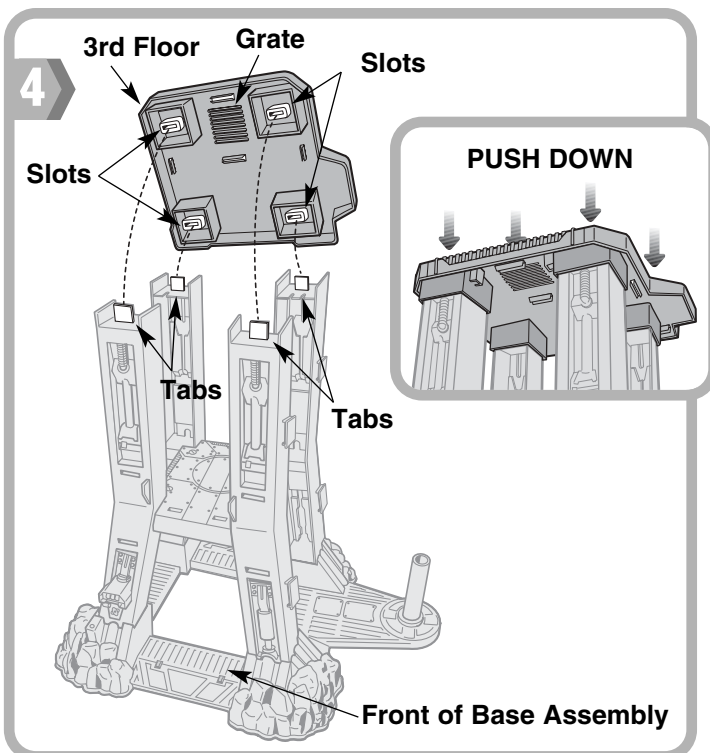


- Position the 3rd floor so that the grate faces the front of the base assembly.
- Fit the slots in the 3rd floor onto the tabs on the legs.
- Push down on the 3rd floor near each slot until you hear the four tabs “snap” into place.

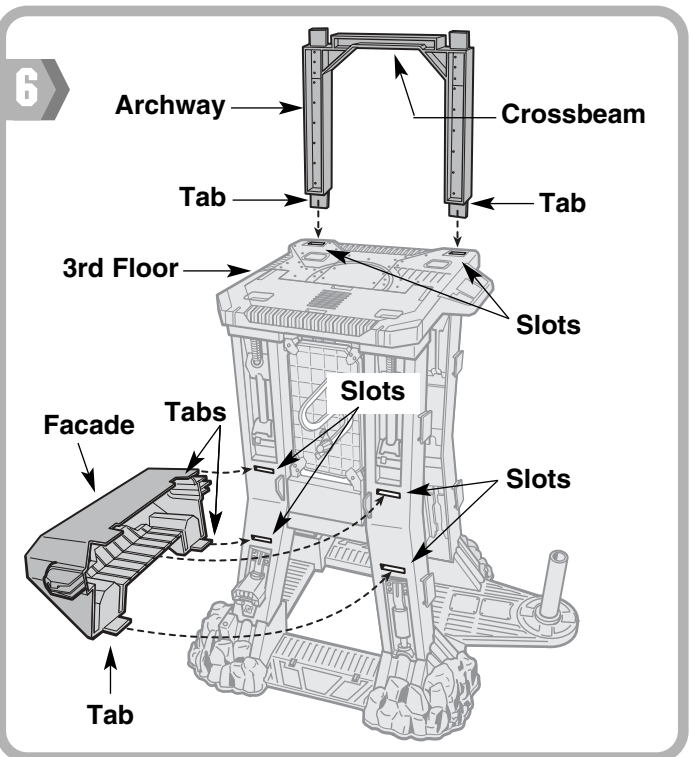

- Position the archway so that the crossbeam is upright. Fit the tabs on the archway into the slots in the 3rd floor.
- Position the facade so that the flat side is upright. Insert and “snap” the tabs on the facade into the slots in the front legs.

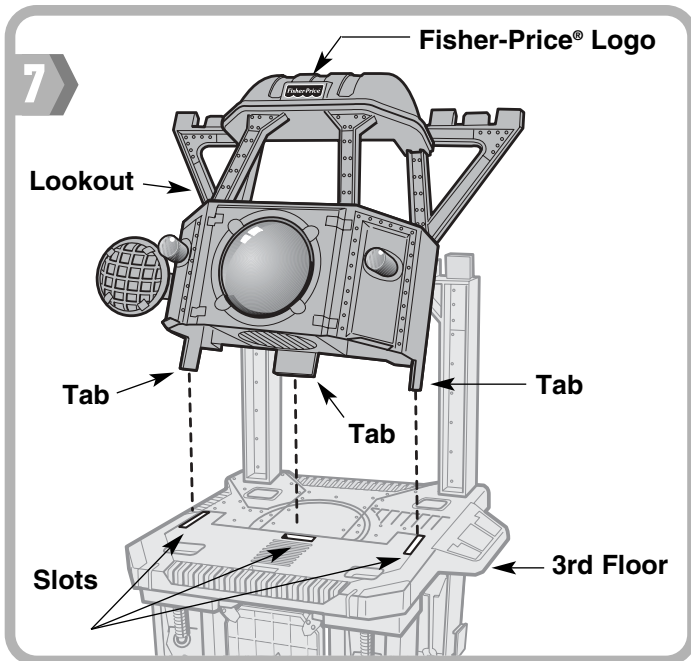


- Position the lookout with the Fisher-Price® logo outward.
- Insert and “**snap**” the tabs on the lookout into the slots in the 3rd floor.

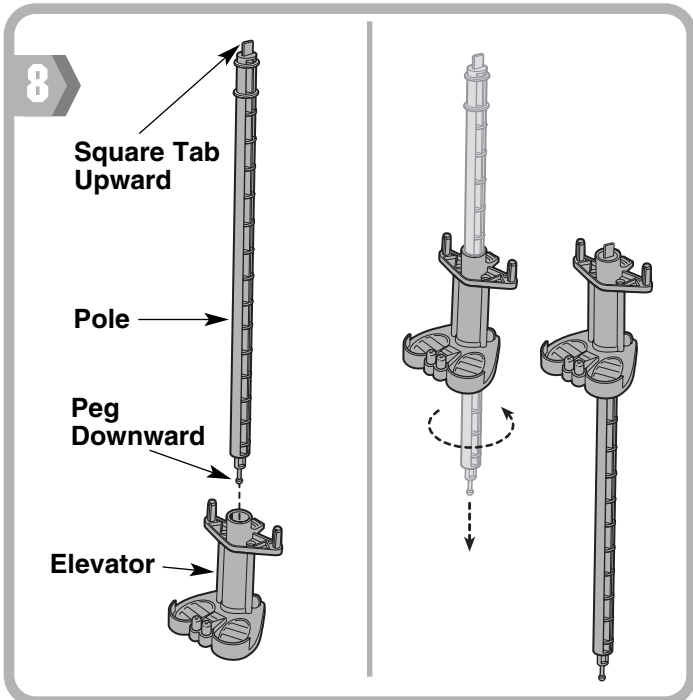


IMPORTANT! Please take care to follow the next two assembly steps 8 and 9 carefully. If you do not assemble the elevator correctly, you will not be able to take it apart and the toy will not function properly.

- Position the elevator **upright** on a flat surface.
- Position the pole so that the square tab is upward and the peg is downward.
- Fit the peg end of the pole into the opening in the elevator.
- Lift the elevator up so that the pole fully inserts into the elevator, as shown.

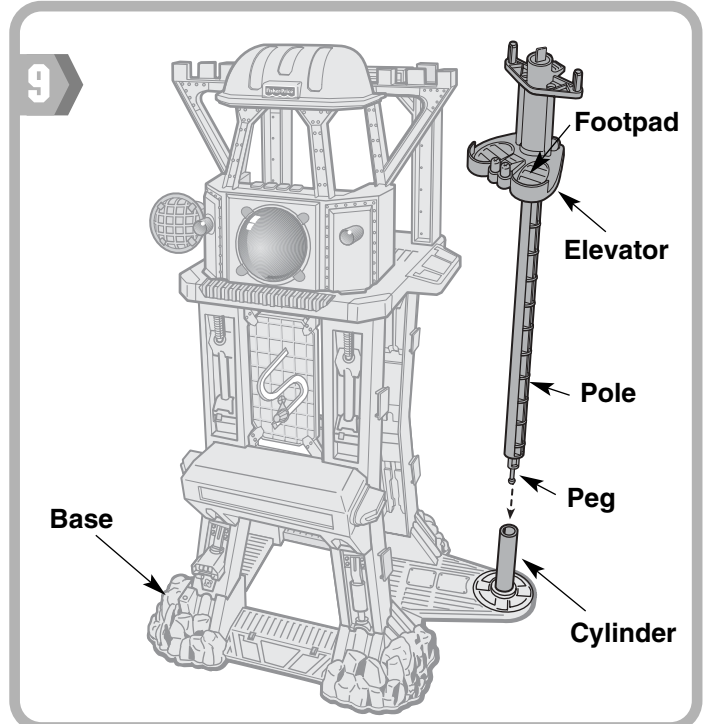

- **Make sure the elevator footpad is upright, as shown.**
- While holding the elevator at the top of the pole, insert and “**snap**” the **peg end** of the pole into the cylinder on the base.
- Release the elevator so it spins down the pole.

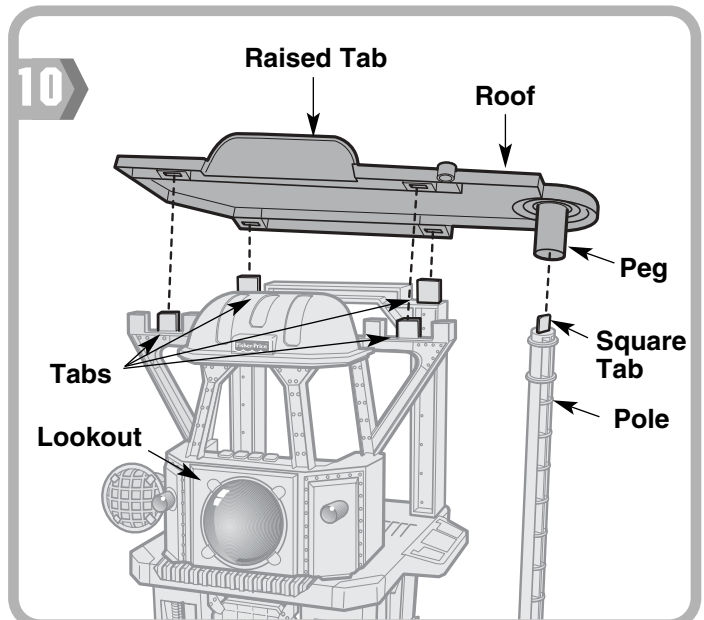


- Position the roof so that the raised tab is facing forward.
- Fit the slots in the roof to the archway and lookout tabs.
- Fit the peg on the underside of the roof over the square tab on the pole.
- Push down on the roof near each tab to secure the roof in place. Pull up on the roof to be sure it is secure.

BUILDING THE COMMAND CENTER™

TO THE RESCUE!




11

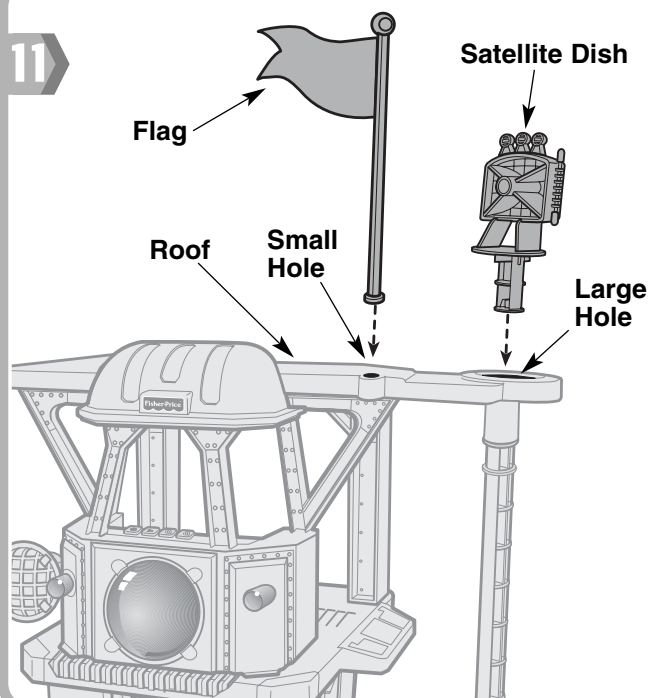


- Insert and **“snap”** the flag into the small hole in the roof.
- Fit the satellite dish into the large hole in the roof and onto the square tab on the pole. Push down on the satellite dish to **“snap”** it into place.

12

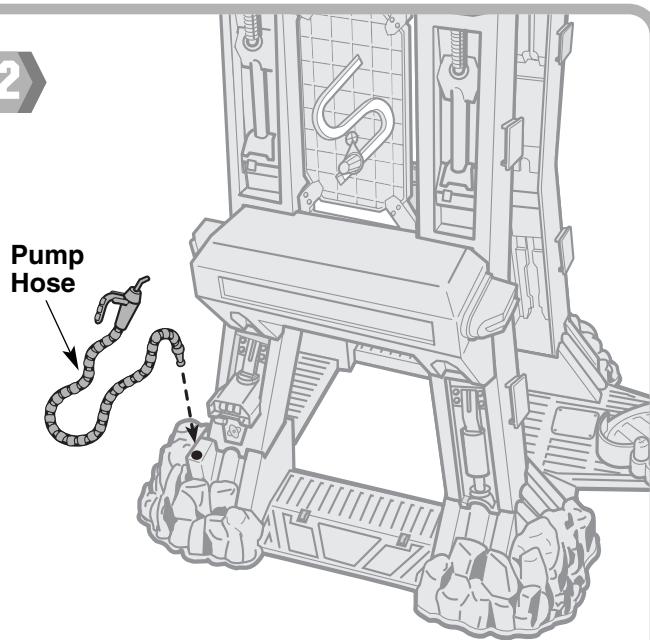

- Insert and **“snap”** the pump hose into the hole in the base, as shown.

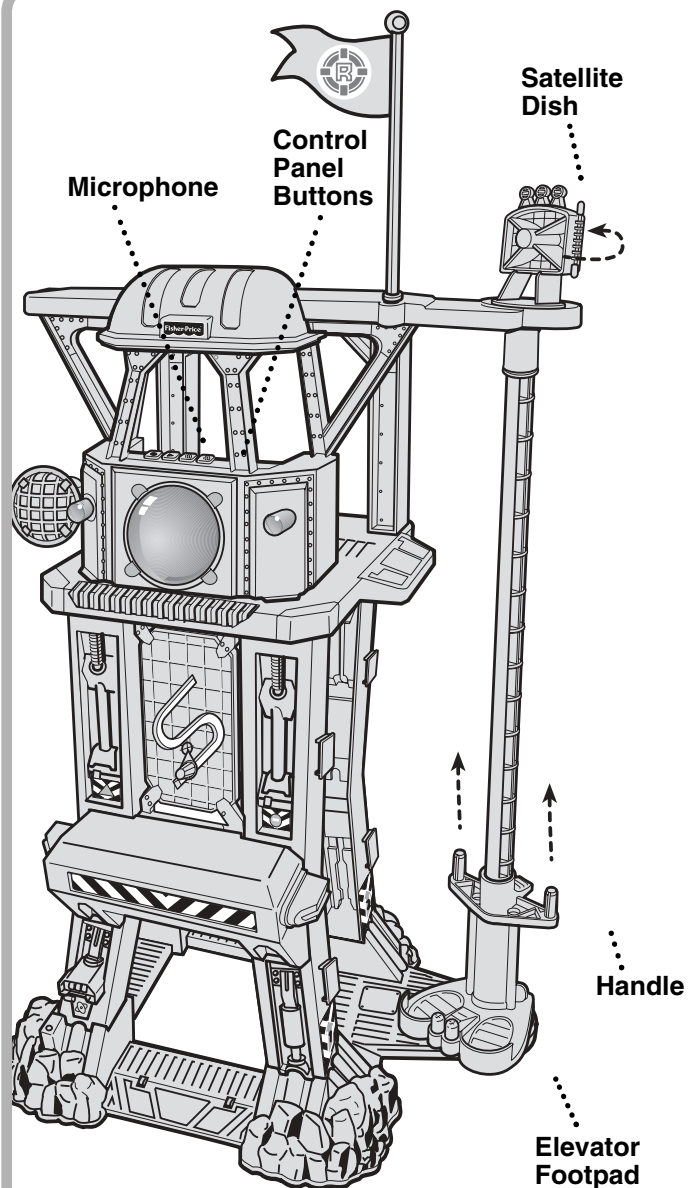

- Press any of the buttons on the control panel:
 - ● and speak into the microphone to record rescue instructions.
 - ► to play back the rescue instructions.
 - 🔊 to hear the siren.
 - 🔊 to hear the siren and see the lights flash!
- Place a Rescue Heroes™ figure on the elevator footpad. Lift the handle to go up. Let go of the handle so your Rescue Heroes™ figure spins down the pole and the satellite dish turns!

CARE

- To clean, wipe the surface of this toy with a damp cloth. Do not immerse this toy.
- This toy has no consumer serviceable parts. Please do not take this toy apart.

FCC STATEMENT (UNITED STATES ONLY)

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

CONSUMER INFORMATION

Questions? We'd like to hear from you!

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-KIDS**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Or, write to: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

For other countries, outside the United States:

CANADA: Questions? 1-800-567-7724. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2.

GREAT BRITAIN: Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB. Helpline: 01628 500302.

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.

LOOK FOR THE MISSION SELECT™ TEAM! (SOLD SEPARATELY)



**Mission Select™
Billy Blazes™
B2093**



**Mission Select™
Police Cruiser
B3056**



**Mission Select™
Rescue Firetruck
B5732**